

# **GENERIC POWERTRAIN CODES**

Compiled by DBDCodeX



Codes	Definition
P0000	ISO/SAE Reserved (no valid description)
P0001	Fuel Volume Regulator Control Circuit/Open
P0002	Fuel Volume Regulator Control Circuit Range/Performance
P0003	Fuel Volume Regulator Control Circuit Low
P0004	Fuel Volume Regulator Control Circuit High
P0005	Fuel Shutoff Valve "A" Control Circuit/Open
P0006	Fuel Shutoff Valve "A" Control Circuit Low
P0007	Fuel Shutoff Valve "A" Control Circuit High
P0008	Engine Positions System Performance Bank 1
P0009	Engine Positions System Performance Bank 2
<b>P000A</b>	A Camshaft Position Slow Response Bank 1
P000B	B Camshaft Position Slow Response Bank 1
	A Camshaft Position Slow Response Bank 2
	B Camshaft Position Slow Response Bank 2
	Fuel Volume Regulator Control Exceeded Learning Limit
	Fuel System Over Pressure Relief Valve Activated
P0010	"A" Camshaft Position Actuator Circuit (Bank 1)
P0011	"A" Camshaft Position - Timing Over-Advanced or System Performance (Bank 1)
P0012	"A" Camshaft Position - Timing Over-Retarded (Bank 1)
P0013	"B" Camshaft Position Actuator Circuit (Bank 1)
P0014	"B" Camshaft Position - Timing Over-Advanced or System Performance (Bank
	1)
	"B" Camshaft Position - Timing Over-Retarded (Bank 1)
	Crankshaft Position - Camshaft Position Correlation (Bank 1 Sensor A)
	Crankshaft Position - Camshaft Position Correlation (Bank 1 Sensor B)
	Crankshaft Position - Camshaft Position Correlation (Bank 2 Sensor A)
	Crankshaft Position - Camshaft Position Correlation (Bank 2 Sensor B)
	A Camshaft Profile Control Circuit/Open Bank 1
	A Camshaft Profile Control Circuit Low Bank 1
	A Camshaft Profile Control Circuit High Bank 1
	A Camshaft Profile Control Circuit/Open Bank 2 A Camshaft Profile Control Circuit Low Bank 2
	A Camshaft Profile Control Circuit High Bank 2 "B" Camshaft Position Actuator Circuit (Bank 2)
F0020	"A" Camshaft Position - Timing Over-Advanced or System Performance (Bank
P0021	2)
	"A" Camshaft Position - Timing Over-Retarded (Bank 2)
P0023	"B" Camshaft Position Actuator Circuit (Bank 2)
P0024	"B" Camshaft Position - Timing Over-Advanced or System Performance (Bank 2)
P0025	"B" Camshaft Position - Timing Over-Retarded (Bank 2)
P0026	Intake Valve Control Solenoid Circuit Range/Performance Bank 1
P0027	Exhaust Valve Control Solenoid Circuit Range/Performance Bank 1
P0028	Intake Valve Control Solenoid Circuit Range/Performance Bank 2



Codes	Definition
P0029	Exhaust Valve Control Solenoid Circuit Range/Performance Bank 2
P002A	B Camshaft Profile Control Circuit/Open Bank 1
P002B	B Camshaft Profile Control Circuit Low Bank 1
<b>P002C</b>	B Camshaft Profile Control Circuit High Bank 1
P002D	B Camshaft Profile Control Circuit/Open Bank 2
<b>P002E</b>	B Camshaft Profile Control Circuit Low Bank 2
P002F	B Camshaft Profile Control Circuit High Bank 2
P0030	HO2S Heater Control Circuit (Bank 1 Sensor 1)
P0031	Oxygen (A/F) Sensor Heater Control Circuit Low (Bank 1 Sensor 1)
P0032	Oxygen (A/F) Sensor Heater Control Circuit High (Bank 1 Sensor 1)
P0033	Turbo Charger Bypass Valve Control Circuit
P0034	Turbo Charger Bypass Valve Control Circuit Low
P0035	Turbo Charger Bypass Valve Control Circuit High
P0036	HO2S Heater Control Circuit (Bank 1 Sensor 2)
P0037	HO2S Heater Control Circuit Low (Bank 1 Sensor 2)
P0038	HO2S Heater Control Circuit High (Bank 1 Sensor 2)
P0039	Turbo Charger Bypass Valve Control Circuit Range Performance
P003A	Turbocharger/Supercharger Boost Control A Position Exceeded Learning Limit
P003B	Turbocharger/Supercharger Boost Control B Position Exceeded Learning Limit
<b>P003C</b>	A Camshaft Profile Control Circuit Performance/Stuck Off Bank 1
P003D	A Camshaft Profile Control Circuit Stuck On Bank 1
	A Camshaft Profile Control Circuit Performance/Stuck Off Bank 2
P003F	A Camshaft Profile Control Circuit Stuck On Bank 2
P0040	O2 Sensor Signals Swapped Bank 1 Sensor 1 / Bank 2 Sensor 1
	O2 Sensor Signals Swapped Bank 1 Sensor 2 / Bank 2 Sensor 2
	HO2S Heater Control Circuit (Bank 1 Sensor 3)
	HO2S Heater Control Circuit Low (Bank 1 Sensor 3)
	HO2S Heater Control Circuit High (Bank 1 Sensor 3)
	Turbocharger/Supercharger Boost Control "A" Circuit Open
	Turbocharger/Supercharger Boost Control "A" Circuit Range Performance
	Turbocharger/Supercharger Boost Control "A" Circuit Low
	Turbocharger/Supercharger Boost Control "A" Circuit High
	Turbocharger/Supercharger Turbine Overspeed
	Turbocharger/Supercharger Boost Control "B" Circuit Open
	Turbocharger/Supercharger Boost Control "B" Circuit Range Performance
	Turbocharger/Supercharger Boost Control "B" Circuit Low
	Turbocharger/Supercharger Boost Control "B" Circuit High
	Turbocharger/Supercharger Boost Control "A" Circuit Intermittent/Erratic
	Turbocharger/Supercharger Boost Control "B" Circuit Intermittent/Erratic
	HO2S Heater Control Circuit (Bank 2 Sensor 1)
	Oxygen (A/F) Sensor Heater Control Circuit Low (Bank 2 Sensor 1)
r0032	Oxygen (A/F) Sensor Heater Control Circuit High (Bank 2 Sensor 1)



Codes Definition **P0053** HO2S Heater Resistance (Bank 1 Sensor 1) **P0054** HO2S Heater Resistance (Bank 1 Sensor 2) P0055 HO2S Heater Resistance (Bank 1 Sensor 3) **P0056** HO2S Heater Control Circuit (Bank 2 Sensor 2) P0057 HO2S Heater Control Circuit Low (Bank 2 Sensor 2) **P0058** HO2S Heater Control Circuit High (Bank 2 Sensor 2) **P0059** HO2S Heater Resistance (Bank 2 Sensor 1) **P005A** B Camshaft Profile Control Circuit Performance/Stuck Off Bank 1 P005B B Camshaft Profile Control Circuit Stuck On Bank 1 **P005C** B Camshaft Profile Control Circuit Performance/Stuck Off Bank 2 P005D B Camshaft Profile Control Circuit Stuck On Bank 2 **P005E** Turbocharger/Supercharger Boost Control B Supply Voltage Circuit Low **P005F** Turbocharger/Supercharger Boost Control B Supply Voltage Circuit High **P0060** HO2S Heater Resistance (Bank 2 Sensor 2) **P0061** HO2S Heater Resistance (Bank 2 Sensor 3) **P0062** HO2S Heater Control Circuit (Bank 2 Sensor 3) P0063 HO2S Heater Control Circuit Low (Bank 2 Sensor 3) **P0064** HO2S Heater Control Circuit High (Bank 2 Sensor 3) P0065 Air Assisted Injector Control Range/Performance **P0066** Air Assisted Injector Control Circuit Or Circuit Low **P0067** Air Assisted Injector Control Circuit High P0068 MAP/MAF - Throttle Position Correlation **P0069** Manifold Absolute Pressure - Barometric Pressure Correlation P006A MAP - Mass or Volume Air Flow Correlation Bank 1 **P006B** MAP - Exhaust Pressure Correlation **P006C** MAP - Turbocharger/Supercharger Inlet Pressure Correlation **P006D** Barometric Pressure - Turbocharger/Supercharger Inlet Pressure Correlation **P006E** Turbocharger/Supercharger Boost Control A Supply Voltage Circuit Low **P006F** Turbocharger/Supercharger Boost Control A Supply Voltage Circuit High **P0070** Ambient Air Temperature Sensor Circuit P0071 Ambient Air Temperature Sensor Performance **P0072** Ambient Air Temperature Sensor Circuit Low **P0073** Ambient Air Temperature Sensor Circuit High **P0074** Ambient Air Temperature Sensor Circuit Intermittent **P0075** Intake Valve Control Solenoid Circuit (Bank 1) **P0076** Intake Valve Control Solenoid Circuit Low (Bank 1) **P0077** Intake Valve Control Solenoid Circuit High (Bank 1) **P0078** Exhaust Valve Control Solenoid Circuit (Bank 1) **P0079** Exhaust Valve Control Solenoid Circuit Low (Bank 1) **P007A** Charge Air Cooler Temperature Sensor Circuit Bank 1 **P007B** Charge Air Cooler Temperature Sensor Circuit Range/Performance Bank 1 **P007C** Charge Air Cooler Temperature Sensor Circuit Low Bank 1 **P007D** Charge Air Cooler Temperature Sensor Circuit High Bank 1



Codes Definition **P007E** Charge Air Cooler Temperature Sensor Circuit Intermittent Bank 1 **P007F** Charge Air Cooler Temperature Sensor Bank1/Bank2 Correlation **P0080** Exhaust Valve Control Solenoid Circuit High (Bank 1) **P0081** Intake Valve Control Solenoid Circuit (Bank 2) **P0082** Intake Valve Control Solenoid Circuit Low (Bank 2) **P0083** Exhaust Valve Control Solenoid Circuit High (Bank 2) **P0084** Exhaust Valve Control Solenoid Circuit (Bank 2) **P0085** Exhaust Valve Control Solenoid Circuit Low (Bank 2) **P0086** Exhaust Valve Control Solenoid Circuit High (Bank 2) P0087 Fuel Rail/System Pressure - Too Low P0088 Fuel Rail/System Pressure - Too High **P0089** Fuel Pressure Regulator 1 Performance P008A Low Pressure Fuel System Pressure - Too Low P008B Low Pressure Fuel System Pressure - Too High P008C Fuel Cooler Pump Control Circuit Open **P008D** Fuel Cooler Pump Control Circuit Low P008E Fuel Cooler Pump Control Circuit High **P008F** Engine Coolant Temperature/Fuel Temperature Correlation **P0090** Fuel Pressure Regulator 1 Control Circuit Open P0091 Fuel Pressure Regulator 1 Control Circuit Low **P0092** Fuel Pressure Regulator 1 Control Circuit High P0093 Fuel System Large Leak Detected P0094 Fuel System Leak Detected - Small Leak **P0095** Intake Air Temperature Sensor 2 Circuit Malfunction **P0096** Intake Air Temperature (IAT) Sensor 2 Circuit Range/Performance **P0097** Intake Air Temperature Sensor 2 Circuit Low Input **P0098** Intake Air Temperature Sensor 2 Circuit High P0099 Intake Air Temperature Sensor 2 Circuit Intermittent **P009A** Intake Air Temperature/Ambient Air Temperature Correlation **P009B** Fuel Pressure Relief Control Circuit/Open **P009C** Fuel Pressure Relief Control Circuit Low **P009D** Fuel Pressure Relief Control Circuit High **P009E** Fuel Pressure Relief Control Circuit Performance/Stuck Off **P009F** Fuel Pressure Relief Control Circuit Stuck On **P00A0** Charge Air Cooler Temperature Sensor Circuit Bank 2 **P00A1** Charge Air Cooler Temperature Sensor Circuit Range Performance Bank 2 **P00A2** Charge Air Cooler Temperature Sensor Circuit Low Bank 2 **P00A3** Charge Air Cooler Temperature Sensor Circuit Low Bank 2 P00A4 Charge Air Cooler Temperature Sensor Circuit Intermittent/Erratic Bank 2 **P00A5** Intake Air Temperature Sensor 2 Circuit Malfunction Bank 2 P00A6 Intake Air Temperature (IAT) Sensor 2 Circuit Range/Performance Bank 2 P00A7 Intake Air Temperature Sensor 2 Circuit Low Input Bank 2 **P00A8** Intake Air Temperature Sensor 2 Circuit High Bank 2 P00A9 Intake Air Temperature Sensor 2 Circuit Intermittent Bank 2



Codes Definition **POOAA** Intake Air Temperature Sensor 1 Circuit Malfunction Bank 2 **P00AB** Intake Air Temperature (IAT) Sensor 1 Circuit Range/Performance Bank 2 **POOAC** Intake Air Temperature Sensor 1 Circuit Low Input Bank 2 **POOAD** Intake Air Temperature Sensor 1 Circuit High Bank 2 **POOAE** Intake Air Temperature Sensor 1 Circuit Intermittent Bank 2 **P00AF** Turbocharger/Supercharger Boost Control A Module Performance **P00B0** Turbocharger/Supercharger Boost Control B Module Performance **P00B1** Radiator Coolant Temperature Sensor Circuit **P00B2** Radiator Coolant Temperature Sensor Circuit Range/Performance POOB3 Radiator Coolant Temperature Sensor Circuit Low **P00B4** Radiator Coolant Temperature Sensor Circuit High **P00B5** Radiator Coolant Temperature Sensor Circuit Intermittent **P00B6** Radiator Coolant Temperature/Engine Coolant Temperature Correlation **P00B7** Engine Coolant Flow Low/Performance POOB8 MAP - Mass or Volume Air Flow Correlation Bank 2 P00B9 Low Pressure Fuel System Pressure - Too Low, Low Ambient Temperature POOBA Low Fuel Pressure - Forced Limited Power **POOBB** Fuel Injector Insufficient Flow - Forced Limited Power POOBC Mass or Volume Air Flow "A" Circuit Range/Performance - Air Flow Too Low POOBD Mass or Volume Air Flow "A" Circuit Range/Performance - Air Flow Too High POOBE Mass or Volume Air Flow "B" Circuit Range/Performance - Air Flow Too Low **POOBF** Mass or Volume Air Flow "B" Circuit Range/Performance - Air Flow Too High **P00C0** ISO/SAE Reserved P00C1 ISO/SAE Reserved POOC2 ISO/SAE Reserved P00C3 ISO/SAE Reserved P00C4 ISO/SAE Reserved P00C5 ISO/SAE Reserved P00C6 ISO/SAE Reserved P00C7 ISO/SAE Reserved P00C8 ISO/SAE Reserved **P00C9** ISO/SAE Reserved **POOCA** ISO/SAE Reserved **POOCB** ISO/SAE Reserved **POOCC** ISO/SAE Reserved **POOCD** ISO/SAE Reserved **POOCE** ISO/SAE Reserved **POOCF** ISO/SAE Reserved P00D0 ISO/SAE Reserved P00D1 ISO/SAE Reserved P00D2 ISO/SAE Reserved P00D3 ISO/SAE Reserved **P00D4** ISO/SAE Reserved P00D5 ISO/SAE Reserved



Codes P00D6 ISO/SAE Reserved **P00D7** ISO/SAE Reserved P00D8 ISO/SAE Reserved **P00D9** ISO/SAE Reserved **POODA** ISO/SAE Reserved **POODB** ISO/SAE Reserved **POODC** ISO/SAE Reserved **POODD** ISO/SAE Reserved **POODE** ISO/SAE Reserved **POODF** ISO/SAE Reserved POOEO ISO/SAE Reserved POOE1 ISO/SAE Reserved POOE2 ISO/SAE Reserved PO0E3 ISO/SAE Reserved PO0E4 ISO/SAE Reserved PO0E5 ISO/SAE Reserved POOE6 ISO/SAE Reserved PO0E7 ISO/SAE Reserved POOE8 ISO/SAE Reserved **P00E9** ISO/SAE Reserved **POOEA** ISO/SAE Reserved **POOEB** ISO/SAE Reserved **POOEC** ISO/SAE Reserved **POOED** ISO/SAE Reserved **POOEE** ISO/SAE Reserved **POOEF** ISO/SAE Reserved P00F0 ISO/SAE Reserved P00F1 ISO/SAE Reserved P00F2 ISO/SAE Reserved P00F3 ISO/SAE Reserved P00F4 ISO/SAE Reserved P00F5 ISO/SAE Reserved P00F6 ISO/SAE Reserved P00F7 ISO/SAE Reserved POOF8 ISO/SAE Reserved P00F9 ISO/SAE Reserved **POOFA** ISO/SAE Reserved POOFB ISO/SAE Reserved POOFC ISO/SAE Reserved **POOFD** ISO/SAE Reserved **POOFE** ISO/SAE Reserved **POOFF** ISO/SAE Reserved P0100 Mass or Volume Air Flow (MAF) Circuit Malfunction P0101 Mass Air Flow (MAF) Circuit Range/Performance

## Definition



Codes	Definition
P0102	Mass or Volume Air Flow Circuit Low
P0103	Mass or Volume Air Flow Circuit High
P0104	Mass or Volume Air Flow Circuit Intermittent/Erratic
P0105	Manifold Absolute Pressure/Barometric Pressure Circuit Malfunction
P0106	Manifold Absolute Pressure/Barometric Pressure Circuit Range/Performance Problem
P0107	Manifold Absolute Pressure/Barometric Pressure Circuit Low Input
P0108	Manifold Absolute Pressure/Barometric Pressure Circuit High Input
P0109	Manifold Absolute Pressure/Barometric Pressure Circuit Intermittent
P010A	Mass or Volume Air Flow "B" Circuit Malfunction
P010B	Mass Air Flow (MAF) "B" Circuit Range/Performance
<b>P010C</b>	Mass or Volume Air Flow "B" Circuit Low
P010D	Mass or Volume Air Flow "B" Circuit High
	Mass or Volume Air Flow "B" Circuit Intermittent/Erratic
P010F	Mass or Volume Air Flow Sensor A/B Correlation
	Intake Air Temperature Sensor 1 Circuit Malfunction
P0111	Intake Air Temperature (IAT) Sensor 1 Circuit Range/Performance
	Intake Air Temperature Sensor 1 Circuit Low Input
	Intake Air Temperature Sensor 1 Circuit High Input
	Intake Air Temperature Sensor 1 Circuit Intermittent
	Engine Coolant Temperature Sensor Circuit Malfunction
	Engine Coolant Temperature (ECT) Sensor Circuit Range/Performance
	Engine Coolant Temperature (ECT) Sensor Circuit Low Input
	Engine Coolant Temperature Sensor Circuit High Input
	Engine Coolant Temperature Sensor Circuit Intermittent
	Engine Coolant Temperature Sensor 1/2 Correlation
	Engine Coolant Temperature/Intake Air Temperature Correlation
	Charge Air Temperature/Intake Air Temperature Correlation Bank 1
	Charge Air Temperature/Intake Air Temperature Correlation Bank 2
	ISO/SAE Reserved
	ISO/SAE Reserved
	Throttle Position Sensor/Switch (TPS) A Circuit Malfunction
	Throttle Position Sensor/Switch A Circuit Range/Performance Problem
	Throttle Position Sensor/Switch A Circuit Low Input
	Throttle Position Sensor/Switch A Circuit High Input
	Throttle Position Sensor/Switch A Circuit Intermittent
	Insufficient Coolant Temperature For Closed Loop Fuel Control
	Insufficient Coolant Temperature for Stable Operation
P012/	Intake Air Temperature Too High
P0128	Coolant Thermostat (Coolant Temperature Below Thermostat Regulating Temperature)
P0129	Barometric Pressure Too Low
P012A	Turbocharger/Supercharger Inlet Pressure Sensor Circuit (Downstream of throttle valve)



Codes	Definition
P012B	Turbocharger/Supercharger Inlet Pressure Sensor Circuit Range/Performance (Downstream of throttle valve)
P012C	Turbocharger/Supercharger Inlet Pressure Sensor Circuit Low (Downstream of throttle valve)
P012D	Turbocharger/Supercharger Inlet Pressure Sensor Circuit High (Downstream Of Throttle Valve)
<b>P012E</b>	Turbocharger/Supercharger Inlet Pressure Sensor Circuit Intermittent/Erratic (Downstream of throttle valve)
	ISO/SAE Reserved
	O2 Sensor Circuit Malfunction (Bank 1 Sensor 1)
	Oxygen O2 Sensor Circuit Low Voltage (Bank 1, Sensor 1)
	O2 Oxygen Sensor Circuit High Voltage (Bank1, Sensor1)
	Oxygen Sensor Circuit Slow Response (Bank1, Sensor1)
	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 1)
	Oxygen O2 Sensor Heater Circuit Malfunction (Bank 1, Sensor 1) Oxygen O2 Sensor Circuit Low Voltage (Bank 1, Sensor 2)
	Oxygen O2 Sensor Circuit Low Voltage (Bank 1, Sensor 2)
	O2 Oxygen Sensor Circuit High Voltage (Bank1, Sensor2)
	Oxygen Sensor Circuit Slow Response (Bank1, Sensor2)
	O2 Sensor Slow Response - Rich to Lean (Bank 1 Sensor 2)
	O2 Sensor Slow Response - Lean to Rich (Bank 1 Sensor 2)
	O2 Sensor Slow Response - Rich to Lean (Bank 2 Sensor 2)
	O2 Sensor Slow Response - Lean to Rich (Bank 2 Sensor 2)
	O2 Sensor Delayed Response - Rich to Lean (Bank 1 Sensor 2)
P013F	O2 Sensor Delayed Response - Lean to Rich (Bank 1 Sensor 2)
P0140	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 2)
P0141	O2 Sensor Heater Circuit Malfunction (Bank 1, Sensor 2)
P0142	O2 Sensor Circuit Malfunction (Bank 1 Sensor 3)
P0143	O2 Sensor Circuit Low Voltage (Bank 1 Sensor 3)
P0144	O2 Sensor Circuit High Voltage (Bank 1 Sensor 3)
P0145	O2 Sensor Circuit Slow Response (Bank 1 Sensor 3)
	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 3)
	O2 Sensor Heater Circuit Malfunction (Bank 1 Sensor 3)
	Fuel Delivery Error
	Fuel Timing Error
	O2 Sensor Delayed Response - Rich to Lean (Bank 2 Sensor 2)
	O2 Sensor Delayed Response - Lean to Rich (Bank 2 Sensor 2)
	O2 Sensor Slow Response - Rich to Lean (Bank 1 Sensor 1)
	O2 Sensor Slow Response - Lean to Rich (Bank 1 Sensor 1) O2 Sensor Slow Response - Rich to Lean (Bank 2 Sensor 1)
	-
	O2 Sensor Slow Response - Lean to Rich (Bank 2 Sensor 1) O2 Sensor Circuit Malfunction (Bank 2 Sensor 1)
	Oxygen O2 Sensor Circuit Low Voltage (Bank 2, Sensor 1)
	O2 Sensor Circuit High Voltage (Bank 2 Sensor 1)
	Oxygen Sensor Circuit Slow Response (Bank2, Sensor1)
10100	ongen concer en eur crem norponce (Dunna, concert)



Codes Definition **P0154** O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 1) **P0155** O2 Sensor Heater Circuit Malfunction (Bank 2 Sensor 1) **P0156** O2 Sensor Circuit Malfunction (Bank 2 Sensor 2) **P0157** O2 Sensor Circuit Low Voltage (Bank 2 Sensor 2) **P0158** O2 Sensor Circuit High Voltage (Bank 2 Sensor 2) **P0159** Oxygen Sensor Circuit Slow Response (Bank2, Sensor2) **P015A** O2 Sensor Delayed Response - Rich to Lean (Bank 1 Sensor 1) **P015B** O2 Sensor Delayed Response - Lean to Rich (Bank 1 Sensor 1) **P015C** O2 Sensor Delayed Response - Rich to Lean (Bank 2 Sensor 1) **P015D** O2 Sensor Delayed Response - Lean to Rich (Bank 2 Sensor 1) P015E ISO/SAE Reserved **P015F** ISO/SAE Reserved **P0160** O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 2) **P0161** Oxygen O2 Sensor Circuit Low Voltage (Bank 2, Sensor 2) **P0162** O2 Sensor Circuit Malfunction (Bank 2 Sensor 3) **P0163** O2 Sensor Circuit Low Voltage (Bank 2 Sensor 3) P0164 O2 Sensor Circuit High Voltage (Bank 2 Sensor 3) **P0165** O2 Sensor Circuit Slow Response (Bank 2 Sensor 3) **P0166** O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 3) **P0167** O2 Sensor Heater Circuit Malfunction (Bank 2 Sensor 3) **P0168** Fuel Temperature Too High P0169 Incorrect Fuel Composition P016A ISO/SAE Reserved P016B ISO/SAE Reserved P016C ISO/SAE Reserved **P016D** ISO/SAE Reserved P016E ISO/SAE Reserved **P016F** ISO/SAE Reserved **P0170** Fuel Trim Malfunction (Bank 1) **P0171** System Too Lean (Bank 1) **P0172** System Too Rich (Bank 1) **P0173** Fuel Trim Malfunction (Bank 2) **P0174** System Too Lean (Bank 2) **P0175** System Too Rich (Bank 2) P0176 Fuel Composition Sensor Circuit Malfunction P0177 Fuel Composition Sensor Circuit Range/Performance P0178 Fuel Composition Sensor Circuit Low Input P0179 Fuel Composition Sensor Circuit High Input P017A ISO/SAE Reserved P017B ISO/SAE Reserved P017C ISO/SAE Reserved P017D ISO/SAE Reserved **P017E** ISO/SAE Reserved P017F ISO/SAE Reserved



Codes Definition **P0180** Fuel Temperature Sensor A Circuit Malfunction **P0181** Fuel Temperature Sensor A Circuit Range/Performance **P0182** Fuel Temperature Sensor A Circuit Low Input **P0183** Fuel Temperature Sensor A Circuit High Input P0184 Fuel Temperature Sensor A Circuit Intermittent **P0185** Fuel Temperature Sensor B Circuit Malfunction **P0186** Fuel Temperature Sensor B Circuit Range/Performance **P0187** Fuel Temperature Sensor B Circuit Low Input **P0188** Fuel Temperature Sensor B Circuit High Input **P0189** Fuel Temperature Sensor B Circuit Intermittent **P018A** Fuel Pressure Sensor B Circuit **P018B** Fuel Pressure Sensor B Circuit Range/Performance **P018C** Fuel Pressure Sensor B Circuit Low **P018D** Fuel Pressure Sensor B Circuit High P018E Fuel Pressure Sensor B Circuit Intermittent/Erratic **P018F** Fuel System Over Pressure Relief Valve Frequent Activation P0190 Fuel Rail Pressure Sensor "A" Circuit P0191 Fuel Rail Pressure Sensor "A" Circuit Range/Performance P0192 Fuel Rail Pressure Sensor "A" Circuit Low P0193 Fuel Rail Pressure Sensor "A" Circuit High P0194 Fuel Rail Pressure Sensor "A" Circuit Intermittent/Erratic P0195 Engine Oil Temperature Sensor Malfunction **P0196** Engine Oil Temperature Sensor Range/Performance **P0197** Engine Oil Temperature Sensor Low **P0198** Engine Oil Temperature Sensor High **P0199** Engine Oil Temperature Sensor Intermittent P019A ISO/SAE Reserved P019B ISO/SAE Reserved P019C ISO/SAE Reserved **P019D** ISO/SAE Reserved **P019E** ISO/SAE Reserved **P019F** ISO/SAE Reserved P01A0 ISO/SAE Reserved P01A1 ISO/SAE Reserved P01A2 ISO/SAE Reserved P01A3 ISO/SAE Reserved P01A4 ISO/SAE Reserved P01A5 ISO/SAE Reserved P01A6 ISO/SAE Reserved P01A7 ISO/SAE Reserved P01A8 ISO/SAE Reserved P01A9 ISO/SAE Reserved **P01AA** ISO/SAE Reserved P01AB ISO/SAE Reserved



Codes P01AC ISO/SAE Reserved **P01AD** ISO/SAE Reserved P01AE ISO/SAE Reserved **P01AF** ISO/SAE Reserved P01B0 ISO/SAE Reserved P01B1 ISO/SAE Reserved P01B2 ISO/SAE Reserved **P01B3** ISO/SAE Reserved P01B4 ISO/SAE Reserved **P01B5** ISO/SAE Reserved P01B6 ISO/SAE Reserved P01B7 ISO/SAE Reserved P01B8 ISO/SAE Reserved P01B9 ISO/SAE Reserved P01BA ISO/SAE Reserved P01BB ISO/SAE Reserved P01BC ISO/SAE Reserved **P01BD** ISO/SAE Reserved P01BE ISO/SAE Reserved **P01BF** ISO/SAE Reserved P01C0 ISO/SAE Reserved P01C1 ISO/SAE Reserved P01C2 ISO/SAE Reserved P01C3 ISO/SAE Reserved P01C4 ISO/SAE Reserved P01C5 ISO/SAE Reserved P01C6 ISO/SAE Reserved P01C7 ISO/SAE Reserved P01C8 ISO/SAE Reserved **P01C9** ISO/SAE Reserved **P01CA** ISO/SAE Reserved **P01CB** ISO/SAE Reserved P01CC ISO/SAE Reserved **P01CD** ISO/SAE Reserved **P01CE** ISO/SAE Reserved **P01CF** ISO/SAE Reserved P01D0 ISO/SAE Reserved P01D1 ISO/SAE Reserved P01D2 ISO/SAE Reserved P01D3 ISO/SAE Reserved P01D4 ISO/SAE Reserved P01D5 ISO/SAE Reserved **P01D6** ISO/SAE Reserved P01D7 ISO/SAE Reserved





Codes P01D8 ISO/SAE Reserved **P01D9** ISO/SAE Reserved P01DA ISO/SAE Reserved **P01DB** ISO/SAE Reserved **P01DC** ISO/SAE Reserved **P01DD** ISO/SAE Reserved P01DE ISO/SAE Reserved **P01DF** ISO/SAE Reserved P01E0 ISO/SAE Reserved **P01E1** ISO/SAE Reserved P01E2 ISO/SAE Reserved P01E3 ISO/SAE Reserved P01E4 ISO/SAE Reserved P01E5 ISO/SAE Reserved P01E6 ISO/SAE Reserved P01E7 ISO/SAE Reserved P01E8 ISO/SAE Reserved P01E9 ISO/SAE Reserved P01EA ISO/SAE Reserved **P01EB** ISO/SAE Reserved **P01EC** ISO/SAE Reserved **P01ED** ISO/SAE Reserved P01EE ISO/SAE Reserved **P01EF** ISO/SAE Reserved P01F0 ISO/SAE Reserved P01F1 ISO/SAE Reserved P01F2 ISO/SAE Reserved P01F3 ISO/SAE Reserved P01F4 ISO/SAE Reserved P01F5 ISO/SAE Reserved P01F6 ISO/SAE Reserved P01F7 ISO/SAE Reserved P01F8 ISO/SAE Reserved P01F9 ISO/SAE Reserved P01FA ISO/SAE Reserved P01FB ISO/SAE Reserved **P01FC** ISO/SAE Reserved P01FD ISO/SAE Reserved P01FE ISO/SAE Reserved P01FF ISO/SAE Reserved **P0200** Injector Circuit Malfunction P0201 Cylinder 1 Injector Circuit Malfunction P0202 Cylinder 2 Injector Circuit Malfunction P0203 Cylinder 3 Injector Circuit Malfunction

# Definition



Codes Definition P0204 Cylinder 4 Injector Circuit Malfunction P0205 Cylinder 5 Injector Circuit Malfunction P0206 Cylinder 6 Injector Circuit Malfunction P0207 Cylinder 7 Injector Circuit Malfunction P0208 Cylinder 8 Injector Circuit Malfunction P0209 Cylinder 9 Injector Circuit Malfunction **P020A** Cylinder 1 Injection Timing **P020B** Cylinder 2 Injection Timing **P020C** Cylinder 3 Injection Timing **P020D** Cylinder 4 Injection Timing **P020E** Cylinder 5 Injection Timing **P020F** Cylinder 6 Injection Timing P0210 Cylinder 10 Injector Circuit Malfunction P0211 Cylinder 11 Injector Circuit Malfunction P0212 Cylinder 12 Injector Circuit Malfunction P0213 Cold Start Injector 1 Malfunction P0214 Cold Start Injector 2 Malfunction P0215 Engine Shutoff Solenoid Malfunction P0216 Injection Timing Control Circuit Malfunction P0217 Engine Overtemp Condition P0218 Transmission Over Temperature Condition **P0219** Engine Overspeed Condition **P021A** Cylinder 7 Injection Timing **P021B** Cylinder 8 Injection Timing **P021C** Cylinder 9 Injection Timing **P021D** Cylinder 10 Injection Timing **P021E** Cylinder 11 Injection Timing **P021F** Cylinder 12 Injection Timing P0220 Throttle Position Sensor/Switch (TPS) B Circuit Malfunction **P0221** Throttle Position Sensor/Switch B Circuit Range/Performance **P0222** Throttle Position Sensor/Switch B Circuit Low Input P0223 Throttle Position Sensor/Switch B Circuit High Input P0224 Throttle Position Sensor/Switch B Circuit Intermittent P0225 Throttle Position Sensor/Switch (TPS) C Circuit Malfunction P0226 Throttle Position Sensor/Switch C Circuit Range/Performance P0227 Throttle Position Sensor/Switch C Circuit Low Input **P0228** Throttle Position Sensor/Switch C Circuit High Input P0229 Throttle Position Sensor/Switch C Circuit Intermittent P022A Charge Air Cooler Bypass Control A Circuit Open **P022B** Charge Air Cooler Bypass Control A Circuit Low **P022C** Charge Air Cooler Bypass Control A Circuit High **P022D** Charge Air Cooler Bypass Control B Circuit Open **P022E** Charge Air Cooler Bypass Control B Circuit Low P022F Charge Air Cooler Bypass Control B Circuit High



<ul> <li>P0230 Fuel Pump Primary (Control) Circuit Malfunction</li> <li>P0231 Fuel Pump Secondary (Feedback) Circuit Low Voltage</li> <li>P0233 Fuel Pump Secondary (Feedback) Circuit High Voltage</li> <li>P0233 Turbocharger 8005 Sensor A Circuit Malfunction</li> <li>P0235 Turbocharger Boost Sensor A Range/Performance</li> <li>P0236 Turbocharger/Supercharger Boost Sensor "A" Circuit Low</li> <li>P0237 Turbocharger/Supercharger Boost Sensor "A" Circuit High</li> <li>P0238 Turbocharger Soust Sensor Sensor "A" Circuit High</li> <li>P0239 Turbocharger Boost Sensor Sensor "A" Circuit High</li> <li>P0230 Charge Air Cooler Coolant Pump Control Circuit Open</li> <li>P0231 Charge Air Cooler Coolant Pump Control Circuit Malfunction</li> <li>P0233 Charge Air Cooler Coolant Pump Control Circuit Low</li> <li>P0233 Charge Air Cooler Coolant Pump Control Circuit Malfunction</li> <li>P0234 Charge Air Cooler Coolant Pump Control Circuit Malfunction</li> <li>P0235 Charge Air Cooler Coolant Pump Control Circuit Low</li> <li>P0236 Charge Air Cooler Coolant Pump Control Circuit Malfunction</li> <li>P0237 Curelation</li> <li>P0238 Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A Correlation</li> <li>P0240 Turbocharger Boost Sensor B Range/Performance</li> <li>P0241 Turbocharger Mastegate Solenoid A Malfunction</li> <li>P0243 Turbocharger Wastegate Solenoid A Malfunction</li> <li>P0244 Turbocharger Wastegate Solenoid A Malfunction</li> <li>P0245 Turbocharger Wastegate Solenoid A Malfunction</li> <li>P0246 Turbocharger Wastegate Solenoid A Malfunction</li> <li>P0247 Turbocharger Wastegate Solenoid B Malfunction</li> <li>P0248 Turbocharger Wastegate Solenoid B Malfunction</li> <li>P0249 Turbocharger Wastegate Solenoid B Malfunction</li> <li>P0249 Turbocharger Wastegate Solenoid B Malfunction</li> <li>P0249 Turbocharger Wastegate Solenoid B Malfunction</li> <li>P0240 Charge Air Cooler Bypass Positio</li></ul>	Codes	Definition
P0232Fuel Pump Secondary (Feedback) Circuit High VoltageP0233Fuel Pump Secondary Circuit IntermittentP0234Turbo/Supercharger "A" Overboost ConditionP0235Turbocharger Boost Sensor A Circuit MalfunctionP0236Turbocharger Boost Sensor A Range/PerformanceP0237Turbocharger/Supercharger Boost Sensor "A" Circuit LowP0238Turbocharger/Supercharger Boost Sensor "A" Circuit HighP0239Turbocharger/Supercharger Boost Sensor "A" Circuit HighP0230Charge Air Cooler Coolant Pump Control Circuit LowP0231Charge Air Cooler Coolant Pump Control Circuit HighP0232Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A CorrelationP02317Fuel Pump Secondary Circuit/OpenP02318Fuel Pump Secondary Circuit/OpenP02319Turbocharger/Supercharger Boost Sensor "B" Circuit LowP02319Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP02310Turbocharger/Supercharger Boost Sensor "B" Circuit LowP02311Turbocharger Wastegate Solenoid A Range/PerformanceP02312Turbocharger Wastegate Solenoid A Range/PerformanceP02331Turbocharger Wastegate Solenoid A Bange/PerformanceP02342Turbocharger Wastegate Solenoid A Bange/PerformanceP02343Turbocharger Wastegate Solenoid A Bange/PerformanceP02344Turbocharger Wastegate Solenoid B Range/PerformanceP02345Turbocharger Wastegate Solenoid B Range/PerformanceP02346Turbocharger Wastegate Solenoid B LowP02347Turbocharger Wastegate Solenoid	P0230	Fuel Pump Primary (Control) Circuit Malfunction
<ul> <li>P0233 Fuel Pump Secondary Circuit Intermittent</li> <li>P0234 Turbo/Supercharger "A" Overboost Condition</li> <li>P0235 Turbocharger Boost Sensor A Circuit Malfunction</li> <li>P0236 Turbocharger Boost Sensor A Range/Performance</li> <li>P0237 Turbocharger/Supercharger Boost Sensor "A" Circuit Low</li> <li>P0238 Turbocharger/Supercharger Boost Sensor "A" Circuit High</li> <li>P0239 Turbocharger Boost Sensor B Circuit Malfunction</li> <li>P0234 Charge Air Cooler Coolant Pump Control Circuit Open</li> <li>P0235 Charge Air Cooler Coolant Pump Control Circuit Jow</li> <li>P0236 Charge Air Cooler Coolant Pump Control Circuit High</li> <li>P0237 Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A Correlation</li> <li>P0238 Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor B Correlation</li> <li>P0237 Fuel Pump Secondary Circuit/Open</li> <li>P0240 Turbocharger/Supercharger Boost Sensor B" Circuit Low</li> <li>P0241 Turbocharger/Supercharger Boost Sensor B" Circuit Low</li> <li>P0242 Turbocharger/Supercharger Boost Sensor B" Circuit High Input</li> <li>P0243 Turbocharger Wastegate Solenoid A Malfunction</li> <li>P0244 Turbocharger Wastegate Solenoid A Range/Performance</li> <li>P0245 Turbocharger Wastegate Solenoid A Range/Performance</li> <li>P0246 Turbocharger Wastegate Solenoid A Bange/Performance</li> <li>P0247 Turbocharger Wastegate Solenoid A Bange/Performance</li> <li>P0248 Turbocharger Wastegate Solenoid A Bange/Performance</li> <li>P0249 Turbocharger Wastegate Solenoid A Bange/Performance</li> <li>P0249 Turbocharger Wastegate Solenoid B Range/Performance</li> <li>P0249 Turbocharger Wastegate Solenoid B Range/Performance</li> <li>P0249 Turbocharger Wastegate Solenoid B Range/Performance</li> <li>P0249 Charge Air Cooler Bypass Control A Circuit Range/Performance</li> <li>P0240 Charge Air Cooler Bypass Position Sensor A Circuit</li> <li>P0240 Charge Air Cooler Bypass Position Sensor A Circuit Range/Performance</li> <li>P0241 Charge Air Cooler Bypass Position Sensor A</li></ul>	P0231	Fuel Pump Secondary (Feedback) Circuit Low Voltage
P0234Turbo/Supercharger "A" Overboost ConditionP0235Turbocharger Boost Sensor A Circuit MalfunctionP0236Turbocharger Boost Sensor A Range/PerformanceP0237Turbocharger/Supercharger Boost Sensor "A" Circuit LowP0238Turbocharger/Supercharger Boost Sensor "A" Circuit HighP0239Turbocharger Boost Sensor B Circuit MalfunctionP0230Turbocharger Acoler Coolant Pump Control Circuit OpenP0231Charge Air Cooler Coolant Pump Control Circuit HighP0232Charge Air Cooler Coolant Pump Control Circuit HighP0233Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A CorrelationP0234Fuel Pump Secondary Circuit/OpenP0235Fuel Pump Secondary Circuit/OpenP0240Turbocharger Boost Sensor B Range/PerformanceP0241Turbocharger Wastegate Solenoid A MalfunctionP02423Turbocharger Wastegate Solenoid A MalfunctionP0244Turbocharger Wastegate Solenoid A LowP0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid B MalfunctionP0247Turbocharger Wastegate Solenoid B Range/PerformanceP0248Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0249Turbocharger Wastegate Solenoid B Range/PerformanceP02415Turbocharger Wastegate Solenoid B MalfunctionP02426Charge Air Cooler Bypass Position Sensor A CircuitP0247Turbocharger Wastegate Solenoid B LowP0248Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP0249Cha	P0232	Fuel Pump Secondary (Feedback) Circuit High Voltage
P0235Turbocharger Boost Sensor A Circuit MalfunctionP0236Turbocharger, Boost Sensor A Range/PerformanceP0237Turbocharger, Supercharger Boost Sensor "A" Circuit LowP0238Turbocharger, Supercharger Boost Sensor "A" Circuit HighP0239Turbocharger, Boost Sensor B Circuit MalfunctionP0230Charge Air Cooler Coolant Pump Control Circuit LowP0231Charge Air Cooler Coolant Pump Control Circuit HighP02320Charge Air Cooler Coolant Pump Control Circuit HighP02331Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A CorrelationP02342Fuel Pump Secondary Circuit/OpenP02403Turbocharger/Supercharger Boost Sensor B Range/PerformanceP0241Turbocharger/Supercharger Boost Sensor B" Circuit LowP0242Turbocharger Wastegate Solenoid A MalfunctionP02435Turbocharger Wastegate Solenoid A Kange/PerformanceP02446Turbocharger Wastegate Solenoid A LowP02475Turbocharger Wastegate Solenoid A LowP02486Turbocharger Wastegate Solenoid A BalfunctionP02487Turbocharger Wastegate Solenoid B NalfunctionP02488Charge Air Cooler Bypass Control A Circuit Range/PerformanceP02499Turbocharger Wastegate Solenoid B Range/PerformanceP02490Turbocharger Wastegate Solenoid B Range/PerformanceP024916Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP02492Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP02492Charge Air Cooler Bypass Position Sensor A Circuit LowP0	P0233	Fuel Pump Secondary Circuit Intermittent
P0236Turbocharger Boost Sensor A Range/PerformanceP0237Turbocharger/Supercharger Boost Sensor "A" Circuit LowP0238Turbocharger/Supercharger Boost Sensor "A" Circuit HighP0239Turbocharger Boost Sensor B Circuit MalfunctionP02317Turbocharger Boost Sensor B Circuit MalfunctionP02318Charge Air Cooler Coolant Pump Control Circuit LowP02320Charge Air Cooler Coolant Pump Control Circuit HighP02331Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A CorrelationP02345Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor B CorrelationP02347Fuel Pump Secondary Circuit/OpenP0240Turbocharger/Supercharger Boost Sensor B Range/PerformanceP02417Turbocharger/Supercharger Boost Sensor B" Circuit High InputP02428Turbocharger/Supercharger Boost Sensor B" Circuit High InputP0249Turbocharger Wastegate Solenoid A MalfunctionP0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid A KinghP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B MalfunctionP0249Turbocharger Wastegate Solenoid B LowP0240P0246P02418Charge Air Cooler Bypass Control A Circuit Range/PerformanceP02429Turbocharger Wastegate Solenoid B LowP02419Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP02420Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP0248Charge Air Cooler Bypass Posi	P0234	Turbo/Supercharger "A" Overboost Condition
<ul> <li>P0237 Turbocharger/Supercharger Boost Sensor "A" Circuit Low</li> <li>P0238 Turbocharger/Supercharger Boost Sensor "A" Circuit High</li> <li>P0239 Turbocharger Boost Sensor B Circuit Malfunction</li> <li>P0234 Charge Air Cooler Coolant Pump Control Circuit Low</li> <li>P0235 Charge Air Cooler Coolant Pump Control Circuit High</li> <li>P0236 Charge Air Cooler Coolant Pump Control Circuit High</li> <li>P0237 Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A Correlation</li> <li>P0237 Fuel Pump Secondary Circuit/Open</li> <li>P0240 Turbocharger/Supercharger Boost Sensor B Range/Performance</li> <li>P0241 Turbocharger/Supercharger Boost Sensor "B" Circuit Low</li> <li>P0242 Turbocharger/Supercharger Boost Sensor "B" Circuit High Input</li> <li>P0243 Turbocharger Wastegate Solenoid A Malfunction</li> <li>P0244 Turbocharger Wastegate Solenoid A Kange/Performance</li> <li>P0245 Turbocharger Wastegate Solenoid A Low</li> <li>P0246 Turbocharger Wastegate Solenoid A Low</li> <li>P0247 Turbocharger Wastegate Solenoid B Malfunction</li> <li>P0248 Turbocharger Wastegate Solenoid B Malfunction</li> <li>P0249 Turbocharger Wastegate Solenoid B Low</li> <li>P0240 Turbocharger Wastegate Solenoid B Low</li> <li>P0241 Charge Air Cooler Bypass Control A Circuit Range/Performance</li> <li>P0242 Charge Air Cooler Bypass Position Sensor A Circuit</li> <li>P0244 Charge Air Cooler Bypass Position Sensor A Circuit Mange/Performance</li> <li>P0245 P0246 Charge Air Cooler Bypass Position Sensor A Circuit High</li> <li>P0247 Turbocharger Wastegate Solenoid B Low</li> <li>P0248 Charge Air Cooler Bypass Position Sensor A Circuit Range/Performance</li> <li>P0249 P0246 Charge Air Cooler Bypass Position Sensor A Circuit Mange/Performance</li> <li>P0245 P0246 Charge Air Cooler Bypass Position Sensor A Circuit Mange/Performance</li> <li>P0248 Charge Air Cooler Bypass Position Sensor A Circuit Mange/Performanc</li></ul>	P0235	Turbocharger Boost Sensor A Circuit Malfunction
<ul> <li>P0238 Turbocharger/Supercharger Boost Sensor "A" Circuit High</li> <li>P0239 Turbocharger Boost Sensor B Circuit Malfunction</li> <li>P023A Charge Air Cooler Coolant Pump Control Circuit Open</li> <li>P023B Charge Air Cooler Coolant Pump Control Circuit Low</li> <li>P023C Charge Air Cooler Coolant Pump Control Circuit High</li> <li>P023D Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A Correlation</li> <li>P023E Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor B Correlation</li> <li>P023F Fuel Pump Secondary Circuit/Open</li> <li>P0240 Turbocharger Boost Sensor B Range/Performance</li> <li>P0241 Turbocharger/Supercharger Boost Sensor "B" Circuit Low</li> <li>P0242 Turbocharger/Supercharger Boost Sensor "B" Circuit High Input</li> <li>P0243 Turbocharger Wastegate Solenoid A Malfunction</li> <li>P0244 Turbocharger Wastegate Solenoid A Low</li> <li>P0245 Turbocharger Wastegate Solenoid A Low</li> <li>P0246 Turbocharger Wastegate Solenoid A High</li> <li>P0247 Turbocharger Wastegate Solenoid A High</li> <li>P0247 Turbocharger Wastegate Solenoid B Malfunction</li> <li>P0248 Turbocharger Wastegate Solenoid B Malfunction</li> <li>P0244 Turbocharger Wastegate Solenoid B Malfunction</li> <li>P0245 Turbocharger Wastegate Solenoid B Kange/Performance</li> <li>P0246 Charge Air Cooler Bypass Control A Circuit Range/Performance</li> <li>P0247 Turbocharger Wastegate Solenoid B Low</li> <li>P0248 Charge Air Cooler Bypass Position Sensor A Circuit</li> <li>P0249 Charge Air Cooler Bypass Position Sensor A Circuit Range/Performance</li> <li>P0245 Charge Air Cooler Bypass Position Sensor A Circuit Range/Performance</li> <li>P0246 Charge Air Cooler Bypass Position Sensor A Circuit High</li> <li>P0250 Turbocharger Wastegate Solenoid B High</li> <li>P0251 Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)</li> <li>P0253 Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)</li> <li>P0254 Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)</li></ul>		5
P0239Turbocharger Boost Sensor B Circuit MalfunctionP0234Charge Air Cooler Coolant Pump Control Circuit OpenP0238Charge Air Cooler Coolant Pump Control Circuit LowP0230Charge Air Cooler Coolant Pump Control Circuit HighP02310Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A CorrelationP02327Fuel Pump Secondary Circuit/OpenP0238Fuel Pump Secondary Circuit/OpenP0240Turbocharger/Supercharger Boost Sensor B Range/PerformanceP0241Turbocharger/Supercharger Boost Sensor "B" Circuit LowP0242Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0243Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0244Turbocharger Wastegate Solenoid A MalfunctionP0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid B MalfunctionP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B LowP0244Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0245Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0246Charge Air Cooler Bypass Position Sensor A CircuitP0247Charge Air Cooler Bypass Position Sensor A CircuitP0248Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP0249P0246Charge Air Cooler Bypass Position Sensor A CircuitP0249Turbocharger Wastegate Solenoid B LowP0241Charge Air Cooler Bypass Position Sensor A CircuitP0242Charge Air Coole		
P023ACharge Air Cooler Coolant Pump Control Circuit OpenP023BCharge Air Cooler Coolant Pump Control Circuit LowP023CCharge Air Cooler Coolant Pump Control Circuit HighP023BManifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A CorrelationP023FManifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor B CorrelationP023FFuel Pump Secondary Circuit/OpenP0240Turbocharger Boost Sensor B Range/PerformanceP0241Turbocharger/Supercharger Boost Sensor "B" Circuit LowP0242Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0243Turbocharger Wastegate Solenoid A MalfunctionP0244Turbocharger Wastegate Solenoid A Range/PerformanceP0245Turbocharger Wastegate Solenoid A Kange/PerformanceP0246Turbocharger Wastegate Solenoid B MalfunctionP0247Turbocharger Wastegate Solenoid B LowP0248Turbocharger Wastegate Solenoid B LowP0249Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0241Charge Air Cooler Bypass Position Sensor A CircuitP0242Charge Air Cooler Bypass Position Sensor A Circuit LowP0245Turbocharger Wastegate Solenoid B LighP0246Charge Air Cooler Bypass Position Sensor A Circuit HighP0247Disetion Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0248Charge Air Cooler Bypass Position Sensor A Circuit HighP0249Turbocharger Wastegate Solenoid B HighP0241Charge Air Cooler Bypass Position Sensor A Circuit HighP0245 </th <th></th> <th></th>		
P023BCharge Air Cooler Coolant Pump Control Circuit LowP023CCharge Air Cooler Coolant Pump Control Circuit HighP023BManifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A CorrelationP023FManifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor B CorrelationP023FFuel Pump Secondary Circuit/OpenP0240Turbocharger/Supercharger Boost Sensor B Range/PerformanceP0241Turbocharger/Supercharger Boost Sensor "B" Circuit LowP0242Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0243Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0244Turbocharger Wastegate Solenoid A MalfunctionP0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid A LowP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B LowP0249Turbocharger Wastegate Solenoid A Circuit Range/PerformanceP02418Charge Air Cooler Bypass Control A Circuit StuckP0242Charge Air Cooler Bypass Position Sensor A CircuitP0245Charge Air Cooler Bypass Position Sensor A Circuit LowP0246Charge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/PerformanceP0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A Low (Cam		
P023CCharge Air Cooler Coolant Pump Control Circuit High Manifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A CorrelationP023BManifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor B CorrelationP023FFuel Pump Secondary Circuit/OpenP0240Turbocharger Boost Sensor B Range/PerformanceP0241Turbocharger/Supercharger Boost Sensor "B" Circuit LowP0242Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0243Turbocharger Wastegate Solenoid A MalfunctionP0244Turbocharger Wastegate Solenoid A Kange/PerformanceP0245Turbocharger Wastegate Solenoid A Kange/PerformanceP0246Turbocharger Wastegate Solenoid A Kange/PerformanceP0247Turbocharger Wastegate Solenoid A Kange/PerformanceP0248Turbocharger Wastegate Solenoid B MalfunctionP0244Turbocharger Wastegate Solenoid B Sange/PerformanceP0245Turbocharger Wastegate Solenoid B LawP0246Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0247Charge Air Cooler Bypass Position Sensor A CircuitP0248Charge Air Cooler Bypass Position Sensor A Circuit HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Kange/PerformanceP0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0254Injection Pump Fuel Me		· · ·
P023DManifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor A CorrelationP023EManifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor B CorrelationP023FFuel Pump Secondary Circuit/OpenP0240Turbocharger/Supercharger Boost Sensor B Range/PerformanceP0241Turbocharger/Supercharger Boost Sensor "B" Circuit LowP02423Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0244Turbocharger Wastegate Solenoid A MalfunctionP0245Turbocharger Wastegate Solenoid A Kange/PerformanceP0246Turbocharger Wastegate Solenoid A LowP0247Turbocharger Wastegate Solenoid A HighP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B Kange/PerformanceP0249Turbocharger Wastegate Solenoid B LowP0244Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0245Charge Air Cooler Bypass Control A Circuit StuckP0246Charge Air Cooler Bypass Position Sensor A Circuit PoetanceP0247Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP0248Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP0249Turbocharger Wastegate Solenoid B HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Met		<b>·</b>
P023DCorrelationP023EManifold Absolute Pressure - Turbocharger/Supercharger Boost Sensor B CorrelationP023FFuel Pump Secondary Circuit/OpenP0240Turbocharger Boost Sensor B Range/PerformanceP0241Turbocharger/Supercharger Boost Sensor "B" Circuit LowP0242Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0243Turbocharger Wastegate Solenoid A MalfunctionP0244Turbocharger Wastegate Solenoid A Range/PerformanceP0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid A HighP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B Kange/PerformanceP0249Turbocharger Wastegate Solenoid B LowP0244Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0245Charge Air Cooler Bypass Control A Circuit StuckP0246Charge Air Cooler Bypass Position Sensor A Circuit LowP0247Charge Air Cooler Bypass Position Sensor A Circuit LowP0248Charge Air Cooler Bypass Position Sensor A Circuit LowP0249Turbocharger Wastegate Solenoid B HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Ra	P023C	
P023FCorrelationP023FFuel Pump Secondary Circuit/OpenP0240Turbocharger Boost Sensor B Range/PerformanceP0241Turbocharger/Supercharger Boost Sensor "B" Circuit LowP0242Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0243Turbocharger Wastegate Solenoid A MalfunctionP0244Turbocharger Wastegate Solenoid A Range/PerformanceP0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid A HighP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B MalfunctionP0249Turbocharger Wastegate Solenoid B Kange/PerformanceP0249Turbocharger Wastegate Solenoid B Kange/PerformanceP0248Turbocharger Wastegate Solenoid B Circuit Range/PerformanceP0249Turbocharger Wastegate Solenoid A Circuit StuckP0240Charge Air Cooler Bypass Control A Circuit StuckP0241Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP0245Charge Air Cooler Bypass Position Sensor A Circuit LowP0246Charge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Malfu		Correlation
P0240Turbocharger Boost Sensor B Range/PerformanceP0241Turbocharger/Supercharger Boost Sensor "B" Circuit LowP0242Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0243Turbocharger Wastegate Solenoid A MalfunctionP0244Turbocharger Wastegate Solenoid A Range/PerformanceP0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid A HighP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B MalfunctionP0249Turbocharger Wastegate Solenoid B Range/PerformanceP0249Turbocharger Wastegate Solenoid B LowP0244Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0245Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0246Charge Air Cooler Bypass Position Sensor A CircuitP0247Charge Air Cooler Bypass Position Sensor A Circuit LowP0248Charge Air Cooler Bypass Position Sensor A Circuit HighP0249Charge Air Cooler Bypass Position Sensor A Circuit HighP0245Charge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector) <tr< th=""><th>P023E</th><th></th></tr<>	P023E	
P0241Turbocharger/Supercharger Boost Sensor "B" Circuit LowP0242Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0243Turbocharger Wastegate Solenoid A MalfunctionP0244Turbocharger Wastegate Solenoid A Range/PerformanceP0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid A LowP0247Turbocharger Wastegate Solenoid A HighP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B Range/PerformanceP0249Turbocharger Wastegate Solenoid B LowP0244Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0245Charge Air Cooler Bypass Position Sensor A CircuitP0240Charge Air Cooler Bypass Position Sensor A Circuit LowP0241Charge Air Cooler Bypass Position Sensor A Circuit LowP0242Charge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Range/Performance (cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel M	P023F	Fuel Pump Secondary Circuit/Open
P0242Turbocharger/Supercharger Boost Sensor "B" Circuit High InputP0243Turbocharger Wastegate Solenoid A MalfunctionP0244Turbocharger Wastegate Solenoid A Range/PerformanceP0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid A HighP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B MalfunctionP0249Turbocharger Wastegate Solenoid B Kange/PerformanceP0249Turbocharger Wastegate Solenoid B LowP0244Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0245Charge Air Cooler Bypass Position Sensor A CircuitP0246Charge Air Cooler Bypass Position Sensor A Circuit LowP0247Charge Air Cooler Bypass Position Sensor A Circuit HighP0248Charge Air Cooler Bypass Position Sensor A Circuit LowP0249Turbocharger Wastegate Solenoid B HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/Performance (cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering	P0240	Turbocharger Boost Sensor B Range/Performance
P0243Turbocharger Wastegate Solenoid A MalfunctionP0244Turbocharger Wastegate Solenoid A Range/PerformanceP0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid A HighP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B Range/PerformanceP0249Turbocharger Wastegate Solenoid B LowP0244Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0248Charge Air Cooler Bypass Control A Circuit StuckP0240Charge Air Cooler Bypass Position Sensor A CircuitP0241Charge Air Cooler Bypass Position Sensor A Circuit LowP0242Charge Air Cooler Bypass Position Sensor A Circuit LowP0245Turbocharger Wastegate Solenoid B HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection	P0241	Turbocharger/Supercharger Boost Sensor "B" Circuit Low
P0244Turbocharger Wastegate Solenoid A Range/PerformanceP0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid A HighP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B Range/PerformanceP0249Turbocharger Wastegate Solenoid B LowP0240Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0241Charge Air Cooler Bypass Control A Circuit StuckP0242Charge Air Cooler Bypass Position Sensor A CircuitP0244Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP0245Charge Air Cooler Bypass Position Sensor A Circuit LowP0246Charge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/PerformanceP0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0258Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector	P0242	Turbocharger/Supercharger Boost Sensor "B" Circuit High Input
P0245Turbocharger Wastegate Solenoid A LowP0246Turbocharger Wastegate Solenoid A HighP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B Range/PerformanceP0249Turbocharger Wastegate Solenoid B LowP0244Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0248Charge Air Cooler Bypass Control A Circuit StuckP0240Charge Air Cooler Bypass Position Sensor A CircuitP0241Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP0242Charge Air Cooler Bypass Position Sensor A Circuit LowP0245Charge Air Cooler Bypass Position Sensor A Circuit LowP0246Charge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Mal	P0243	Turbocharger Wastegate Solenoid A Malfunction
P0246Turbocharger Wastegate Solenoid A HighP0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B Range/PerformanceP0249Turbocharger Wastegate Solenoid B LowP0240Turbocharger Wastegate Solenoid B LowP0241Charge Air Cooler Bypass Control A Circuit Range/PerformanceP0242Charge Air Cooler Bypass Control A Circuit StuckP0240Charge Air Cooler Bypass Position Sensor A CircuitP0241Charge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP0242Charge Air Cooler Bypass Position Sensor A Circuit LowP0245Charge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Kange/Performance (cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0258Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Meter		
P0247Turbocharger Wastegate Solenoid B MalfunctionP0248Turbocharger Wastegate Solenoid B Range/PerformanceP0249Turbocharger Wastegate Solenoid B LowP024ACharge Air Cooler Bypass Control A Circuit Range/PerformanceP024BCharge Air Cooler Bypass Control A Circuit StuckP024CCharge Air Cooler Bypass Position Sensor A CircuitP024DCharge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP024ECharge Air Cooler Bypass Position Sensor A Circuit LowP024FCharge Air Cooler Bypass Position Sensor A Circuit LowP024FCharge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0258Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0259Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Inject		
P0248Turbocharger Wastegate Solenoid B Range/PerformanceP0249Turbocharger Wastegate Solenoid B LowP024ACharge Air Cooler Bypass Control A Circuit Range/PerformanceP024BCharge Air Cooler Bypass Control A Circuit StuckP024CCharge Air Cooler Bypass Position Sensor A CircuitP024BCharge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP024ECharge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP024FCharge Air Cooler Bypass Position Sensor A Circuit LowP024FCharge Air Cooler Bypass Position Sensor A Circuit LowP024FCharge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)		
P0249Turbocharger Wastegate Solenoid B LowP024ACharge Air Cooler Bypass Control A Circuit Range/PerformanceP024BCharge Air Cooler Bypass Control A Circuit StuckP024CCharge Air Cooler Bypass Position Sensor A CircuitP024DCharge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP024ECharge Air Cooler Bypass Position Sensor A Circuit LowP024FCharge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)		• •
P024ACharge Air Cooler Bypass Control A Circuit Range/PerformanceP024BCharge Air Cooler Bypass Control A Circuit StuckP024CCharge Air Cooler Bypass Position Sensor A CircuitP024DCharge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP024ECharge Air Cooler Bypass Position Sensor A Circuit LowP024FCharge Air Cooler Bypass Position Sensor A Circuit Hange/PerformanceP024FCharge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (cam/Rotor/Injector)		
P024BCharge Air Cooler Bypass Control A Circuit StuckP024CCharge Air Cooler Bypass Position Sensor A CircuitP024DCharge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP024ECharge Air Cooler Bypass Position Sensor A Circuit LowP024FCharge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)		
P024CCharge Air Cooler Bypass Position Sensor A CircuitP024DCharge Air Cooler Bypass Position Sensor A Circuit Range/PerformanceP024ECharge Air Cooler Bypass Position Sensor A Circuit LowP024FCharge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)		
<ul> <li>P024D Charge Air Cooler Bypass Position Sensor A Circuit Range/Performance</li> <li>P024E Charge Air Cooler Bypass Position Sensor A Circuit Low</li> <li>P024F Charge Air Cooler Bypass Position Sensor A Circuit High</li> <li>P0250 Turbocharger Wastegate Solenoid B High</li> <li>P0251 Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)</li> <li>P0252 Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)</li> <li>P0253 Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)</li> <li>P0254 Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)</li> <li>P0255 Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)</li> <li>P0256 Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)</li> <li>P0257 Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)</li> </ul>		<b>0 1</b>
P024ECharge Air Cooler Bypass Position Sensor A Circuit LowP024FCharge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)		<b>0 1</b>
P024FCharge Air Cooler Bypass Position Sensor A Circuit HighP0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)		
P0250Turbocharger Wastegate Solenoid B HighP0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)		<b>0 1</b>
P0251Injection Pump Fuel Metering Control A Malfunction (Cam/Rotor/Injector)P0252Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)		
P0252Injection Pump Fuel Metering Control A Range/Performance (Cam/Rotor/Injector)P0253Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)P0254Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)P0255Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)P0256Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)P0257Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)		
<ul> <li>P0252 (Cam/Rotor/Injector)</li> <li>P0253 Injection Pump Fuel Metering Control A Low (Cam/Rotor/Injector)</li> <li>P0254 Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)</li> <li>P0255 Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)</li> <li>P0256 Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)</li> <li>P0257 Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)</li> </ul>		
<ul> <li>P0254 Injection Pump Fuel Metering Control A High (Cam/Rotor/Injector)</li> <li>P0255 Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)</li> <li>P0256 Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)</li> <li>P0257 Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)</li> </ul>		(Cam/Rotor/Injector)
<ul> <li>P0255 Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector)</li> <li>P0256 Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)</li> <li>P0257 Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)</li> </ul>		
<ul> <li>P0256 Injection Pump Fuel Metering Control B Malfunction (Cam/Rotor/Injector)</li> <li>P0257 Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)</li> </ul>		
P0257 Injection Pump Fuel Metering Control B Range/Performance (Cam/Rotor/Injector)		
P0257 (Cam/Rotor/Injector)		
-	P0257	· · · ·
	P0258	-



Codes Definition **P0259** Injection Pump Fuel Metering Control B High (Cam/Rotor/Injector) P025A Fuel Pump Module Control Circuit/Open **P025B** Fuel Pump Module Control Range/Performance **P025C** Fuel Pump Module Control Low **P025D** Fuel Pump Module Control High **P025E** ISO/SAE Reserved P025F ISO/SAE Reserved **P0260** Injection Pump Fuel Metering Control B Intermittent (Cam/Rotor/Injector) **P0261** Cylinder #1 Injector Circuit Low **P0262** Cylinder #1 Injector Circuit High P0263 Cylinder 1 Contribution/Balance **P0264** Cylinder #2 Injector Circuit Low **P0265** Cylinder #2 Injector Circuit High P0266 Cylinder 2 Contribution/Balance P0267 Cylinder #3 Injector Circuit Low P0268 Cylinder #3 Injector Circuit High P0269 Cylinder 3 Contribution/Balance P026A ISO/SAE Reserved P026B ISO/SAE Reserved **P026C** ISO/SAE Reserved P026D ISO/SAE Reserved P026E ISO/SAE Reserved P026F ISO/SAE Reserved **P0270** Cylinder #4 Injector Circuit Low **P0271** Cylinder #4 Injector Circuit High **P0272** Cylinder 4 Contribution/Balance P0273 Cylinder #5 Injector Circuit Low P0274 Cylinder #5 Injector Circuit High **P0275** Cylinder 5 Contribution/Balance **P0276** Cylinder #6 Injector Circuit Low **P0277** Cylinder #6 Injector Circuit High P0278 Cylinder 6 Contribution/Balance **P0279** Cylinder #7 Injector Circuit Low P027A ISO/SAE Reserved P027B ISO/SAE Reserved **P027C** ISO/SAE Reserved P027D ISO/SAE Reserved P027E ISO/SAE Reserved P027F ISO/SAE Reserved **P0280** Cylinder #7 Injector Circuit High P0281 Cylinder 7 Contribution/Balance **P0282** Cylinder #8 Injector Circuit Low **P0283** Cylinder #8 Injector Circuit High P0284 Cylinder 8 Contribution/Balance



Codes Definition P0285 Cylinder #9 Injector Circuit Low **P0286** Cylinder #9 Injector Circuit High P0287 Cylinder 9 Contribution/Balance **P0288** Cylinder #10 Injector Circuit Low P0289 Cylinder #10 Injector Circuit High P028A ISO/SAE Reserved P028B ISO/SAE Reserved P028C ISO/SAE Reserved **P028D** ISO/SAE Reserved **P028E** ISO/SAE Reserved P028F ISO/SAE Reserved P0290 Cylinder 10 Contribution/Balance **P0291** Cylinder #11 Injector Circuit Low **P0292** Cylinder #11 Injector Circuit High P0293 Cylinder 11 Contribution/Balance **P0294** Cylinder #12 Injector Circuit Low P0295 Cylinder #12 Injector Circuit High P0296 Cylinder 12 Contribution/Balance P0297 Vehicle Overspeed Condition P0298 Engine Oil Over Temperature Condition P0299 Turbocharger/Supercharger A Underboost Condition P029A Cylinder 1 Fuel Trim at Max Limit P029B Cylinder 1 Fuel Trim at Min Limit **P029C** Cylinder 1 Injector Restricted P029D Cylinder 1 Injector Leaking **P029E** Cylinder 2 Fuel Trim at Max Limit **P029F** Cylinder 2 Fuel Trim at Min Limit P02A0 Cylinder 2 Injector Restricted **P02A1** Cylinder 2 Injector Leaking P02A2 Cylinder 3 Fuel Trim at Max Limit **P02A3** Cylinder 3 Fuel Trim at Min Limit P02A4 Cylinder 3 Injector Restricted P02A5 Cylinder 3 Injector Leaking P02A6 Cylinder 4 Fuel Trim at Max Limit P02A7 Cylinder 4 Fuel Trim at Min Limit P02A8 Cylinder 4 Injector Restricted P02A9 Cylinder 4 Injector Leaking **P02AA** Cylinder 5 Fuel Trim at Max Limit PO2AB Cylinder 5 Fuel Trim at Min Limit **P02AC** Cylinder 5 Injector Restricted **P02AD** Cylinder 5 Injector Leaking **PO2AE** Cylinder 6 Fuel Trim at Max Limit **P02AF** Cylinder 6 Fuel Trim at Min Limit P02B0 Cylinder 6 Injector Restricted



Codes Definition P02B1 Cylinder 6 Injector Leaking P02B2 Cylinder 7 Fuel Trim at Max Limit P02B3 Cylinder 7 Fuel Trim at Min Limit P02B4 Cylinder 7 Injector Restricted P02B5 Cylinder 7 Injector Leaking P02B6 Cylinder 8 Fuel Trim at Max Limit P02B7 Cylinder 8 Fuel Trim at Min Limit P02B8 Cylinder 8 Injector Restricted P02B9 Cylinder 8 Injector Leaking PO2BA Cylinder 9 Fuel Trim at Max Limit **P02BB** Cylinder 9 Fuel Trim at Min Limit **P02BC** Cylinder 9 Injector Restricted **P02BD** Cylinder 9 Injector Leaking **P02BE** Cylinder 10 Fuel Trim at Max Limit **P02BF** Cylinder 10 Fuel Trim at Min Limit P02C0 Cylinder 10 Injector Restricted P02C1 Cylinder 10 Injector Leaking P02C2 Cylinder 11 Fuel Trim at Max Limit **P02C3** Cylinder 11 Fuel Trim at Min Limit P02C4 Cylinder 11 Injector Restricted P02C5 Cylinder 11 Injector Leaking P02C6 Cylinder 12 Fuel Trim at Max Limit P02C7 Cylinder 12 Fuel Trim at Min Limit P02C8 Cylinder 12 Injector Restricted **P02C9** Cylinder 12 Injector Leaking P02CA Turbocharger / Supercharger "B" Overboost Condition **P02CB** Turbocharger/Supercharger B Underboost Condition **P02CC** Cylinder 1 Fuel Injector Offset Learning At Min Limit P02CD Cylinder 1 Fuel Injector Offset Learning At Max Limit **PO2CE** Cylinder 2 Fuel Injector Offset Learning At Min Limit PO2CF Cylinder 2 Fuel Injector Offset Learning At Max Limit **P02D0** Cylinder 3 Fuel Injector Offset Learning At Min Limit P02D1 Cylinder 3 Fuel Injector Offset Learning At Max Limit **P02D2** Cylinder 4 Fuel Injector Offset Learning At Min Limit P02D3 Cylinder 4 Fuel Injector Offset Learning At Max Limit P02D4 Cylinder 5 Fuel Injector Offset Learning At Min Limit P02D5 Cylinder 5 Fuel Injector Offset Learning At Max Limit P02D6 Cylinder 6 Fuel Injector Offset Learning At Min Limit P02D7 Cylinder 6 Fuel Injector Offset Learning At Max Limit P02D8 Cylinder 7 Fuel Injector Offset Learning At Min Limit P02D9 Cylinder 7 Fuel Injector Offset Learning At Max Limit P02DA Cylinder 8 Fuel Injector Offset Learning At Min Limit P02DB Cylinder 8 Fuel Injector Offset Learning At Max Limit P02DC Cylinder 9 Fuel Injector Offset Learning At Min Limit

DBDCodeX

Codes Definition **P02DD** Cylinder 9 Fuel Injector Offset Learning At Max Limit **P02DE** Cylinder 10 Fuel Injector Offset Learning At Min Limit **P02DF** Cylinder 10 Fuel Injector Offset Learning At Max Limit **P02E0** Diesel Intake Air Flow Control Circuit/Open P02E1 Diesel Intake Air Flow Control Performance **P02E2** Diesel Intake Air Flow Control Circuit Low **P02E3** Diesel Intake Air Flow Control Circuit High **P02E4** Diesel Intake Air Flow Control Stuck Open P02E5 Diesel Intake Air Flow Control Stuck Closed P02E6 Diesel Intake Air Flow Position Sensor Circuit P02E7 Diesel Intake Air Flow Position Sensor Circuit Range/Performance P02E8 Diesel Intake Air Flow Position Sensor Circuit Low P02E9 Diesel Intake Air Flow Position Sensor Circuit High **P02EA** Diesel Intake Air Flow Position Sensor Circuit Intermittent/Erratic **P02EB** Diesel Intake Air Flow Control Motor Current Range/Performance **P02EC** Diesel Intake Air Flow Control System - High Air Flow Detected PO2ED Diesel Intake Air Flow Control System - Low Air Flow Detected **P02EE** Cylinder #1 Injector Circuit Range/Performance **P02EF** Cylinder #2 Injector Circuit Range/Performance **P02F0** Cylinder #e Injector Circuit Range/Performance **P02F1** Cylinder #4 Injector Circuit Range/Performance **P02F2** Cylinder #5 Injector Circuit Range/Performance **P02F3** Cylinder #6 Injector Circuit Range/Performance **P02F4** Cylinder #7 Injector Circuit Range/Performance **P02F5** Cylinder #8 Injector Circuit Range/Performance **P02F6** Cylinder #9 Injector Circuit Range/Performance **P02F7** Cylinder #10 Injector Circuit Range/Performance **P02F8** Cylinder #11 Injector Circuit Range/Performance **P02F9** Cylinder #12 Injector Circuit Range/Performance **P02FA** Diesel Intake Air Flow Position Sensor Min/Max Stop Performance P02FB ISO/SAE Reserved **P02FC** ISO/SAE Reserved **P02FD** ISO/SAE Reserved **P02FE** ISO/SAE Reserved **P02FF** ISO/SAE Reserved **P0300** Random/Multiple Cylinder Misfire Detected P0301 Cylinder #1 Misfire Detected P0302 Cylinder 2 Misfire Detected P0303 Cylinder #3 Misfire Detected **P0304** Cylinder #4 Misfire Detected **P0305** Cylinder #5 Misfire Detected P0306 Cylinder 6 Misfire Detected **P0307** Cylinder #7 Misfire Detected P0308 Cylinder #8 Misfire Detected



Codes	Definition
P0309	Cylinder #9 Misfire Detected
P030A	ISO/SAE Reserved
P030B	ISO/SAE Reserved
<b>P030C</b>	ISO/SAE Reserved
P030D	ISO/SAE Reserved
<b>P030E</b>	ISO/SAE Reserved
P030F	ISO/SAE Reserved
P0310	Cylinder #10 Misfire Detected
P0311	Cylinder #11 Misfire Detected
P0312	Cylinder #12 Misfire Detected
P0313	Misfire Detected with Low Fuel
P0314	Single Cylinder Misfire (Cylinder not Specified)
	Crankshaft Position System Variation Not Learned
	Engine Misfire Detected on Startup (First 1000 Revolutions)
	Rough Road Hardware Not Present
	Rough Road Sensor A Signal Circuit
	Rough Road Sensor B Signal Circuit
	ISO/SAE Reserved
	Ignition/Distributor Engine Speed Input Circuit
	Ignition/Distributor Engine Speed Input Circuit Range / Performance Ignition/Distributor Engine Speed Input Circuit Low
	Ignition/Distributor Engine Speed Input Circuit Low
	Knock Control System Error
	Knock Sensor Circuit Malfunction
	Knock Sensor 1 Circuit Range/Performance (Bank 1 or Single Sensor)
	Knock Sensor 1 Circuit Low Input (Bank 1 or Single Sensor)
	Knock Sensor 1 Circuit High Input (Bank 1 or Single Sensor)
	Knock Sensor Circuit Intermittent (Bank 1)
	Knock Sensor 3 Circuit Malfunction (Bank 1)
P032B	Knock Sensor 3 Circuit Range/Performance (Bank 1)
P032C	Knock Sensor 3 Circuit Low (Bank 1)
P032D	Knock Sensor 3 Circuit High Voltage (Bank 1)
P032E	Knock Sensor 3 Circuit Intermittent (Bank 1)
P0330	Knock Sensor 2 Circuit Malfunction (Bank 2)
P0331	Knock Sensor 2 Circuit Range/Performance (Bank 2)
P0332	Knock Sensor 2 Circuit Low Input (Bank 2)
P0333	Knock Sensor 2 Circuit High Input (Bank 2)
	Knock Sensor 2 Circuit Intermittent (Bank 2)
P0335	Crankshaft Position Sensor A Circuit Malfunction



Codes Definition **P0336** Crankshaft Position Sensor A Circuit Range/Performance P0337 Crankshaft Position Sensor Circuit A Low Input P0338 Crankshaft Position Sensor A Circuit High Input **P0339** Crankshaft Position Sensor B Circuit Intermittent **P033A** Knock Sensor 4 Circuit Malfunction (Bank 2) **P033B** Knock Sensor 4 Circuit Range/Performance (Bank 2) **P033C** Knock Sensor 4 Circuit Low (Bank 2) **P033D** Knock Sensor 4 Circuit High Voltage (Bank 2) **P033E** Knock Sensor 4 Circuit Intermittent (Bank 2) **P033F** ISO/SAE Reserved P0340 Camshaft Position Sensor Circuit Malfunction P0341 Camshaft Position Sensor Circuit Range/Performance **P0342** Camshaft Position Sensor "A" Circuit Low (Bank 1) **P0343** Camshaft Position Sensor A Circuit High Input (Bank 1) **P0344** Camshaft Position Sensor A Circuit Intermittent (Bank 1) **P0345** Camshaft Position Sensor A Circuit Malfunction (Bank 2) P0346 Camshaft Position Sensor A Circuit Range/Performance Bank 2 P0347 Camshaft Position Sensor "A" Circuit Low (Bank 2) **P0348** Camshaft Position Sensor A Circuit High Input (Bank 2) **P0349** Camshaft Position Sensor A Circuit Intermittent (Bank 2) P034A ISO/SAE Reserved P034B ISO/SAE Reserved P034C ISO/SAE Reserved **P034D** ISO/SAE Reserved P034E ISO/SAE Reserved **P034F** ISO/SAE Reserved P0350 Ignition Coil Primary/Secondary Circuit Malfunction **P0351** Ignition Coil A Primary/Secondary Circuit Malfunction **P0352** Ignition Coil B Primary/Secondary Circuit Malfunction P0353 Ignition Coil C Primary/Secondary Circuit Malfunction P0354 Ignition Coil D Primary/Secondary Circuit Malfunction P0355 Ignition Coil E Primary/Secondary Circuit Malfunction P0356 Ignition Coil F Primary/Secondary Circuit Malfunction P0357 Ignition Coil G Primary/Secondary Circuit Malfunction P0358 Ignition Coil H Primary/Secondary Circuit Malfunction P0359 Ignition Coil I Primary/Secondary Circuit Malfunction P035A ISO/SAE Reserved P035B ISO/SAE Reserved P035C ISO/SAE Reserved P035D ISO/SAE Reserved P035E ISO/SAE Reserved P035F ISO/SAE Reserved P0360 Ignition Coil J Primary/Secondary Circuit Malfunction P0361 Ignition Coil K Primary/Secondary Circuit Malfunction



Codes	Definition
P0362	Ignition Coil L Primary/Secondary Circuit Malfunction
P0363	Misfire Detected - Fueling Disabled
P0364	ISO/SAE Reserved
P0365	Camshaft Position Sensor "B" Circuit Bank 1
P0366	Camshaft Position Sensor B Circuit Range/Performance Bank 1
P0367	Camshaft Position Sensor "B" Circuit Low (Bank 1)
P0368	Camshaft Position Sensor "B" Circuit High Input (Bank 1)
P0369	Camshaft Position Sensor B Circuit Intermittent (Bank 1)
P036A	ISO/SAE Reserved
P036B	ISO/SAE Reserved
<b>P036C</b>	ISO/SAE Reserved
P036D	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	Timing Reference High Resolution Signal A Malfunction
	Timing Reference High Resolution Signal A Too Many Pulses
	Timing Reference High Resolution Signal A Too Few Pulses
	Timing Reference High Resolution Signal A Intermittent/Erratic Pulses
	Timing Reference High Resolution Signal A No Pulses
	Timing Reference High Resolution Signal B Malfunction
	Timing Reference High Resolution Signal B Too Many Pulses
	Timing Reference High Resolution Signal B Too Few Pulses
	Timing Reference High Resolution Signal B Intermittent/Erratic Pulses
	Timing Reference High Resolution Signal B No Pulses
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved Glow Plug Sense Circuit
	Glow Plug Sense Circuit Low
	Glow Plug Sense Circuit Low
	Glow Plug/Heater Circuit "A"
	Glow Plug/Heater Indicator Circuit Malfunction
	Glow Plug/Heater Circuit "B"
	Glow Plug Control Module Circuit Low
	Glow Plug Control Module Circuit High
	Crankshaft Position Sensor B Circuit Malfunction
	Crankshaft Position Sensor B Circuit Range/Performance
	Crankshaft Position Sensor B Circuit Low Input
	Crankshaft Position Sensor B Circuit High Input
	Crankshaft Position Sensor B Circuit Intermittent
P038A	ISO/SAE Reserved
P038B	ISO/SAE Reserved
P038C	ISO/SAE Reserved
P038D	ISO/SAE Reserved



Codes	Definition
P038E	ISO/SAE Reserved
P038F	ISO/SAE Reserved
P0390	Camshaft Position Sensor B Circuit Malfunction (Bank 2)
P0391	Camshaft Position Sensor "B" Circuit Range/Performance Bank 2
P0392	Camshaft Position Sensor "B" Circuit Low Bank 2
P0393	Camshaft Position Sensor B Circuit High Input (Bank 2)
P0394	Camshaft Position Sensor "B" Circuit Intermittent (Bank 2)
P0395	ISO/SAE Reserved
P0396	ISO/SAE Reserved
P0397	ISO/SAE Reserved
P0398	ISO/SAE Reserved
P0399	ISO/SAE Reserved
P039A	ISO/SAE Reserved
P039B	ISO/SAE Reserved
	ISO/SAE Reserved ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved



Codes P03BA ISO/SAE Reserved **P03BB** ISO/SAE Reserved **P03BC** ISO/SAE Reserved **P03BD** ISO/SAE Reserved **P03BE** ISO/SAE Reserved **P03BF** ISO/SAE Reserved P03C0 ISO/SAE Reserved **P03C1** ISO/SAE Reserved P03C2 ISO/SAE Reserved **P03C3** ISO/SAE Reserved P03C4 ISO/SAE Reserved P03C5 ISO/SAE Reserved P03C6 ISO/SAE Reserved P03C7 ISO/SAE Reserved P03C8 ISO/SAE Reserved P03C9 ISO/SAE Reserved P03CA ISO/SAE Reserved **P03CB** ISO/SAE Reserved **P03CC** ISO/SAE Reserved **P03CD** ISO/SAE Reserved **P03CE** ISO/SAE Reserved **P03CF** ISO/SAE Reserved P03D0 ISO/SAE Reserved P03D1 ISO/SAE Reserved P03D2 ISO/SAE Reserved P03D3 ISO/SAE Reserved P03D4 ISO/SAE Reserved P03D5 ISO/SAE Reserved P03D6 ISO/SAE Reserved **P03D7** ISO/SAE Reserved P03D8 ISO/SAE Reserved **P03D9** ISO/SAE Reserved P03DA ISO/SAE Reserved **P03DB** ISO/SAE Reserved **P03DC** ISO/SAE Reserved **P03DD** ISO/SAE Reserved **P03DE** ISO/SAE Reserved **P03DF** ISO/SAE Reserved P03E0 ISO/SAE Reserved P03E1 ISO/SAE Reserved P03E2 ISO/SAE Reserved P03E3 ISO/SAE Reserved **P03E4** ISO/SAE Reserved P03E5 ISO/SAE Reserved

## Definition

<u>DBDCodeX</u>

Codes Definition P03E6 ISO/SAE Reserved P03E7 ISO/SAE Reserved P03E8 ISO/SAE Reserved **P03E9** ISO/SAE Reserved PO3EA ISO/SAE Reserved **P03EB** ISO/SAE Reserved **P03EC** ISO/SAE Reserved **P03ED** ISO/SAE Reserved **P03EE** ISO/SAE Reserved **P03EF** ISO/SAE Reserved P03F0 ISO/SAE Reserved **P03F1** ISO/SAE Reserved P03F2 ISO/SAE Reserved **P03F3** ISO/SAE Reserved P03F4 ISO/SAE Reserved P03F5 ISO/SAE Reserved P03F6 ISO/SAE Reserved P03F7 ISO/SAE Reserved P03F8 ISO/SAE Reserved **P03F9** ISO/SAE Reserved **P03FA** ISO/SAE Reserved P03FB ISO/SAE Reserved **P03FC** ISO/SAE Reserved **P03FD** ISO/SAE Reserved **P03FE** ISO/SAE Reserved **P03FF** ISO/SAE Reserved P0400 Exhaust Gas Recirculation (EGR) Flow Malfunction **P0401** Insufficient Exhaust Gas Recirculation (EGR) Flow **P0402** Exhaust Gas Recirculation Flow (EGR) Excessive Detected P0403 Exhaust Gas Recirculation "A" Control Circuit P0404 Exhaust Gas Recirculation "A" Circuit Range/Performance **P0405** Exhaust Gas Recirculation Sensor A Circuit Low **P0406** Exhaust Gas Recirculation Sensor A Circuit High P0407 Exhaust Gas Recirculation Sensor B Circuit Low **P0408** Exhaust Gas Recirculation Sensor B Circuit High P0409 Exhaust Gas Recirculation Sensor "A" Circuit P040A Exhaust Gas Recirculation Temperature Sensor A Circuit **P040B** Exhaust Gas Recirculation Temperature Sensor A Circuit Range/Performance P040C Exhaust Gas Recirculation Temperature Sensor A Circuit Low **P040D** Exhaust Gas Recirculation Temperature Sensor A Circuit High Exhaust Gas Recirculation Temperature Sensor A Circuit **P040E** Intermittent/Erratic **P040F** Exhaust Gas Recirculation Temperature Sensor A/B Correlation



Codes	Definition
P0410	Secondary Air Injection System Malfunction
P0411	Secondary Air Injection System Incorrect Flow Detected
P0412	Secondary Air Injection System Switching Valve A Circuit Malfunction
P0413	Secondary Air Injection System Switching Valve A Circuit Open
P0414	Secondary Air Injection System Switching Valve A Circuit Shorted
P0415	Secondary Air Injection System Switching Valve B Circuit Malfunction
P0416	Secondary Air Injection System Switching Valve B Circuit Open
P0417	Secondary Air Injection System Switching Valve B Circuit Shorted
P0418	Secondary Air Injection System Relay A Circuit Malfunction
P0419	Secondary Air Injection System Relay B Circuit Malfunction
P041A	Exhaust Gas Recirculation Temperature Sensor B Circuit
P041B	Exhaust Gas Recirculation Temperature Sensor B Circuit Range/Performance
P0/1C	Exhaust Gas Recirculation Temperature Sensor B Circuit Low
	Exhaust Gas Recirculation Temperature Sensor B Circuit High
1041D	Exhaust Gas Recirculation Temperature Sensor B Circuit
P041E	Intermittent/Erratic
P041F	Secondary Air Injection System Switching Valve A Circuit Low
P0420	Catalyst System Efficiency Below Threshold (Bank 1)
P0421	Warm Up Catalyst Efficiency Below Threshold (Bank 1)
P0422	Main Catalyst Efficiency Below Threshold (Bank 1)
P0423	Heated Catalyst Efficiency Below Threshold (Bank 1)
P0424	Heated Catalyst Temperature Below Threshold (Bank 1)
	Catalyst Temperature Sensor Circuit Malfunction (Bank 1, Sensor 1)
	Catalyst Temperature Sensor Circuit Range/Performance (Bank 1, Sensor 1)
	Catalyst Temperature Sensor Circuit Low (Bank 1, Sensor 1)
	Catalyst Temperature Sensor Circuit High (Bank 1, Sensor 1)
	Catalyst Heater Control Circuit (Bank 1)
	Catalyst Temperature Sensor Circuit Malfunction (Bank 1, Sensor 2)
	Catalyst Temperature Sensor Circuit Range/Performance (Bank 1, Sensor 2)
	Catalyst Temperature Sensor Circuit Low (Bank 1, Sensor 2)
	Catalyst Temperature Sensor Circuit High (Bank 1, Sensor 2)
	Exhaust Gas Recirculation A Control Stuck Open
	Exhaust Gas Recirculation A Control Stuck Closed
	Catalyst System Efficiency Below Threshold (Bank 2)
	Warm Up Catalyst Efficiency Below Threshold (Bank 2)
	Main Catalyst Efficiency Below Threshold (Bank 2)
	Heated Catalyst Efficiency Below Threshold (Bank 2)
	Heated Catalyst Temperature Below Threshold (Bank 1) Catalyst Temperature Sensor Circuit Malfunction (Bank 2, Sensor 1)
	Catalyst Temperature Sensor Circuit Manufction (Bank 2, Sensor 1) Catalyst Temperature Sensor Circuit Range/Performance (Bank 2, Sensor 1)
	Catalyst Temperature Sensor Circuit Kange/Performance (Bank 2, Sensor 1) Catalyst Temperature Sensor Circuit Low (Bank 2, Sensor 1)
	Catalyst Temperature Sensor Circuit Low (Bank 2, Sensor 1) Catalyst Temperature Sensor Circuit High (Bank 2, Sensor 1)
	Catalyst Heater Control Circuit (Bank 2)
10433	Outaryst frontor Ontoror Orount (Dunk 2)



Codes	Definition
P043A	Catalyst Temperature Sensor Circuit Malfunction (Bank 2, Sensor 2)
P043B	Catalyst Temperature Sensor Circuit Range/Performance (Bank 2, Sensor 2)
P043C	Catalyst Temperature Sensor Circuit Low (Bank 2, Sensor 2)
P043D	Catalyst Temperature Sensor Circuit High (Bank 2, Sensor 2)
P043E	Evaporative Emission System Leak Detection Reference Orifice Low Flow
P043F	Evaporative Emission System Leak Detection Reference Orifice High Flow
P0440	Evaporative Emission Control System Malfunction
P0441	Evaporative Emission Control System Incorrect Purge Flow
P0442	Evaporative Emission Control System Leak Detected (small leak)
P0443	Evaporative Emission Control System Purge Control Valve Circuit
P0444	Evaporative Emission Control System Purge Control Valve Circuit Open
P0445	Evaporative Emission Control System Purge Control Valve Circuit Shorted
	Evaporative Emission Control System Vent Control Circuit Malfunction
	Evaporative Emission Control System Vent Valve/Solenoid Circuit Open
P0448	Evaporative Emission Control System Vent Valve/Solenoid Circuit Shorted
P0449	Evaporative Emission Control System Vent Valve/Solenoid Circuit Malfunction
P044A	Exhaust Gas Recirculation Sensor "C" Circuit
P044B	Exhaust Gas Recirculation Sensor "C" Circuit Range/Performance
	Exhaust Gas Recirculation Sensor C Circuit Low
	Exhaust Gas Recirculation Sensor C Circuit High
	Exhaust Gas Recirculation Sensor "C" Circuit Intermittent/Erratic
	Secondary Air Injection System Switching Valve A Circuit High
	Evaporative Emission Control System Pressure Sensor Malfunction
	Evaporative Emission Control System Pressure Sensor Range/Performance
	Evaporative Emission System Pressure Sensor/Switch Low
	Evaporative Emissions Control System Pressure Sensor High Input
P0454	Evaporative Emission Control System Pressure Sensor Intermittent
P0455	Evaporative Emission Control System Leak Detected (no purge flow or large leak)
	Evaporative Emissions System - Small leak detected
	Evaporative Emission Control System (EVAP) Leak Detected
	Evaporative Emission System Purge Control Valve Circuit Low
	Evaporative Emission System Purge Control Valve Circuit High
	Exhaust Gas Recirculation "B" Control Circuit
	Exhaust Gas Recirculation "B" Control Circuit Range/Performance
	Exhaust Gas Recirculation "B" Control Circuit Low
	Exhaust Gas Recirculation "B" Control Circuit High
	Exhaust Gas Recirculation B Control Stuck Open
	Exhaust Gas Recirculation B Control Stuck Closed
	Fuel Level Sensor Circuit Malfunction
	Fuel Level Sensor Circuit Range/Performance Fuel Level Sensor Circuit Low Input
	Fuel Level Sensor Circuit High Input
10403	r nei revei Seusoi Circait män mhar



Codes Definition **P0464** Fuel Level Sensor Circuit Intermittent **P0465** Purge Flow Sensor Circuit Malfunction **P0466** Purge Flow Sensor Circuit Range/Performance **P0467** Purge Flow Sensor Circuit Low **P0468** Purge Flow Sensor Circuit High **P0469** Purge Flow Sensor Circuit Intermittent **P046A** Catalyst Temperature Sensor 1/2 Correlation (Bank 1) **P046B** Catalyst Temperature Sensor 1/2 Correlation (Bank 2) **P046C** Exhaust Gas Recirculation Sensor "A" Circuit Range/Performance P046D Exhaust Gas Recirculation Sensor "A" Circuit Intermittent/Erratic **P046E** Exhaust Gas Recirculation Sensor "B" Circuit Range/Performance P046F Exhaust Gas Recirculation Sensor "B" Circuit Intermittent/Erratic P0470 Exhaust Pressure Sensor Malfunction **P0471** Exhaust Pressure Sensor Range/Performance **P0472** Exhaust Pressure Sensor Low Input P0473 Exhaust Pressure Sensor High Input P0474 Exhaust Pressure Sensor Circuit "A" Intermittent/Erratic **P0475** Exhaust Pressure Control Valve "A" P0476 Exhaust Pressure Control Valve "A" Range/Performance **P0477** Exhaust Pressure Control Valve "A" Low P0478 Exhaust Pressure Control Valve "A" High P0479 Exhaust Pressure Control Valve "A" Intermittent P047A Exhaust Pressure Sensor "B" Malfunction **P047B** Exhaust Pressure Sensor "B" Range/Performance P047C Exhaust Pressure Sensor "B" Low Input P047D Exhaust Pressure Sensor "B" High Input P047E Exhaust Pressure Sensor Circuit "B" Intermittent/Erratic P047F Exhaust Pressure Control Valve A Stuck Open **P0480** Cooling Fan Relay 1 Control Circuit **P0481** Cooling Fan Relay 2 Control Circuit **P0482** Cooling Fan Relay 2 Control Circuit P0483 Cooling Fan Rationality Check Malfunction **P0484** Cooling Fan Circuit Over Current **P0485** Cooling Fan Power/Ground Circuit Malfunction P0486 Exhaust Gas Recirculation Sensor "B" Circuit P0487 Exhaust Gas Recirculation (EGR) Throttle Control Circuit "A" Open **P0488** Exhaust Gas Recirculation Throttle Position Control Range/Performance P0489 Exhaust Gas Recirculation "A" Control Circuit Low P048A Exhaust Pressure Control Valve A Stuck Closed P048B Exhaust Pressure Control Valve Position Sensor/Switch Circuit P048C Exhaust Pressure Control Valve Position Sensor/Switch Circuit Range/Performance P048D Exhaust Pressure Control Valve Position Sensor/Switch Circuit Low **P048E** Exhaust Pressure Control Valve Position Sensor/Switch Circuit High



Codes	Definition
P048F	Exhaust Pressure Control Valve Position Sensor/Switch Circuit Intermittent
P0490	Exhaust Gas Recirculation "A" Control Circuit High
P0491	Secondary Air Injection System Insufficient Flow (Bank 1)
P0492	Secondary Air Injection System Insufficient Flow (Bank 2)
P0493	Fan Overspeed
	Fan Speed Low
	Fan Speed High
	EVAP (evaporative emission) Flow During A Non-Purge Condition
	Evaporative Emission System Low Purge Flow
	Evaporative Emission System Vent Valve Control Circuit Low
	Evaporative Emission System Vent Valve Control Circuit High
	Exhaust Gas Recirculation B Flow
	Exhaust Gas Recirculation B Flow Insufficient Detected
	Exhaust Gas Recirculation B Flow Excessive Detected Exhaust Gas Recirculation A Control Position Exceeded Learning Limit
	Exhaust Gas Recirculation B Control Position Exceeded Learning Limit
	Exhaust Gas Recirculation B Control Position Exceeded Learning Limit Exhaust Pressure Control Valve "B"
	Exhaust Pressure Control Valve "B" Range/Performance
	Exhaust Pressure Control Valve "B" Low
	Exhaust Pressure Control Valve "B" High
	Exhaust Pressure Control Valve "B" Intermittent
P04A4	Exhaust Pressure Control Valve B Stuck Open
P04A5	Exhaust Pressure Control Valve B Stuck Closed
P04A6	Exhaust Pressure Control Valve B Position Sensor/Switch Circuit
P04A7	Exhaust Pressure Control Valve B Position Sensor/Switch Circuit Range/Performance
P04A8	Exhaust Pressure Control Valve B Position Sensor/Switch Circuit Low
P04A9	Exhaust Pressure Control Valve B Position Sensor/Switch Circuit High
P04AA	Exhaust Pressure Control Valve B Position Sensor/Switch Circuit Intermittent
P04AB	ISO/SAE Reserved
P04AC	ISO/SAE Reserved
P04AD	ISO/SAE Reserved
	ISO/SAE Reserved ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved



Codes P04B9 ISO/SAE Reserved **P04BA** ISO/SAE Reserved P04BB ISO/SAE Reserved P04BC ISO/SAE Reserved P04BD ISO/SAE Reserved P04BE ISO/SAE Reserved **P04BF** ISO/SAE Reserved **P04C0** ISO/SAE Reserved P04C1 ISO/SAE Reserved **P04C2** ISO/SAE Reserved P04C3 ISO/SAE Reserved P04C4 ISO/SAE Reserved P04C5 ISO/SAE Reserved P04C6 ISO/SAE Reserved P04C7 ISO/SAE Reserved P04C8 ISO/SAE Reserved P04C9 ISO/SAE Reserved P04CA ISO/SAE Reserved P04CB ISO/SAE Reserved **P04CC** ISO/SAE Reserved **P04CD** ISO/SAE Reserved **P04CE** ISO/SAE Reserved **P04CF** ISO/SAE Reserved **P04D0** ISO/SAE Reserved P04D1 ISO/SAE Reserved P04D2 ISO/SAE Reserved P04D3 ISO/SAE Reserved P04D4 ISO/SAE Reserved P04D5 ISO/SAE Reserved **P04D6** ISO/SAE Reserved P04D7 ISO/SAE Reserved P04D8 ISO/SAE Reserved P04D9 ISO/SAE Reserved P04DA ISO/SAE Reserved P04DB ISO/SAE Reserved **P04DC** ISO/SAE Reserved **P04DD** ISO/SAE Reserved **P04DE** ISO/SAE Reserved P04DF ISO/SAE Reserved P04E0 ISO/SAE Reserved P04E1 ISO/SAE Reserved P04E2 ISO/SAE Reserved **P04E3** ISO/SAE Reserved P04E4 ISO/SAE Reserved

DBDCodeX

### Definition


Codes Definition P04E5 ISO/SAE Reserved **P04E6** ISO/SAE Reserved P04E7 ISO/SAE Reserved P04E8 ISO/SAE Reserved P04E9 ISO/SAE Reserved **P04EA** ISO/SAE Reserved P04EB ISO/SAE Reserved **P04EC** ISO/SAE Reserved **P04ED** ISO/SAE Reserved **P04EE** ISO/SAE Reserved **P04EF** ISO/SAE Reserved P04F0 ISO/SAE Reserved P04F1 ISO/SAE Reserved P04F2 ISO/SAE Reserved P04F3 ISO/SAE Reserved P04F4 ISO/SAE Reserved P04F5 ISO/SAE Reserved P04F6 ISO/SAE Reserved P04F7 ISO/SAE Reserved **P04F8** ISO/SAE Reserved P04F9 ISO/SAE Reserved P04FA ISO/SAE Reserved P04FB ISO/SAE Reserved **P04FC** ISO/SAE Reserved **P04FD** ISO/SAE Reserved **P04FE** ISO/SAE Reserved P04FF ISO/SAE Reserved P0500 Vehicle Speed Sensor "A" Malfunction **P0501** Vehicle Speed Sensor "A" Range/Performance **P0502** Vehicle Speed Sensor A Low Input **P0503** Vehicle Speed Sensor A Intermittent P0504 Brake Switch A/B Correlation P0505 IAC (Idle Air Control) System Malfunction P0506 Idle Air Control (IAC) System RPM Lower Than Expected **P0507** Idle Air Control System RPM Higher Than Expected P0508 Idle Air Control Circuit Low P0509 Idle Air Control Circuit High **P050A** Cold Start Idle Air Control System Performance P050B Cold Start Ignition Timing Performance **P050C** Cold Start Engine Coolant Temperature Performance P050D Cold Start Rough Idle **P050E** Cold Start Engine Exhaust Temperature Too Low **P050F** Brake Assist Vacuum Too Low P0510 Closed Throttle Position Switch Malfunction



C	Codes	Definition
Ρ	0511	Idle Air Control Circuit
Ρ	0512	Starter Request Circuit
Ρ	0513	Incorrect Immobilizer Key
Ρ	0514	Battery Temperature Sensor Circuit Range/Performance
P	0515	Battery Temperature Sensor Circuit
Ρ	0516	Battery Temperature Sensor Circuit Low
Ρ	0517	Battery Temperature Sensor Circuit High
P	0518	Idle Air Control Circuit Intermittent
P	0519	Idle Air Control System Performance
		Crankcase Pressure Sensor Circuit
		Crankcase Pressure Sensor Circuit Range/Performance
		Crankcase Pressure Sensor Circuit Low
		Crankcase Pressure Sensor Circuit High
		Crankcase Pressure Sensor Circuit Intermittent/Erratic
		Positive Crankcase Ventilation Filter Restriction
		Engine Oil Pressure Sensor/Switch Circuit
		Engine Oil Pressure Sensor/Switch Range/Performance
		Engine Oil Pressure Sensor/Switch Low
		Engine Oil Pressure Sensor/Switch High
		Engine Oil Pressure Too Low
		Cruise Control Servo Control Circuit Range/Performance
		Cooling Fan Speed Sensor Circuit
		Fan Speed Sensor Circuit Range/Performance
		Fan Speed Sensor Circuit No Signal
		Fan Speed Sensor Circuit Intermittent
		Cold Start A Camshaft Position Timing Over-Advanced Bank 1 Cold Start A Camshaft Position Timing Over-Retarded Bank 1
		Cold Start A Camshaft Position Timing Over-Advanced Bank 1 Cold Start A Camshaft Position Timing Over-Advanced Bank 2
		Cold Start A Camshaft Position Timing Over-Retarded Bank 2 Cold Start A Camshaft Position Timing Over-Retarded Bank 2
		Positive Crankcase Ventilation Regulator Valve Performance
		ISO/SAE Reserved
		A/C Refrigerant Pressure Sensor A Circuit Malfunction
		A/C Refrigerant Pressure Sensor A Circuit Range/Performance
		A/C Refrigerant Pressure Sensor A Circuit Low
		A/C Refrigerant Pressure Sensor A Circuit High
		Air Conditioner Refrigerant Charge Loss
		A/C Evaporator Temperature Sensor Circuit
		A/C Evaporator Temperature Sensor Circuit Range/Performance
		A/C Evaporator Temperature Sensor Circuit Low
		A/C Evaporator Temperature Sensor Circuit High
		A/C Evaporator Temperature Sensor Circuit Intermittent
		Positive Crankcase Ventilation Heater Control Circuit /Open
		Positive Crankcase Ventilation Heater Control Circuit Low
Ρ	053C	Positive Crankcase Ventilation Heater Control Circuit High



Codes	Definition
P053D	ISO/SAE Reserved
P053E	ISO/SAE Reserved
P053F	ISO/SAE Reserved
P0540	Intake Air Heater "A" Circuit
P0541	Intake Air Heater "A" Circuit Low
P0542	Intake Air Heater "A" Circuit High
P0543	Intake Air Heater "A" Circuit Open
P0544	Exhaust Gas Temperature (EGT) Sensor Circuit (Malfunction) Bank 1 Sensor 1
P0545	Exhaust Gas Temperature (EGT) Sensor Circuit Low Bank 1 Sensor 1
P0546	Exhaust Gas Temperature (EGT) Sensor Circuit High Bank 1 Sensor 1
P0547	Exhaust Gas Temperature (EGT) Sensor Circuit (Malfunction) Bank 2 Sensor 1
	Exhaust Gas Temperature (EGT) Sensor Circuit Low Bank 2 Sensor 1
	Exhaust Gas Temperature (EGT) Sensor Circuit High Bank 2 Sensor 1
	Cold Start B Camshaft Position Timing Over-Advanced Bank 1
	Cold Start B Camshaft Position Timing Over-Retarded Bank 1
	Cold Start B Camshaft Position Timing Over-Advanced Bank 2
	Cold Start B Camshaft Position Timing Over-Retarded Bank 2
	ISO/SAE Reserved
	ISO/SAE Reserved
	Power Steering Pressure Sensor Circuit Malfunction
	Power Steering Pressure Sensor Circuit Range/Performance
	Power Steering Pressure Sensor Circuit Low
	Power Steering Pressure Sensor Circuit High
	Power Steering Pressure Sensor Circuit Intermittent
	Brake Booster Pressure Sensor Circuit
	Brake Booster Pressure Sensor Circuit Range/Performance
	Brake Booster Pressure Sensor Circuit Low
	Brake Booster Pressure Sensor Circuit High Brake Booster Pressure Sensor Circuit Intermittent
	ISO/SAE Reserved
	System Voltage Malfunction
	System Voltage Unstable
	System Voltage Low
	System Voltage High
	Cruise Control Multi-Function Input A Circuit
	Cruise Control On Signal Malfunction
	Cruise Control Off Signal Malfunction

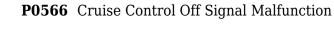



Codes	Definition
P0567	Cruise Control Resume Signal Malfunction
P0568	Cruise Control Set Signal Malfunction
P0569	Cruise Control Coast Signal Malfunction
P056A	Cruise Control Increase Distance Signal
P056B	Cruise Control Decrease Distance Signal
P056C	ISO/SAE Reserved
P056D	ISO/SAE Reserved
P056E	ISO/SAE Reserved
P056F	ISO/SAE Reserved
P0570	Cruise Control Accel Signal Malfunction
P0571	Cruise Control/Brake Switch A Circuit Malfunction
P0572	Cruise Control/Brake Switch A Circuit Low
P0573	Cruise Control/Brake Switch A Circuit High
P0574	Cruise Control - Vehicle Speed Too High
P0575	Cruise Control Input Circuit
P0576	Cruise Control Input Circuit Low
	Cruise Control Input Circuit High
	Cruise Control Multi-Function Input A Circuit Stuck
	Cruise Control Multi-Function Input A Circuit Range/Performance
	ISO/SAE Reserved
	Cruise Control Multi-Function Input A Circuit Low
	Cruise Control Multi-Function Input A Circuit High
	Cruise Control Vacuum Control Circuit /Open
	Cruise Control Vacuum Control Circuit Low
	Cruise Control Vacuum Control Circuit High
	Cruise Control Multi-Function Input A/B Correlation
	Cruise Control Vent Control Circuit /Open Cruise Control Vent Control Circuit Low
	Cruise Control Vent Control Circuit Low
	Cruise Control Multi-Function Input B Circuit
	ISO/SAE Reserved
	Cruise Control Multi-Function Input B Circuit Stuck
	Cruise Control Multi-Function Input B Circuit Range/Performance
	Cruise Control Multi-Function Input B Circuit Low



Codes Definition P0593 Cruise Control Multi-Function Input B Circuit High P0594 Cruise Control Servo Control Circuit /Open **P0595** Cruise Control Servo Control Circuit Low P0596 Cruise Control Servo Control Circuit High P0597 Thermostat Heater Control Circuit Open P0598 Thermostat Heater Control Circuit Low **P0599** Thermostat Heater Control Circuit High **P059A** ISO/SAE Reserved P059B ISO/SAE Reserved **P059C** ISO/SAE Reserved P059D ISO/SAE Reserved P059E ISO/SAE Reserved P059F ISO/SAE Reserved P05A0 ISO/SAE Reserved P05A1 ISO/SAE Reserved P05A2 ISO/SAE Reserved P05A3 ISO/SAE Reserved P05A4 ISO/SAE Reserved P05A5 ISO/SAE Reserved P05A6 ISO/SAE Reserved P05A7 ISO/SAE Reserved P05A8 ISO/SAE Reserved P05A9 ISO/SAE Reserved **P05AA** ISO/SAE Reserved P05AB ISO/SAE Reserved P05AC ISO/SAE Reserved **P05AD** ISO/SAE Reserved **P05AE** ISO/SAE Reserved P05AF ISO/SAE Reserved **P05B0** ISO/SAE Reserved P05B1 ISO/SAE Reserved **P05B2** ISO/SAE Reserved P05B3 ISO/SAE Reserved P05B4 ISO/SAE Reserved P05B5 ISO/SAE Reserved P05B6 ISO/SAE Reserved P05B7 ISO/SAE Reserved P05B8 ISO/SAE Reserved P05B9 ISO/SAE Reserved **P05BA** ISO/SAE Reserved P05BB ISO/SAE Reserved **P05BC** ISO/SAE Reserved **P05BD** ISO/SAE Reserved P05BE ISO/SAE Reserved



Codes **P05BF** ISO/SAE Reserved **P05C0** ISO/SAE Reserved P05C1 ISO/SAE Reserved P05C2 ISO/SAE Reserved P05C3 ISO/SAE Reserved P05C4 ISO/SAE Reserved P05C5 ISO/SAE Reserved **P05C6** ISO/SAE Reserved P05C7 ISO/SAE Reserved **P05C8** ISO/SAE Reserved P05C9 ISO/SAE Reserved **P05CA** ISO/SAE Reserved **P05CB** ISO/SAE Reserved **P05CC** ISO/SAE Reserved **P05CD** ISO/SAE Reserved **P05CE** ISO/SAE Reserved P05CF ISO/SAE Reserved P05D0 ISO/SAE Reserved P05D1 ISO/SAE Reserved P05D2 ISO/SAE Reserved P05D3 ISO/SAE Reserved P05D4 ISO/SAE Reserved P05D5 ISO/SAE Reserved P05D6 ISO/SAE Reserved P05D7 ISO/SAE Reserved P05D8 ISO/SAE Reserved P05D9 ISO/SAE Reserved **P05DA** ISO/SAE Reserved **P05DB** ISO/SAE Reserved **P05DC** ISO/SAE Reserved **P05DD** ISO/SAE Reserved **P05DE** ISO/SAE Reserved **P05DF** ISO/SAE Reserved P05E0 ISO/SAE Reserved P05E1 ISO/SAE Reserved P05E2 ISO/SAE Reserved P05E3 ISO/SAE Reserved P05E4 ISO/SAE Reserved P05E5 ISO/SAE Reserved P05E6 ISO/SAE Reserved P05E7 ISO/SAE Reserved P05E8 ISO/SAE Reserved **P05E9** ISO/SAE Reserved P05EA ISO/SAE Reserved

## Definition



Definition Codes **P05EB** ISO/SAE Reserved **P05EC** ISO/SAE Reserved **P05ED** ISO/SAE Reserved **P05EE** ISO/SAE Reserved **P05EF** ISO/SAE Reserved **P05F0** ISO/SAE Reserved P05F1 ISO/SAE Reserved **P05F2** ISO/SAE Reserved P05F3 ISO/SAE Reserved P05F4 ISO/SAE Reserved P05F5 ISO/SAE Reserved P05F6 ISO/SAE Reserved P05F7 ISO/SAE Reserved P05F8 ISO/SAE Reserved P05F9 ISO/SAE Reserved **P05FA** ISO/SAE Reserved P05FB ISO/SAE Reserved **P05FC** ISO/SAE Reserved **P05FD** ISO/SAE Reserved **P05FE** ISO/SAE Reserved **P05FF** ISO/SAE Reserved P0600 Serial Communication Link Malfunction **P0601** Internal Control Module Memory Check Sum Error **P0602** Control Module Programming Error **P0603** Internal Control Module Keep Alive Memory (KAM) Error **P0604** Internal Control Module Random Access Memory (RAM) Error P0605 Internal Control Module Read Only Memory (ROM) Error P0606 PCM / ECM Processor Fault **P0607** Control Module Performance P0608 Control Module VSS Output A Malfunction P0609 Control Module VSS Output B Malfunction **P060A** Internal Control Module Monitoring Processor Performance **P060B** Internal Control Module A/D Processing Performance **P060C** Internal Control Module Main Processor Performance **P060D** Internal Control Module Accelerator Pedal Position Performance **P060E** Internal Control Module Throttle Position Performance **P060F** Internal Control Module Coolant Temperature Performance P0610 Control Module Vehicle Options Error P0611 Fuel Injector Control Module Performance P0612 Fuel Injector Control Module Relay Control P0613 TCM Processor P0614 ECM/TCM Incompatible **P0615** Starter Relay Circuit P0616 Starter Relay Circuit Low



Codes	Definition
P0617	Starter Relay Circuit High
P0618	Alternative Fuel Control Module KAM Error
P0619	Alternative Fuel Control Module RAM/ROM Error
P061A	Internal Control Module Torque Performance
P061B	Internal Control Module Torque Calculation Performance
P061C	Internal Control Module Engine RPM Performance
P061D	Internal Control Module Engine Air Mass Performance
P061E	Internal Control Module Brake Signal Performance
P061F	Internal Control Module Brake Signal Performance
	Generator Control Circuit Malfunction
	Generator Lamp L Control Circuit Malfunction
P0622	Generator Field F Control Circuit Malfunction
	Generator Lamp Control Circuit
	Fuel Cap Lamp Control Circuit
	Generator Field/F Terminal Circuit Low
	Generator Field/F Terminal Circuit High
	Fuel Pump A Control Circuit /Open
	Fuel Pump A Control Circuit Low
	Fuel Pump A Control Circuit High
	Fuel Pump A Control Circuit Range/Performance
	Internal Control Module Fuel Injector Control Performance
	Internal Control Module Vehicle Speed Performance
	Fuel Injector Driver Circuit Performance Bank 1
	Fuel Injector Driver Circuit Performance Bank 2
	Internal Control Module EEPROM Error
	VIN Not Programmed or Incompatible – ECM/PCM
	VIN Not Programmed or Incompatible – TCM
	Odometer Not Programmed – ECM/PCM
	Immobilizer Key Not Programmed – ECM/PCM
	PCM/ECM/TCM Internal Temperature Too High
	Power Steering Control Circuit Power Steering Control Circuit Low
	Power Steering Control Circuit High
	Throttle Actuator Control Range/Performance (Bank 1)
	Throttle Actuator Control Range/Performance (Bank 2)
	Generator Voltage Sense Circuit
	Generator Voltage Sense Circuit Range/Performance
	Generator Voltage Sense Circuit Low
	Generator Voltage Sense Circuit High
	Auto Configuration Throttle Input Not Present
	Auto Configuration Engine Coolant Temperature Input Not Present
	Intake Air Heater Control Circuit
	Sensor Reference Voltage "A" Circuit Open
	Sensor Reference Voltage "A" Circuit Low
	0



Codes Definition **P0643** Sensor Reference Voltage "A" Circuit High **P0644** Driver Display Serial Communication Circuit P0645 A/C Clutch Relay Control Circuit **P0646** A/C Clutch Relay Control Circuit Low **P0647** A/C Clutch Relay Control Circuit High P0648 Immobilizer Lamp Control Circuit P0649 Speed Control Lamp Control Circuit **P064A** Fuel Pump Control Module P064B PTO Control Module **P064C** Glow Plug Control Module P064D Internal Control Module O2 Sensor Processor Performance Bank 1 **P064E** Internal Control Module O2 Sensor Processor Performance Bank 2 P064F Unauthorized Software/Calibration Detected P0650 Malfunction Indicator Lamp (MIL) Control Circuit P0651 Sensor Reference Voltage "B" Circuit Open P0652 Sensor Reference Voltage "B" Circuit Low P0653 Sensor Reference Voltage "B" Circuit High **P0654** Engine RPM Output Circuit Malfunction P0655 Engine Hot Lamp Output Control Circuit Malfunction P0656 Fuel Level Output Circuit Malfunction P0657 Actuator Supply Voltage A Circuit/Open P0658 Actuator Supply Voltage A Circuit Low **P0659** Actuator Supply Voltage A Circuit High **P065A** Generator System Performance **P065B** Generator Control Circuit Range/Performance **P065C** Generator Mechanical Performance P065D Reductant System Malfunction Lamp Control Circuit **P065E** Intake Manifold Tuning Valve Performance Bank 1 **P065F** Intake Manifold Tuning Valve Performance Bank 2 **P0660** Intake Manifold Tuning Valve Control Circuit/Open Bank 1 **P0661** Intake Manifold Tuning Valve Control Circuit Low Bank 1 **P0662** Intake Manifold Tuning Valve Control Circuit High Bank 1 P0663 Intake Manifold Tuning Valve Control Circuit/Open Bank 2 **P0664** Intake Manifold Tuning Valve Control Circuit Low Bank 2 P0665 Intake Manifold Tuning Valve Control Circuit High Bank 2 P0666 PCM/ECM/TCM Internal Temperature Sensor Circuit P0667 PCM/ECM/TCM Internal Temperature Sensor Range/Performance P0668 PCM/ECM/TCM Internal Temperature Sensor Circuit Low P0669 PCM/ECM/TCM Internal Temperature Sensor Circuit High **P066A** Cylinder #1 Glow Plug Circuit Low **P066B** Cylinder #1 Glow Plug Circuit High **P066C** Cylinder #2 Glow Plug Circuit Low **P066D** Cylinder #2 Glow Plug Circuit High **P066E** Cylinder #3 Glow Plug Circuit Low



Codes Definition **P066F** Cylinder #3 Glow Plug Circuit High **P0670** Glow Plug Control Module Circuit Fault **P0671** Cylinder #1 Glow Plug Circuit **P0672** Cylinder #2 Glow Plug Circuit **P0673** Cylinder #3 Glow Plug Circuit **P0674** Cylinder #4 Glow Plug Circuit **P0675** Cylinder #5 Glow Plug Circuit **P0676** Cylinder #6 Glow Plug Circuit **P0677** Cylinder #7 Glow Plug Circuit **P0678** Cylinder #8 Glow Plug Circuit **P0679** Cylinder #9 Glow Plug Circuit **P067A** Cylinder #4 Glow Plug Circuit Low **P067B** Cylinder #4 Glow Plug Circuit High **P067C** Cylinder #5 Glow Plug Circuit Low **P067D** Cylinder #5 Glow Plug Circuit High **P067E** Cylinder #6 Glow Plug Circuit Low P067F Cylinder #6 Glow Plug Circuit High **P0680** Cylinder #10 Glow Plug Circuit **P0681** Cylinder #11 Glow Plug Circuit **P0682** Cylinder #12 Glow Plug Circuit **P0683** Glow Plug Control Module to PCM Communication Circuit Glow Plug Control Module to PCM Communication Circuit **P0684** Range/Performance P0685 ECM/PCM Power Relay Control Circuit Open P0686 ECM/PCM Power Relay Control Circuit Low P0687 ECM/PCM Power Relay Control Circuit High P0688 ECM/PCM Power Relay Sense Circuit Open P0689 ECM/PCM Power Relay Sense Circuit Low **P068A** ECM/PCM Power Relay De-Energized Performance - Too Early **P068B** ECM/PCM Power Relay De-Energized Performance - Too Late **P068C** Cylinder #7 Glow Plug Circuit Low **P068D** Cylinder #7 Glow Plug Circuit High **P068E** Cylinder #8 Glow Plug Circuit Low **P068F** Cylinder #8 Glow Plug Circuit High P0690 ECM/PCM Power Relay Sense Circuit High P0691 Cooling Fan 1 Relay Control Circuit Low **P0692** Cooling Fan 1 Relay Control Circuit High **P0693** Cooling Fan 2 Relay Control Circuit Low P0694 Cooling Fan 2 Relay Control Circuit High P0695 Cooling Fan 3 Relay Control Circuit Low P0696 Cooling Fan 3 Relay Control Circuit High P0697 Sensor Reference Voltage "C" Circuit Open P0698 Sensor Reference Voltage "C" Circuit Low P0699 Sensor Reference Voltage "C" Circuit High



Codes Definition P069A Cylinder #9 Glow Plug Circuit Low **P069B** Cylinder #9 Glow Plug Circuit High **P069C** Cylinder #10 Glow Plug Circuit Low **P069D** Cylinder #10 Glow Plug Circuit High **P069E** Fuel Pump Control Module Requested MIL Illumination **P069F** Throttle Actuator Control Lamp Control Circuit **P06A0** Variable A/C Compressor Control Circuit P06A1 Variable A/C Compressor Control Circuit Low **P06A2** Variable A/C Compressor Control Circuit High P06A3 Sensor Reference Voltage "D" Circuit Open P06A4 Sensor Reference Voltage "D" Circuit Low **P06A5** Sensor Reference Voltage "D" Circuit High **P06A6** Sensor Reference Voltage A Circuit Range/Performance **P06A7** Sensor Reference Voltage B Circuit Range/Performance **P06A8** Sensor Reference Voltage C Circuit Range/Performance **P06A9** Sensor Reference Voltage D Circuit Range/Performance P06AA PCM/ECM/TCM Internal Temperature B Too High **P06AB** PCM/ECM/TCM Internal Temperature Sensor B Circuit **P06AC** PCM/ECM/TCM Internal Temperature Sensor B Range/Performance **P06AD** PCM/ECM/TCM Internal Temperature Sensor B Circuit Low **P06AE** PCM/ECM/TCM Internal Temperature Sensor B Circuit High **P06AF** Torque Management System - Forced Engine Shutdown **P06B0** Sensor Power Supply A Circuit Open **P06B1** Sensor Power Supply A Circuit Low **P06B2** Sensor Power Supply A Circuit High **P06B3** Sensor Power Supply B Circuit Open **P06B4** Sensor Power Supply B Circuit Low **P06B5** Sensor Power Supply B Circuit High **P06B6** Internal Control Module Knock Sensor Processor 1 Performance **P06B7** Internal Control Module Knock Sensor Processor 2 Performance P06B8 Internal Control Module Non-Volatile Random Access Memory (NVRAM) Error **P06B9** Cylinder 1 Glow Plug Circuit Range/Performance **P06BA** Cylinder 2 Glow Plug Circuit Range/Performance **P06BB** Cylinder 3 Glow Plug Circuit Range/Performance **P06BC** Cylinder 4 Glow Plug Circuit Range/Performance **P06BD** Cylinder 5 Glow Plug Circuit Range/Performance **P06BE** Cylinder 6 Glow Plug Circuit Range/Performance **P06BF** Cylinder 7 Glow Plug Circuit Range/Performance **P06C0** Cylinder 8 Glow Plug Circuit Range/Performance **P06C1** Cylinder 9 Glow Plug Circuit Range/Performance P06C2 Cylinder 10 Glow Plug Circuit Range/Performance P06C3 Cylinder 11 Glow Plug Circuit Range/Performance **P06C4** Cylinder 12 Glow Plug Circuit Range/Performance



Codes Definition P06C5 Cylinder 1 Glow Plug Incorrect **P06C6** Cylinder 2 Glow Plug Incorrect P06C7 Cylinder 3 Glow Plug Incorrect **P06C8** Cylinder 4 Glow Plug Incorrect P06C9 Cylinder 5 Glow Plug Incorrect **P06CA** Cylinder 6 Glow Plug Incorrect **P06CB** Cylinder 7 Glow Plug Incorrect **P06CC** Cylinder 8 Glow Plug Incorrect **P06CD** Cylinder 9 Glow Plug Incorrect **P06CE** Cylinder 10 Glow Plug Incorrect **P06CF** Cylinder 11 Glow Plug Incorrect **P06D0** Cylinder 12 Glow Plug Incorrect **P06D1** Internal Control Module Ignition Coil Control Performance P06D2 ISO/SAE Reserved P06D3 ISO/SAE Reserved P06D4 ISO/SAE Reserved P06D5 ISO/SAE Reserved P06D6 ISO/SAE Reserved P06D7 ISO/SAE Reserved **P06D8** ISO/SAE Reserved P06D9 ISO/SAE Reserved P06DA ISO/SAE Reserved P06DB ISO/SAE Reserved **P06DC** ISO/SAE Reserved P06DD ISO/SAE Reserved **P06DE** ISO/SAE Reserved **P06DF** ISO/SAE Reserved P06E0 ISO/SAE Reserved P06E1 ISO/SAE Reserved P06E2 ISO/SAE Reserved P06E3 ISO/SAE Reserved P06E4 ISO/SAE Reserved P06E5 ISO/SAE Reserved P06E6 ISO/SAE Reserved P06E7 ISO/SAE Reserved P06E8 ISO/SAE Reserved P06E9 ISO/SAE Reserved P06EA ISO/SAE Reserved P06EB ISO/SAE Reserved **P06EC** ISO/SAE Reserved **P06ED** ISO/SAE Reserved **P06EE** ISO/SAE Reserved **P06EF** ISO/SAE Reserved P06F0 ISO/SAE Reserved



Codes	Definition
P06F1	ISO/SAE Reserved
P06F2	ISO/SAE Reserved
P06F3	ISO/SAE Reserved
P06F4	ISO/SAE Reserved
P06F5	ISO/SAE Reserved
P06F6	ISO/SAE Reserved
P06F7	ISO/SAE Reserved
P06F8	ISO/SAE Reserved
P06F9	ISO/SAE Reserved
P06FA	ISO/SAE Reserved
	Transmission Control System TCS Malfunction
	Transmission Control System Range/Performance
	Transmission Control System Electrical
	Torque Converter/Brake Switch B Circuit Malfunction
	Clutch Switch Input Circuit Malfunction
	Transmission Range Sensor Circuit Malfunction (PRNDL input)
	Transmission Range Sensor "A" Circuit Range/Performance
	Transmission Range Sensor "A" Circuit Low
	Transmission Range Sensor "A" Circuit High
	Transmission Range Sensor "A" Circuit High Transmission Fluid Level Sensor Circuit
	Transmission Fluid Level Sensor Circuit Range/Performance
	Transmission Fluid Level Sensor Circuit Low
	Transmission Fluid Level Sensor Circuit High
	Transmission Fluid Level Sensor Circuit Intermittent/Erratic
	Transmission Fluid Level Too Low
P0710	Transmission Fluid Temperature Sensor A Circuit Malfunction
	Transmission Fluid Temperature Sensor A Circuit Range/Performance
P0712	Transmission Fluid Temperature Sensor A Circuit Low Input
<b>P0713</b>	Transmission Fluid Temperature Sensor A Circuit High Input
P0714	Transmission Fluid Temperature Sensor A Circuit Intermittent
P0715	Input/Turbine Speed Sensor A Circuit
P0716	Input/Turbine Speed Sensor A Circuit Range/Performance
<b>P0717</b>	Input/Turbine Speed Sensor A Circuit No Signal
P0718	Input/Turbine Speed Sensor A Circuit Intermittent
	Torque Converter/Brake Switch B Circuit Low
	Transmission Mode Switch A Circuit
	Transmission Mode Switch A Circuit Low
<b>P071C</b>	Transmission Mode Switch A Circuit High



# Codes

## Definition

- P071D Transmission Mode Switch B Circuit
- **P071E** Transmission Mode Switch B Circuit Low
- P071F Transmission Mode Switch B Circuit High
- P0720 Output Speed Sensor Circuit Malfunction
- **P0721** Output Speed Sensor Range/Performance
- **P0722** Output Speed Sensor No Signal
- **P0723** Output Speed Sensor Intermittent
- **P0724** Torgue Converter/Brake Switch B Circuit High
- **P0725** Engine Speed Input Circuit Malfunction
- **P0726** Engine Speed Input Circuit Range/Performance
- P0727 Engine Speed Input Circuit No Signal
- P0728 Engine Speed Input Circuit Intermittent
- P0729 Gear 6 Incorrect Ratio
- P072A Stuck In Neutral
- **P072B** Stuck In Reverse
- **P072C** Stuck In Gear 1
- P072E Stuck In Gear 3
- **P072F** Stuck In Gear 4
- P0730 Incorrect Gear Ratio
- **P0731** Gear 1 Incorrect Ratio
- P0732 Gear 2 Incorrect Ratio
- P0733 Gear 3 Incorrect Ratio
- **P0734** Gear 4 Incorrect Ratio
- P0735 Gear 5 Incorrect Ratio
- P0736 Reverse Incorrect Gear Ratio
- **P0737** TCM Engine Speed Output Circuit
- P0738 TCM Engine Speed Output Circuit Low
- **P0739** TCM Engine Speed Output Circuit High
- P073A Stuck In Gear 5
- P073B Stuck In Gear 6
- P073C Stuck In Gear 7
- **P073D** Unable to engage Neutral
- **P073E** Unable to engage Reverse
- **P073F** Unable to engage Gear 1
- P0740 Torque Converter Clutch Circuit Malfunction
- **P0741** Torgue Converter Clutch Circuit Performance or Stuck Off
- P0742 Torque Converter Clutch Circuit Stuck On
- P0743 Torgue Converter Clutch (TCC) Solenoid Circuit Electrical
- P0744 Torque Converter Clutch Circuit Intermittent
- **P0745** Pressure Control Solenoid A Malfunction
- **P0746** Pressure Control Solenoid A Performance Or Stuck Off
- **P0747** Pressure Control Solenoid A Stuck On
- **P0748** Pressure Control Solenoid A Electrical
- **P0749** Pressure Control Solenoid A Intermittent



Codes	Definition
P074A	Unable to engage Gear 2
P074B	Unable to engage Gear 3
<b>P074C</b>	Unable to engage Gear 4
P074D	Unable to engage Gear 5
P074E	Unable to engage Gear 6
P074F	Unable to engage Gear 7
P0750	Shift Solenoid A Malfunction
P0751	Shift Solenoid A Performance / Stuck Off
P0752	Shift Solenoid A Stuck On
P0753	Shift Solenoid A Electrical
	Shift Solenoid A Intermittent
	Shift Solenoid B Malfunction
	Shift Solenoid B Performance / Stuck Off
	Shift Solenoid B Stuck On
	Shift Solenoid B Electrical
	Shift Solenoid B Intermittent
	Shift Solenoid G Malfunction
	Shift Solenoid G Performance / Stuck Off
	Shift Solenoid G Stuck On
	Shift Solenoid G Electrical
	Shift Solenoid G Intermittent
	Transmission Fluid Level Too High
	Shift Solenoid C Malfunction
	Shift Solenoid C Performance / Stuck Off
	Shift Solenoid C Stuck On
	Shift Solenoid C Electrical Shift Solenoid C Intermittent
P0765	
	Shift Solenoid D Performance / Stuck Off
	Shift Solenoid D Stuck On
	Shift Solenoid D Electrical
	Shift Solenoid D Intermittent
	Shift Solenoid H Malfunction
	Shift Solenoid H Performance / Stuck Off
	Shift Solenoid H Stuck On
	Shift Solenoid H Electrical
	Shift Solenoid H Intermittent
P076F	Gear 6 Incorrect Ratio
	Shift Solenoid E Malfunction
P0771	Shift Solenoid E Performance / Stuck Off
	Shift Solenoid E Stuck On
P0773	Shift Solenoid E Electrical
P0774	Shift Solenoid E Intermittent
P0775	Pressure Control Solenoid B Malfunction



Codes Definition P0776 Pressure Control Solenoid B Performance Or Stuck Off **P0777** Pressure Control Solenoid B Stuck On **P0778** Pressure Control Solenoid B Electrical **P0779** Pressure Control Solenoid B Intermittent P077A Output Speed Sensor Circuit - Loss Of Direction Signal P077B Output Speed Sensor Circuit - Direction Signal **P077C** ISO/SAE Reserved **P077D** ISO/SAE Reserved P077E ISO/SAE Reserved **P077F** ISO/SAE Reserved P0780 Shift Malfunction P0781 1-2 Shift Malfunction P0782 2-3 Shift Malfunction P0783 3-4 Shift Malfunction P0784 4-5 Shift Malfunction P0785 Shift Timing Solenoid A Malfunction P0786 Shift Timing Solenoid A Range/Performance P0787 Shift Timing Solenoid A Low P0788 Shift Timing Solenoid A High P0789 Shift Timing Solenoid A Intermittent P078A Shift Timing Solenoid B Malfunction **P078B** Shift Timing Solenoid B Range/Performance **P078C** Shift Timing Solenoid B Low **P078D** Shift Timing Solenoid B High **P078E** Shift Timing Solenoid B Intermittent **P0790** Normal/Performance Switch Circuit Malfunction P0791 Intermediate Shaft Speed Sensor A Circuit **P0792** Intermediate Shaft Speed Sensor A Circuit Range/Performance **P0793** Intermediate Shaft Speed Sensor A Circuit No Signal **P0794** Intermediate Shaft Speed Sensor A Circuit Intermittent **P0795** Pressure Control Solenoid C Malfunction **P0796** Pressure Control Solenoid C Performance Or Stuck Off P0797 Pressure Control Solenoid C Stuck On P0798 Pressure Control Solenoid C Electrical **P0799** Pressure Control Solenoid C Intermittent **P079A** Transmission Friction Element A Slip Detected P079B Transmission Friction Element B Slip Detected P079C Transmission Friction Element C Slip Detected P079D Transmission Friction Element D Slip Detected **P079E** Transmission Friction Element E Slip Detected P079F Transmission Friction Element F Slip Detected P07A0 Transmission Friction Element G Slip Detected **P07A1** Transmission Friction Element H Slip Detected P07A2 Transmission Friction Element A Performance/Stuck Off



Codes Definition **P07A3** Transmission Friction Element A Stuck On **P07A4** Transmission Friction Element B Performance/Stuck Off **P07A5** Transmission Friction Element B Stuck On **P07A6** Transmission Friction Element C Performance/Stuck Off P07A7 Transmission Friction Element C Stuck On **P07A8** Transmission Friction Element D Performance/Stuck Off P07A9 Transmission Friction Element D Stuck On **P07AA** Transmission Friction Element E Performance/Stuck Off **P07AB** Transmission Friction Element E Stuck On **P07AC** Transmission Friction Element F Performance/Stuck Off **P07AD** Transmission Friction Element F Stuck On **P07AE** Transmission Friction Element G Performance/Stuck Off **P07AF** Transmission Friction Element G Stuck On P07B0 Transmission Friction Element H Performance/Stuck Off P07B1 Transmission Friction Element H Stuck On P07B2 Transmission Park Position Sensor/Switch A Circuit Open P07B3 Transmission Park Position Sensor/Switch A Circuit Low **P07B4** Transmission Park Position Sensor/Switch A Circuit High P07B5 Transmission Park Position Sensor/Switch A Circuit Performance Low **P07B6** Transmission Park Position Sensor/Switch A Circuit Performance High P07B7 Transmission Park Position Sensor/Switch A Circuit Intermittent/Erratic P07B8 Transmission Park Position Sensor/Switch B Circuit Open P07B9 Transmission Park Position Sensor/Switch B Circuit Low **P07BA** Transmission Park Position Sensor/Switch B Circuit High **P07BB** Transmission Park Position Sensor/Switch B Circuit Performance Low **P07BC** Transmission Park Position Sensor/Switch B Circuit Performance High **P07BD** Transmission Park Position Sensor/Switch B Circuit Intermittent/Erratic **P07BE** Transmission Park Position Sensor/Switch A/B Circuit Correlation **P07BF** ISO/SAE Reserved **P07C0** ISO/SAE Reserved P07C1 ISO/SAE Reserved **P07C2** ISO/SAE Reserved P07C3 ISO/SAE Reserved P07C4 ISO/SAE Reserved P07C5 ISO/SAE Reserved **P07C6** ISO/SAE Reserved P07C7 ISO/SAE Reserved P07C8 ISO/SAE Reserved P07C9 ISO/SAE Reserved P07CA ISO/SAE Reserved P07CB ISO/SAE Reserved **P07CC** ISO/SAE Reserved **P07CD** ISO/SAE Reserved P07CE ISO/SAE Reserved



Codes P07CF ISO/SAE Reserved **P07D0** ISO/SAE Reserved P07D1 ISO/SAE Reserved P07D2 ISO/SAE Reserved P07D3 ISO/SAE Reserved P07D4 ISO/SAE Reserved P07D5 ISO/SAE Reserved **P07D6** ISO/SAE Reserved P07D7 ISO/SAE Reserved **P07D8** ISO/SAE Reserved P07D9 ISO/SAE Reserved P07DA ISO/SAE Reserved **P07DB** ISO/SAE Reserved **P07DC** ISO/SAE Reserved **P07DD** ISO/SAE Reserved **P07DE** ISO/SAE Reserved **P07DF** ISO/SAE Reserved P07E0 ISO/SAE Reserved P07E1 ISO/SAE Reserved P07E2 ISO/SAE Reserved P07E3 ISO/SAE Reserved P07E4 ISO/SAE Reserved P07E5 ISO/SAE Reserved P07E6 ISO/SAE Reserved P07E7 ISO/SAE Reserved P07E8 ISO/SAE Reserved P07E9 ISO/SAE Reserved **P07EA** ISO/SAE Reserved P07EB ISO/SAE Reserved **P07EC** ISO/SAE Reserved P07ED ISO/SAE Reserved **P07EE** ISO/SAE Reserved P07EF ISO/SAE Reserved P07F0 ISO/SAE Reserved P07F1 ISO/SAE Reserved P07F2 ISO/SAE Reserved P07F3 ISO/SAE Reserved P07F4 ISO/SAE Reserved P07F5 ISO/SAE Reserved P07F6 ISO/SAE Reserved P07F7 ISO/SAE Reserved P07F8 ISO/SAE Reserved **P07F9** ISO/SAE Reserved P07FA ISO/SAE Reserved

### Definition

Definition Codes **P07FB** ISO/SAE Reserved **P07FC** ISO/SAE Reserved **P07FD** ISO/SAE Reserved **P07FE** ISO/SAE Reserved P07FF ISO/SAE Reserved **P0800** Transfer Case Control System (MIL Request) P0801 Reverse Inhibit Control Circuit Malfunction P0802 Transmission Control System MIL Request Circuit/Open P0803 1-4 Upshift (Skip Shift) Solenoid Control Circuit Malfunction P0804 1-4 Upshift (Skip Shift) Lamp Control Circuit Malfunction P0805 Clutch Position Sensor Circuit P0806 Clutch Position Sensor Circuit Range/Performance P0807 Clutch Position Sensor Circuit Low **P0808** Clutch Position Sensor Circuit High P0809 Clutch Position Sensor Circuit Intermittent **P080A** Clutch Position Not Learned P080B Upshift/Skip Shift Solenoid Control Circuit Range/Performance P080C Upshift/Skip Shift Solenoid Control Circuit Low P080D Upshift/Skip Shift Solenoid Control Circuit High **P080E** ISO/SAE Reserved P080F ISO/SAE Reserved **P0810** Clutch Position Control Error **P0811** Excessive Clutch Slippage **P0812** Reverse Input Circuit P0813 Reverse Output Circuit **P0814** Transmission Range Display Circuit P0815 Upshift Switch Circuit P0816 Downshift Switch Circuit **P0817** Starter Disable Circuit **P0818** Driveline Disconnect Switch Input Circuit P0819 Up and Down Shift Switch to Transmission Range Correlation **P081A** Starter Disable Circuit Low **P081B** Starter Disable Circuit High P081C Park Input Circuit P081D Neutral Input Circuit **P081E** Excessive Clutch B Slippage P081F ISO/SAE Reserved **P0820** Gear Lever X-Y Position Sensor Circuit **P0821** Gear Lever X Position Circuit **P0822** Gear Lever Y Position Circuit **P0823** Gear Lever X Position Circuit Intermittent **P0824** Gear Lever Y Position Circuit Intermittent **P0825** Gear Lever Push-Pull Switch (Shift Anticipate)

P0826 Up and Down Shift Switch Circuit



Codes	Definition
P0827	Up and Down Shift Switch Circuit Low
P0828	Up and Down Shift Switch Circuit High
P0829	5-6 Shift Malfunction
P082A	Gear Lever X Position Circuit Range/Performance
P082B	Gear Lever X Position Circuit Low
P082C	Gear Lever X Position Circuit High
	Gear Lever Y Position Circuit Range/Performance
	Gear Lever Y Position Circuit Low
	Gear Lever Y Position Circuit High
	Clutch Pedal Switch A Circuit
	Clutch Pedal Switch A Circuit Low
	Clutch Pedal Switch A Circuit High
	Clutch Pedal Switch B Circuit
	Clutch Pedal Switch B Circuit Low
	Clutch Pedal Switch B Circuit High Four Wheel Drive (4WD) Switch Circuit
	Four Wheel Drive (4WD) Switch Circuit Range/Performance
	Four Wheel Drive (4WD) Switch Circuit Low
	Four Wheel Drive (4WD) Switch Circuit High
	Transmission Fluid Pressure Sensor / Switch "G" Circuit
	Transmission Fluid Pressure Sensor / Switch "G" Circuit Range Performance
	Transmission Fluid Pressure Sensor / Switch "G" Circuit Low
P083D	Transmission Fluid Pressure Sensor / Switch "G" Circuit High
P083E	Transmission Fluid Pressure Sensor / Switch "G" Circuit Intermittent
P083F	Clutch Pedal Switch A/B Correlation
P0840	Transmission Fluid Pressure Sensor / Switch "A" Circuit
P0841	Transmission Fluid Pressure Sensor / Switch "A" Circuit Range Performance Rationality
	Transmission Fluid Pressure Sensor / Switch "A" Circuit Low
	Transmission Fluid Pressure Sensor / Switch "A" Circuit High
	Transmission Fluid Pressure Sensor / Switch A Circuit Intermittent
P0845	Transmission Fluid Pressure Sensor / Switch "B" Circuit
P0846	Transmission Fluid Pressure Sensor / Switch "B" Circuit Range Performance Rationality
	Transmission Fluid Pressure Sensor / Switch "B" Circuit Low
	Transmission Fluid Pressure Sensor / Switch "B" Circuit High
	Transmission Fluid Pressure Sensor / Switch B Circuit Intermittent
	Transmission Fluid Pressure Sensor / Switch "H" Circuit
	Transmission Fluid Pressure Sensor / Switch "H" Circuit Range Performance
	Transmission Fluid Pressure Sensor / Switch "H" Circuit Low
	Transmission Fluid Pressure Sensor / Switch "H" Circuit High Transmission Fluid Pressure Sensor / Switch "H" Circuit Intermittent
	Park/Neutral Switch Output Circuit
	Park/Neutral Switch Input Circuit
10000	rangitoutal omiton input onoult



Codes Definition **P0851** Park/Neutral Switch Input Circuit Low P0852 Park/Neutral Switch Input Circuit High **P0853** Drive Switch Input Circuit **P0854** Drive Switch Input Circuit Low **P0855** Drive Switch Input Circuit High **P0856** Traction Control Input Signal **P0857** Traction Control Input Signal Range/Performance **P0858** Traction Control Input Signal Low **P0859** Traction Control Input Signal High P085A Gear Shift Control Module "B" Communication Circuit P085B Gear Shift Control Module "B" Communication Circuit Low P085C Gear Shift Control Module "B" Communication Circuit High P085D Gear Shift Control Module "A" Performance **P085E** Gear Shift Control Module "B" Performance **P085F** ISO/SAE Reserved **P0860** Gear Shift Control Module "A" Communication Circuit P0861 Gear Shift Control Module "A" Communication Circuit Low P0862 Gear Shift Control Module "A" Communication Circuit High P0863 TCM Communication Circuit **P0864** TCM Communication Circuit Range/Performance P0865 TCM Communication Circuit Low P0866 TCM Communication Circuit High **P0867** Transmission Fluid Pressure (TFP) **P0868** Transmission Fluid Pressure (TFP) Low **P0869** Transmission Fluid Pressure (TFP) High P086A ISO/SAE Reserved P086B ISO/SAE Reserved **P086C** ISO/SAE Reserved P086D ISO/SAE Reserved P086E ISO/SAE Reserved **P086F** ISO/SAE Reserved P0870 Transmission Fluid Pressure Sensor / Switch "C" Circuit **P0871** Transmission Fluid Pressure Sensor / Switch "C" Circuit Range Performance P0872 Transmission Fluid Pressure Sensor / Switch "C" Circuit Low P0873 Transmission Fluid Pressure Sensor / Switch "C" Circuit High P0874 Transmission Fluid Pressure Sensor / Switch "C" Circuit Intermittent P0875 Transmission Fluid Pressure Sensor / Switch D Circuit Transmission Fluid Pressure Sensor / Switch D Circuit Range Performance P0876 Rationality P0877 Transmission Fluid Pressure Sensor / Switch D Circuit Low **P0878** Transmission Fluid Pressure Sensor / Switch D Circuit High P0879 Transmission Fluid Pressure Sensor / Switch D Circuit Intermittent **P087A** ISO/SAE Reserved P087B ISO/SAE Reserved



Definition Codes P087C ISO/SAE Reserved P087D ISO/SAE Reserved P087E ISO/SAE Reserved **P087F** ISO/SAE Reserved **P0880** TCM Power Input Signal **P0881** TCM Power Input Signal Range/Performance **P0882** TCM Power Input Signal Low **P0883** TCM Power Input Signal High **P0884** TCM Power Input Signal Intermittent P0885 TCM Power Relay Control Circuit /Open P0886 TCM Power Relay Control Circuit Low P0887 TCM Power Relay Control Circuit High P0888 TCM Power Relay Sense Circuit **P0889** TCM Power Relay Sense Circuit Range/Performance P088A Transmission Fluid Filter Deteriorated **P088B** Transmission Fluid Filter Very Deteriorated P088C ISO/SAE Reserved **P088D** ISO/SAE Reserved P088E ISO/SAE Reserved **P088F** ISO/SAE Reserved **P0890** TCM Power Relay Sense Circuit Low **P0891** TCM Power Relay Sense Circuit High P0892 TCM Power Relay Sense Circuit Intermittent **P0893** Multiple Gears Engaged **P0894** Transmission Component Slipping P0895 Shift Time Too Short P0896 Shift Time Too Long P0897 Transmission Fluid Deteriorated P0898 Transmission Control System MIL Request Circuit Low P0899 Transmission Control System MIL Request Circuit High P08A0 ISO/SAE Reserved P08A1 ISO/SAE Reserved P08A2 ISO/SAE Reserved P08A3 ISO/SAE Reserved P08A4 ISO/SAE Reserved P08A5 ISO/SAE Reserved P08A6 ISO/SAE Reserved P08A7 ISO/SAE Reserved P08A8 ISO/SAE Reserved P08A9 ISO/SAE Reserved P08AA ISO/SAE Reserved **P08AB** ISO/SAE Reserved **P08AC** ISO/SAE Reserved P08AD ISO/SAE Reserved



Codes PO8AE ISO/SAE Reserved **P08AF** ISO/SAE Reserved P08B0 ISO/SAE Reserved P08B1 ISO/SAE Reserved P08B2 ISO/SAE Reserved P08B3 ISO/SAE Reserved P08B4 ISO/SAE Reserved **P08B5** ISO/SAE Reserved P08B6 ISO/SAE Reserved **P08B7** ISO/SAE Reserved P08B8 ISO/SAE Reserved P08B9 ISO/SAE Reserved P08BA ISO/SAE Reserved P08BB ISO/SAE Reserved **P08BC** ISO/SAE Reserved **P08BD** ISO/SAE Reserved P08BE ISO/SAE Reserved **P08BF** ISO/SAE Reserved P08C0 ISO/SAE Reserved P08C1 ISO/SAE Reserved P08C2 ISO/SAE Reserved P08C3 ISO/SAE Reserved P08C4 ISO/SAE Reserved P08C5 ISO/SAE Reserved P08C6 ISO/SAE Reserved P08C7 ISO/SAE Reserved P08C8 ISO/SAE Reserved P08C9 ISO/SAE Reserved **P08CA** ISO/SAE Reserved **P08CB** ISO/SAE Reserved **P08CC** ISO/SAE Reserved **P08CD** ISO/SAE Reserved PO8CE ISO/SAE Reserved **P08CF** ISO/SAE Reserved P08D0 ISO/SAE Reserved P08D1 ISO/SAE Reserved P08D2 ISO/SAE Reserved P08D3 ISO/SAE Reserved P08D4 ISO/SAE Reserved P08D5 ISO/SAE Reserved P08D6 ISO/SAE Reserved P08D7 ISO/SAE Reserved **P08D8** ISO/SAE Reserved P08D9 ISO/SAE Reserved

#### Definition



Codes **P08DA** ISO/SAE Reserved **P08DB** ISO/SAE Reserved **P08DC** ISO/SAE Reserved **P08DD** ISO/SAE Reserved **P08DE** ISO/SAE Reserved **P08DF** ISO/SAE Reserved P08E0 ISO/SAE Reserved **P08E1** ISO/SAE Reserved P08E2 ISO/SAE Reserved P08E3 ISO/SAE Reserved P08E4 ISO/SAE Reserved P08E5 ISO/SAE Reserved P08E6 ISO/SAE Reserved P08E7 ISO/SAE Reserved P08E8 ISO/SAE Reserved P08E9 ISO/SAE Reserved PO8EA ISO/SAE Reserved **P08EB** ISO/SAE Reserved **P08EC** ISO/SAE Reserved **P08ED** ISO/SAE Reserved PO8EE ISO/SAE Reserved **P08EF** ISO/SAE Reserved P08F0 ISO/SAE Reserved P08F1 ISO/SAE Reserved P08F2 ISO/SAE Reserved P08F3 ISO/SAE Reserved P08F4 ISO/SAE Reserved P08F5 ISO/SAE Reserved P08F6 ISO/SAE Reserved P08F7 ISO/SAE Reserved P08F8 ISO/SAE Reserved P08F9 ISO/SAE Reserved P08FA ISO/SAE Reserved P08FB ISO/SAE Reserved **P08FC** ISO/SAE Reserved **P08FD** ISO/SAE Reserved **P08FE** ISO/SAE Reserved P08FF ISO/SAE Reserved P0900 Clutch Actuator Circuit/Open **P0901** Clutch Actuator Circuit Range/Performance P0902 Clutch Actuator Circuit Low **P0903** Clutch Actuator Circuit High **P0904** Gate Select Position Circuit

**P0905** Gate Select Position Circuit Range/Performance



## Definition

Codes	Definition
P0906	Gate Select Position Circuit Low
P0907	Gate Select Position Circuit High
P0908	Gate Select Position Circuit Intermittent
P0909	Gate Select Control Error
<b>P090A</b>	ISO/SAE Reserved
P090B	ISO/SAE Reserved
<b>P090C</b>	ISO/SAE Reserved
P090D	ISO/SAE Reserved
<b>P090E</b>	ISO/SAE Reserved
	ISO/SAE Reserved
	Gate Select Actuator Circuit/Open
	Gate Select Actuator Circuit Range/Performance
	Gate Select Actuator Circuit Low
	Gate Select Actuator Circuit High
	Gear Shift Position Circuit
	Gear Shift Position Circuit Range/Performance
	Gear Shift Position Circuit Low
	Gear Shift Position Circuit High
	Gear Shift Position Circuit Intermittent
	Gear Shift Position Control Error
	ISO/SAE Reserved ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
P0920	Gear Shift Forward Actuator Circuit/Open
P0921	Gear Shift Forward Actuator Circuit Range/Performance
P0922	Gear Shift Forward Actuator Circuit Low
P0923	Gear Shift Forward Actuator Circuit High
P0924	Gear Shift Reverse Actuator Circuit/Open
	Gear Shift Reverse Actuator Circuit Range/Performance
	Gear Shift Reverse Actuator Circuit Low
	Gear Shift Reverse Actuator Circuit High
	Gear Shift Lock Solenoid/Actuator Control Circuit "A"/Open
	Gear Shift Lock Solenoid/Actuator Control Circuit "A" Range/Performance
	Gear Shift Lock Solenoid/Actuator Control Circuit "B"/Open
	Gear Shift Lock Solenoid/Actuator Control Circuit "B" Range/Performance Gear Shift Lock Solenoid/Actuator Control Circuit "B" Low
	Gear Shift Lock Solenoid/Actuator Control Circuit "B" High ISO/SAE Reserved
	ISO/SAE Reserved
	Gear Shift Lock Solenoid/Actuator Control Circuit "A" Low
	Gear Shift Lock Solenoid/Actuator Control Circuit "A" High
10331	Sour onit Look obtenougheruator control circuit A Trigit



	<b>Definition</b> Hydraulic Pressure Sensor Circuit
	Hydraulic Pressure Sensor Range/Performance
	Hydraulic Pressure Sensor Circuit Low
	Hydraulic Pressure Sensor Circuit High
	Hydraulic Pressure Sensor Circuit Intermittent
	Hydraulic Oil Temperature Sensor Circuit
	Hydraulic Oil Temperature Sensor Range/Performance
	Hydraulic Oil Temperature Sensor Circuit Low
	ISO/SAE Reserved
	Hydraulic Oil Temperature Sensor Circuit High
	Hydraulic Oil Temperature Sensor Circuit Intermittent
	Hydraulic Pressure Unit
	Hydraulic Pressure Unit Cycling Period Too Short
	Hydraulic Pressure Unit Loss of Pressure
	Hydraulic Pump Relay Circuit/Open
	Hydraulic Pump Relay Circuit Range/Performance
	Hydraulic Pump Relay Circuit Low
	Hydraulic Pump Relay Circuit High
	Auto Shift Manual Adaptive Learning Not Complete
	ISO/SAE Reserved
<b>P094E</b>	ISO/SAE Reserved
P094F	ISO/SAE Reserved
P0950	Auto Shift Manual Control Circuit
P0951	Auto Shift Manual Control Circuit Range/Performance
P0952	Auto Shift Manual Control Circuit Low
P0953	Auto Shift Manual Control Circuit High
P0954	Auto Shift Manual Control Circuit Intermittent
P0955	Auto Shift Manual Mode Circuit
P0956	Auto Shift Manual Mode Circuit Range/Performance
P0957	Auto Shift Manual Mode Circuit Low
P0958	Auto Shift Manual Mode Circuit High
P0959	Auto Shift Manual Mode Circuit Intermittent
P095A	ISO/SAE Reserved
P095B	ISO/SAE Reserved
<b>P095C</b>	ISO/SAE Reserved
P095D	ISO/SAE Reserved



Codes	Definition
P095E	ISO/SAE Reserved
P095F	ISO/SAE Reserved
P0960	Pressure Control Solenoid A Control Circuit/Open
P0961	Pressure Control Solenoid A Control Circuit Range/Performance
P0962	Pressure Control Solenoid A Control Circuit Low
	Pressure Control Solenoid A Control Circuit High
	Pressure Control Solenoid B Control Circuit/Open
	Pressure Control Solenoid B Control Circuit Range/Performance
	Pressure Control Solenoid B Control Circuit Low
	Pressure Control Solenoid B Control Circuit High
	Pressure Control Solenoid C Control Circuit/Open
	Pressure Control Solenoid C Control Circuit Range/Performance
	ISO/SAE Reserved
	Pressure Control Solenoid C Control Circuit Low
	Pressure Control Solenoid C Control Circuit High
	Shift Solenoid 'A' Control Circuit Range/Performance
	Shift Solenoid 'A' Control Circuit Low
	Shift Solenoid "A" Control Circuit High
	Shift Solenoid "B" Control Circuit Range/Performance
	Shift Solenoid "B" Control Circuit Low
	Shift Solenoid "B" Control Circuit High Shift Solenoid "C" Control Circuit Range/Performance
	Shift Solenoid "C" Control Circuit Low
	ISO/SAE Reserved
	Shift Solenoid "C" Control Circuit High
	Shift Solenoid "D" Control Circuit Range/Performance
	Shift Solenoid "D" Control Circuit Low
P0983	Shift Solenoid "D" Control Circuit High
	Shift Solenoid "E" Control Circuit Range/Performance
	Shift Solenoid "E" Control Circuit Low
P0986	Shift Solenoid "E" Control Circuit High
P0987	Transmission Fluid Pressure Sensor / Switch "E" Circuit
P0988	Transmission Fluid Pressure Sensor / Switch "E" Circuit Range Performance
P0989	Transmission Fluid Pressure Sensor / Switch "E" Circuit Low



Codes Definition P098A ISO/SAE Reserved P098B ISO/SAE Reserved **P098C** ISO/SAE Reserved **P098D** ISO/SAE Reserved P098E ISO/SAE Reserved **P098F** ISO/SAE Reserved P0990 Transmission Fluid Pressure Sensor / Switch "E" Circuit High P0991 Transmission Fluid Pressure Sensor / Switch "E" Circuit Intermittent P0992 Transmission Fluid Pressure Sensor / Switch "F" Circuit P0993 Transmission Fluid Pressure Sensor / Switch "F" Circuit Range Performance P0994 Transmission Fluid Pressure Sensor / Switch "F" Circuit Low P0995 Transmission Fluid Pressure Sensor / Switch "F" Circuit High P0996 Transmission Fluid Pressure Sensor / Switch "F" Circuit Intermittent P0997 Shift Solenoid "F" Control Circuit Range/Performance P0998 Shift Solenoid "F" Control Circuit Low P0999 Shift Solenoid "F" Control Circuit High P099A Shift Solenoid "G" Control Circuit Range/Performance P099B Shift Solenoid "G" Control Circuit Low **P099C** Shift Solenoid "G" Control Circuit High P099D Shift Solenoid "H" Control Circuit Range/Performance P099E Shift Solenoid "H" Control Circuit Low P099F Shift Solenoid "H" Control Circuit High P09A0 ISO/SAE Reserved P09A1 ISO/SAE Reserved P09A2 ISO/SAE Reserved P09A3 ISO/SAE Reserved P09A4 ISO/SAE Reserved **P09A5** ISO/SAE Reserved P09A6 ISO/SAE Reserved P09A7 ISO/SAE Reserved P09A8 ISO/SAE Reserved **P09A9** ISO/SAE Reserved **P09AA** ISO/SAE Reserved P09AB ISO/SAE Reserved **P09AC** ISO/SAE Reserved **P09AD** ISO/SAE Reserved **P09AE** ISO/SAE Reserved **P09AF** ISO/SAE Reserved P09B0 ISO/SAE Reserved P09B1 ISO/SAE Reserved P09B2 ISO/SAE Reserved P09B3 ISO/SAE Reserved P09B4 ISO/SAE Reserved P09B5 ISO/SAE Reserved



Codes P09B6 ISO/SAE Reserved **P09B7** ISO/SAE Reserved P09B8 ISO/SAE Reserved P09B9 ISO/SAE Reserved P09BA ISO/SAE Reserved P09BB ISO/SAE Reserved P09BC ISO/SAE Reserved **P09BD** ISO/SAE Reserved P09BE ISO/SAE Reserved **P09BF** ISO/SAE Reserved P09C0 ISO/SAE Reserved P09C1 ISO/SAE Reserved P09C2 ISO/SAE Reserved P09C3 ISO/SAE Reserved P09C4 ISO/SAE Reserved P09C5 ISO/SAE Reserved P09C6 ISO/SAE Reserved P09C7 ISO/SAE Reserved P09C8 ISO/SAE Reserved **P09C9** ISO/SAE Reserved **P09CA** ISO/SAE Reserved **P09CB** ISO/SAE Reserved **P09CC** ISO/SAE Reserved **P09CD** ISO/SAE Reserved **P09CE** ISO/SAE Reserved **P09CF** ISO/SAE Reserved P09D0 ISO/SAE Reserved P09D1 ISO/SAE Reserved P09D2 ISO/SAE Reserved **P09D3** ISO/SAE Reserved P09D4 ISO/SAE Reserved **P09D5** ISO/SAE Reserved P09D6 ISO/SAE Reserved P09D7 ISO/SAE Reserved P09D8 ISO/SAE Reserved P09D9 ISO/SAE Reserved **P09DA** ISO/SAE Reserved **P09DB** ISO/SAE Reserved **P09DC** ISO/SAE Reserved **P09DD** ISO/SAE Reserved **P09DE** ISO/SAE Reserved **P09DF** ISO/SAE Reserved **P09E0** ISO/SAE Reserved P09E1 ISO/SAE Reserved

#### Definition



Codes Definition **P09E2** ISO/SAE Reserved P09E3 ISO/SAE Reserved **P09E4** ISO/SAE Reserved **P09E5** ISO/SAE Reserved P09E6 ISO/SAE Reserved **P09E7** ISO/SAE Reserved P09E8 ISO/SAE Reserved **P09E9** ISO/SAE Reserved **P09EA** ISO/SAE Reserved **P09EB** ISO/SAE Reserved **P09EC** ISO/SAE Reserved **P09ED** ISO/SAE Reserved **P09EE** ISO/SAE Reserved **P09EF** ISO/SAE Reserved P09F0 ISO/SAE Reserved **P09F1** ISO/SAE Reserved P09F2 ISO/SAE Reserved P09F3 ISO/SAE Reserved P09F4 ISO/SAE Reserved **P09F5** ISO/SAE Reserved P09F6 ISO/SAE Reserved P09F7 ISO/SAE Reserved P09F8 ISO/SAE Reserved **P09F9** ISO/SAE Reserved **P09FA** ISO/SAE Reserved **P09FB** ISO/SAE Reserved **P09FC** ISO/SAE Reserved **P09FD** ISO/SAE Reserved **P09FE** ISO/SAE Reserved **P09FF** ISO/SAE Reserved **POA00** Motor Electronics Coolant Temperature Sensor (CTS) Circuit Motor Electronics Coolant Temperature Sensor (CTS) Circuit **P0A01** Range/Performance POA02 Motor Electronics Coolant Temperature Sensor (CTS) Circuit Low **POA03** Motor Electronics Coolant Temperature Sensor (CTS) Circuit High POA04 Motor Electronics Coolant Temperature Sensor (CTS) Circuit Intermittent POA05 Motor Electronics Coolant Pump "A" Control Circuit/Open **P0A06** Motor Electronics Coolant Pump "A" Control Circuit Low POA07 Motor Electronics Coolant Pump "A" Control Circuit High POA08 DC/DC Converter Status Circuit POA09 DC/DC Converter Status Circuit Low **POAOA** High Voltage System Interlock Circuit **POA0B** High Voltage System Interlock Circuit Performance

**POAOC** High Voltage System Interlock Circuit Low



Codes Definition **POAOD** High Voltage System Interlock Circuit High **POAOE** High Voltage System Interlock Circuit Intermittent **POAOF** Engine Failed to Start **POA10** DC/DC Converter Status Circuit High POA11 DC/DC Converter Enable Circuit/Open **POA12** DC/DC Converter Enable Circuit Low **POA13** DC/DC Converter Enable Circuit High POA14 Engine Mount "A" Control Circuit/Open POA15 Engine Mount "A" Control Circuit Low POA16 Engine Mount "A" Control Circuit High POA17 Motor Torque Sensor Circuit **POA18** Motor Torque Sensor Circuit Range/Performance POA19 Motor Torque Sensor Circuit Low **POA1A** Generator Control Module POA1B Drive Motor "A" Control Module **POA1C** Drive Motor "B" Control Module **POA1D** Hybrid Powertrain Control Module **POA1E** Starter/Generator Control Module (SGCM) **POA1F** Battery Energy Control Module POA20 Motor Torque Sensor Circuit High P0A21 Motor Torque Sensor Circuit Intermittent POA22 Generator Torque Sensor Circuit P0A23 Generator Torque Sensor Circuit Range/Performance **POA24** Generator Torque Sensor Circuit Low **POA25** Generator Torque Sensor Circuit High P0A26 Generator Torque Sensor Circuit Intermittent POA27 Hybrid Battery Power Off Circuit P0A28 Hybrid Battery Power Off Circuit Low **POA29** Hybrid Battery Power Off Circuit High POA2A Drive Motor "A" Temperature Sensor Circuit **POA2B** Drive Motor "A" Temperature Sensor Circuit Range/Performance **POA2C** Drive Motor "A" Temperature Sensor Circuit Low POA2D Drive Motor "A" Temperature Sensor Circuit High POA2E Drive Motor "A" Temperature Sensor Circuit Intermittent **POA2F** Drive Motor "A" Over Temperature POA30 Drive Motor "B" Temperature Sensor Circuit **POA31** Drive Motor "B" Temperature Sensor Circuit Range/Performance POA32 Drive Motor "B" Temperature Sensor Circuit Low POA33 Drive Motor "B" Temperature Sensor Circuit High **P0A34** Drive Motor "B" Temperature Sensor Circuit Intermittent POA35 Drive Motor "B" Over Temperature POA36 Generator Temperature Sensor Circuit P0A37 Generator Temperature Sensor Circuit Range/Performance POA38 Generator Temperature Sensor Circuit Low



Codes Definition POA39 Generator Temperature Sensor Circuit High **POA3A** Generator Temperature Sensor Circuit Intermittent **POA3B** Generator Over Temperature **POA3C** Drive Motor "A" Inverter Over Temperature **POA3D** Drive Motor "B" Inverter Over Temperature **POA3E** Generator Inverter Over Temperature POA3F Drive Motor "A" Position Sensor Circuit **P0A40** Drive Motor "A" Position Sensor Circuit Range/Performance POA41 Drive Motor "A" Position Sensor Circuit Low P0A42 Drive Motor "A" Position Sensor Circuit High P0A43 Drive Motor "A" Position Sensor Circuit Intermittent **P0A44** Drive Motor "A" Position Sensor Circuit Overspeed POA45 Drive Motor "B" Position Sensor Circuit POA46 Drive Motor "B" Position Sensor Circuit Range/Performance POA47 Drive Motor "B" Position Sensor Circuit Low POA48 Drive Motor "B" Position Sensor Circuit High P0A49 Drive Motor "B" Position Sensor Circuit Intermittent **POA4A** Drive Motor "B" Position Sensor Circuit Overspeed POA4B Generator Position Sensor Circuit **POA4C** Generator Position Sensor Circuit Range/Performance POA4D Generator Position Sensor Circuit Low POA4E Generator Position Sensor Circuit High **POA4F** Generator Position Sensor Circuit Intermittent **P0A50** Generator Position Sensor Circuit Overspeed P0A51 Drive Motor "A" Current Sensor Circuit **P0A52** Drive Motor "A" Current Sensor Circuit Range/Performance POA53 Drive Motor "A" Current Sensor Circuit Low **P0A54** Drive Motor "A" Current Sensor Circuit High POA55 Drive Motor "B" Current Sensor Circuit **P0A56** Drive Motor "B" Current Sensor Circuit Range/Performance P0A57 Drive Motor "B" Current Sensor Circuit Low **POA58** Drive Motor "B" Current Sensor Circuit High **P0A59** Generator Current Sensor Circuit **POA5A** Generator Current Sensor Circuit Range/Performance POA5B Generator Current Sensor Circuit Low **POA5C** Generator Current Sensor Circuit High POA5D Drive Motor "A" Phase U Current POA5E Drive Motor "A" Phase U Current Low POA5F Drive Motor "A" Phase U Current High **P0A60** Drive Motor "A" Phase V Current POA61 Drive Motor "A" Phase V Current Low **P0A62** Drive Motor "A" Phase V Current High **P0A63** Drive Motor "A" Phase W Current POA64 Drive Motor "A" Phase W Current Low

DBDCodeX

Codes Definition **P0A65** Drive Motor "A" Phase W Current High POA66 Drive Motor "B" Phase U Current **P0A67** Drive Motor "B" Phase U Current Low P0A68 Drive Motor "B" Phase U Current High POA69 Drive Motor "B" Phase V Current **POA6A** Drive Motor "B" Phase V Current Low **POA6B** Drive Motor "B" Phase V Current High **POA6C** Drive Motor "B" Phase W Current **POA6D** Drive Motor "B" Phase W Current Low **POA6E** Drive Motor "B" Phase W Current High **P0A6F** Generator Phase U Current **P0A70** Generator Phase U Current Low **POA71** Generator Phase U Current High **P0A72** Generator Phase V Current P0A73 Generator Phase V Current Low **POA74** Generator Phase V Current High **P0A75** Generator Phase W Current P0A76 Generator Phase W Current Low **POA77** Generator Phase W Current High **P0A78** Drive Motor "A" Inverter Performance **POA79** Drive Motor "B" Inverter Performance **POA7A** Generator Inverter Performance **POA7B** Battery Energy Control Module Requested MIL Illumination **POA7C** Motor Electronics Over Temperature **POA7D** Hybrid Battery Pack State of Charge Low **POA7E** Hybrid Battery Pack Over Temperature **POA7F** Hybrid Battery Pack Deterioration **POA80** Replace Hybrid Battery Pack POA81 Hybrid Battery Pack Cooling Fan 1 Control Circuit/Open POA82 Hybrid Battery Pack Cooling Fan 1 Performance/Stuck Off POA83 Hybrid Battery Pack Cooling Fan 1 Stuck On POA84 Hybrid Battery Pack Cooling Fan 1 Control Circuit Low **P0A85** Hybrid Battery Pack Cooling Fan 1 Control Circuit High POA86 14 Volt Power Module Current Sensor Circuit **POA87** 14 Volt Power Module Current Sensor Circuit Range/Performance POA88 14 Volt Power Module Current Sensor Circuit Low **POA89** 14 Volt Power Module Current Sensor Circuit High **POA8A** 14 Volt Power Module Current Sensor Circuit Intermittent POA8B 14 Volt Power Module System Voltage **POA8C** 14 Volt Power Module System Voltage Unstable POA8D 14 Volt Power Module System Voltage Low **POA8E** 14 Volt Power Module System Voltage High **POA8F** 14 Volt Power Module System Performance POA90 Drive Motor "A" Performance



Codes Definition **P0A91** Drive Motor "B" Performance **P0A92** Hybrid Generator Performance **P0A93** Inverter "A" Cooling System Performance **P0A94** DC/DC Converter Performance P0A95 High Voltage Fuse POA96 Hybrid Battery Pack Cooling Fan 2 Control Circuit/Open **POA97** Hybrid Battery Pack Cooling Fan 2 Performance/Stuck Off **POA98** Hybrid Battery Pack Cooling Fan 2 Stuck On **POA99** Hybrid Battery Pack Cooling Fan 2 Control Circuit Low **POA9A** Hybrid Battery Pack Cooling Fan 2 Control Circuit High POA9B Hybrid Battery Temperature Sensor (BTS) "A" Circuit POA9C Hybrid Battery Temperature Sensor (BTS) "A" Range/Performance POA9D Hybrid Battery Temperature Sensor (BTS) "A" Circuit Low POA9E Hybrid Battery Temperature Sensor (BTS) "A" Circuit High POA9F Hybrid Battery Temperature Sensor (BTS) "A" Circuit Intermittent/Erratic **POAA0** Hybrid Battery Positive Contactor Circuit **POAA1** Hybrid Battery Positive Contactor Circuit Stuck Closed POAA2 Hybrid Battery Positive Contactor Circuit Stuck Open **POAA3** Hybrid Battery Negative Contactor Circuit POAA4 Hybrid Battery Negative Contactor Circuit Stuck Closed **POAA5** Hybrid Battery Negative Contactor Circuit Stuck Open POAA6 Hybrid Battery Voltage System Isolation Fault **POAA7** Hybrid Battery Voltage Isolation Sensor Circuit **P0AA8** Hybrid Battery Voltage Isolation Sensor Circuit Range/Performance **POAA9** Hybrid Battery Voltage Isolation Sensor Circuit Low **POAAA** Hybrid Battery Voltage Isolation Sensor Circuit High **POAAB** Hybrid Battery Voltage Isolation Sensor Circuit Intermittent/Erratic POAAC Hybrid Battery Pack Air Temperature Sensor (ATS) "A" Circuit **POAAD** Hybrid Battery Pack Air Temperature Sensor (ATS) "A" Circuit Range/Performance POAAE Hybrid Battery Pack Air Temperature Sensor (ATS) "A" Circuit Low **POAAF** Hybrid Battery Pack Air Temperature Sensor (ATS) "A" Circuit High **POABO** Hybrid Battery Pack Air Temperature Sensor (ATS) "A" Circuit Intermittent/Erratic POAB1 Hybrid Battery Pack Air Temperature Sensor (ATS) "B" Circuit POAB2 Hybrid Battery Pack Air Temperature Sensor (ATS) "B" Circuit POAB3 Hybrid Battery Pack Air Temperature Sensor (ATS) "B" Circuit Low POAB4 Hybrid Battery Pack Air Temperature Sensor (ATS) "B" Circuit High POAB5 Hybrid Battery Pack Air Temperature Sensor (ATS) "B" Circuit Intermittent/Erratic POAB6 Engine Mount "B" Control Circuit/Open POAB7 Engine Mount "B" Control Circuit Low POAB8 Engine Mount "B" Control Circuit High **POAB9** Hybrid System Performance



Codes Definition POABA Hybrid Battery Pack Voltage Sense "A" Circuit **POABB** Hybrid Battery Pack Voltage Sense "A" Circuit Range/Performance **POABC** Hybrid Battery Pack Voltage Sense "A" Circuit Low **POABD** Hybrid Battery Pack Voltage Sense "A" Circuit High **POABE** Hybrid Battery Pack Voltage Sense "A" Circuit Intermittent/Erratic **POABF** Hybrid Battery Pack Current Sensor "A" Circuit **POACO** Hybrid Battery Pack Current Sensor "A" Circuit Range/Performance POAC1 Hybrid Battery Pack Current Sensor "A" Circuit Low POAC2 Hybrid Battery Pack Current Sensor "A" Circuit High POAC3 Hybrid Battery Pack Current Sensor "A" Circuit Intermittent/Erratic POAC4 Hybrid Powertrain Control Module Requested MIL Illumination POAC5 Hybrid Battery Temperature Sensor (BTS) "B" Circuit POAC6 Hybrid Battery Temperature Sensor (BTS) "B" Range/Performance POAC7 Hybrid Battery Temperature Sensor (BTS) "B" Circuit Low POAC8 Hybrid Battery Temperature Sensor (BTS) "B" Circuit High POAC9 Hybrid Battery Temperature Sensor (BTS) "B" Circuit Intermittent/Erratic POACA Hybrid Battery Temperature Sensor (BTS) "C" Circuit **POACB** Hybrid Battery Temperature Sensor (BTS) "C" Range/Performance POACC Hybrid Battery Temperature Sensor (BTS) "C" Circuit Low POACD Hybrid Battery Temperature Sensor (BTS) "C" Circuit High POACE Hybrid Battery Temperature Sensor (BTS) "C" Circuit Intermittent/Erratic **POACF** Hybrid Battery Pack Cooling Fan 3 Control Circuit/Open POADO Hybrid Battery Pack Cooling Fan 3 Performance/Stuck Off **POAD1** Hybrid Battery Pack Cooling Fan 3 Stuck On **POAD2** Hybrid Battery Pack Cooling Fan 3 Control Circuit Low **POAD3** Hybrid Battery Pack Cooling Fan 3 Control Circuit High POAD4 Hybrid Battery Pack Air Flow System Insufficient Air Flow POAD5 Hybrid Battery Pack Air Flow Valve "A" Control Circuit/Open POAD6 Hybrid Battery Pack Air Flow Valve "A" Control Circuit Range/Performance POAD7 Hybrid Battery Pack Air Flow Valve "A" Control Circuit Low **POAD8** Hybrid Battery Pack Air Flow Valve "A" Control Circuit High **POAD9** Hybrid Battery Positive Contactor Control Circuit/Open **POADA** Hybrid Battery Positive Contactor Control Circuit Range/Performance **POADB** Hybrid Battery Positive Contactor Control Circuit Low **POADC** Hybrid Battery Positive Contactor Control Circuit High **POADD** Hybrid Battery Negative Contactor Control Circuit/Open **POADE** Hybrid Battery Negative Contactor Control Circuit Range/Performance **POADF** Hybrid Battery Negative Contactor Control Circuit Low **POAE0** Hybrid Battery Negative Contactor Control Circuit High **POAE1** Hybrid Battery Precharge Contactor Circuit **POAE2** Hybrid Battery Precharge Contactor Circuit Stuck Closed **POAE3** Hybrid Battery Precharge Contactor Circuit Stuck Open **POAE4** Hybrid Battery Precharge Contactor Control Circuit **POAE5** Hybrid Battery Precharge Contactor Control Circuit Range/Performance



Codes Definition **POAE6** Hybrid Battery Precharge Contactor Control Circuit Low **POAE7** Hybrid Battery Precharge Contactor Control Circuit High POAE8 Hybrid Battery Temperature Sensor (BTS) "D" Circuit **POAE9** Hybrid Battery Temperature Sensor (BTS) "D" Range/Performance POAEA Hybrid Battery Temperature Sensor (BTS) "D" Circuit Low **POAEB** Hybrid Battery Temperature Sensor (BTS) "D" Circuit High POAEC Hybrid Battery Temperature Sensor (BTS) "D" Circuit Intermittent/Erratic **POAED** Drive Motor Inverter Temperature Sensor "A" Circuit **POAEE** Drive Motor Inverter Temperature Sensor "A" Circuit Range/Performance **POAEF** Drive Motor Inverter Temperature Sensor "A" Circuit Low **POAF0** Drive Motor Inverter Temperature Sensor "A" Circuit High POAF1 Drive Motor Inverter Temperature Sensor "A" Circuit Intermittent/Erratic POAF2 Drive Motor Inverter Temperature Sensor "B" Circuit **POAF3** Drive Motor Inverter Temperature Sensor "B" Circuit Range/Performance POAF4 Drive Motor Inverter Temperature Sensor "B" Circuit Low POAF5 Drive Motor Inverter Temperature Sensor "B" Circuit High POAF6 Drive Motor Inverter Temperature Sensor "B" Circuit Intermittent/Erratic POAF7 14 Volt Power Module Internal Temperature Too High **POAF8** Hybrid Battery System Voltage **POAF9** Hybrid Battery System Voltage Unstable **POAFA** Hybrid Battery System Voltage Low **POAFB** Hybrid Battery System Voltage High **POAFC** Hybrid Battery Pack Sensor Module **POAFD** Hybrid Battery Pack Temperature Too Low **POAFE** Hybrid Battery System Voltage Too Low for Voltage Step Up Conversion **POAFF** System Voltage Too Low for Voltage Step Down Conversion **POB00** Auxiliary Transmission Fluid Pump Motor Phase U Current **P0B01** Auxiliary Transmission Fluid Pump Motor Phase U Current Low **POB02** Auxiliary Transmission Fluid Pump Motor Phase U Current High **P0B03** Auxiliary Transmission Fluid Pump Motor Phase V Current **P0B04** Auxiliary Transmission Fluid Pump Motor Phase V Current Low **P0B05** Auxiliary Transmission Fluid Pump Motor Phase V Current High **P0B06** Auxiliary Transmission Fluid Pump Motor Phase W Current POB07 Auxiliary Transmission Fluid Pump Motor Phase W Current Low **POB08** Auxiliary Transmission Fluid Pump Motor Phase W Current High **P0B09** Auxiliary Transmission Fluid Pump Motor Supply Voltage Circuit/Open **POBOA** Auxiliary Transmission Fluid Pump Motor Supply Voltage Circuit **POBOB** Auxiliary Transmission Fluid Pump Motor Supply Voltage Circuit **POBOC** Auxiliary Transmission Fluid Pump Hydraulic Leakage **POBOD** Auxiliary Transmission Fluid Pump Motor Control Module **POBOE** Hybrid Battery Pack Current Sensor "B" Circuit **POBOF** Hybrid Battery Pack Current Sensor "B" Circuit Range/Performance POB10 Hybrid Battery Pack Current Sensor "B" Circuit Low **P0B11** Hybrid Battery Pack Current Sensor "B" Circuit High



Codes Definition POB12 Hybrid Battery Pack Current Sensor "B" Circuit Intermittent/Erratic **P0B13** Hybrid Battery Pack Current Sensor "A"/"B" Correlation POB14 Hybrid Battery Pack Voltage Sense "B" Circuit **P0B15** Hybrid Battery Pack Voltage Sense "B" Circuit Range/Performance POB16 Hybrid Battery Pack Voltage Sense "B" Circuit Low **P0B17** Hybrid Battery Pack Voltage Sense "B" Circuit High **POB18** Hybrid Battery Pack Voltage Sense "B" Circuit Intermittent/Erratic POB19 Hybrid Battery Pack Voltage Sense "C" Circuit **POB1A** Hybrid Battery Pack Voltage Sense "C" Circuit Range/Performance **POB1B** Hybrid Battery Pack Voltage Sense "C" Circuit Low **POB1C** Hybrid Battery Pack Voltage Sense "C" Circuit High **POB1D** Hybrid Battery Pack Voltage Sense "C" Circuit Intermittent/Erratic **POB1E** Hybrid Battery Pack Voltage Sense "D" Circuit **POB1F** Hybrid Battery Pack Voltage Sense "D" Circuit Range/Performance **P0B20** Hybrid Battery Pack Voltage Sense "D" Circuit Low P0B21 Hybrid Battery Pack Voltage Sense "D" Circuit High POB22 Hybrid Battery Pack Voltage Sense "D" Circuit Intermittent/Erratic POB23 Hybrid Battery "A" Voltage **P0B24** Hybrid Battery "A" Voltage Unstable **P0B25** Hybrid Battery "A" Voltage Low P0B26 Hybrid Battery "A" Voltage High POB27 Hybrid Battery "B" Voltage POB28 Hybrid Battery "B" Voltage Unstable POB29 Hybrid Battery "B" Voltage Low POB2A Hybrid Battery "B" Voltage High POB2B Hybrid Battery "B" Voltage Highe **POB2C** Hybrid Battery "C" Voltage Unstable **POB2D** Hybrid Battery "C" Voltage Low **POB2E** Hybrid Battery "C" Voltage High **POB2F** Hybrid Battery "D" Voltage POB30 Hybrid Battery "D" Voltage Unstable **P0B31** Hybrid Battery "D" Voltage Low **P0B32** Hybrid Battery "D" Voltage High **POB33** High Voltage Service Disconnect Circuit **P0B34** High Voltage Service Disconnect Circuit Performance **P0B35** High Voltage Service Disconnect Circuit Low **P0B36** High Voltage Service Disconnect Circuit High **P0B37** High Voltage Service Disconnect Open POB38 Motor Electronics Coolant Pump "B" Control Circuit/Open POB39 Motor Electronics Coolant Pump "B" Control Circuit Low POB3A Motor Electronics Coolant Pump "B" Control Circuit High **POB3B** Hybrid Battery Voltage Sense "A" Circuit **POB3C** Hybrid Battery Voltage Sense "A" Circuit Range/Performance POB3D Hybrid Battery Voltage Sense "A" Circuit Low

DBDCodeX

Codes Definition **POB3E** Hybrid Battery Voltage Sense "A" Circuit High **POB3F** Hybrid Battery Voltage Sense "A" Circuit Intermittent/Erratic **P0B40** Hybrid Battery Voltage Sense "B" Circuit **P0B41** Hybrid Battery Voltage Sense "B" Circuit Range/Performance P0B42 Hybrid Battery Voltage Sense "B" Circuit Low P0B43 Hybrid Battery Voltage Sense "B" Circuit High **P0B44** Hybrid Battery Voltage Sense "B" Circuit Intermittent/Erratic P0B45 Hybrid Battery Voltage Sense "C" Circuit **P0B46** Hybrid Battery Voltage Sense "C" Circuit Range/Performance P0B47 Hybrid Battery Voltage Sense "C" Circuit Low **P0B48** Hybrid Battery Voltage Sense "C" Circuit High **P0B49** Hybrid Battery Voltage Sense "C" Circuit Intermittent/Erratic POB4A Hybrid Battery Voltage Sense "D" Circuit **P0B4B** Hybrid Battery Voltage Sense "D" Circuit Range/Performance **P0B4C** Hybrid Battery Voltage Sense "D" Circuit Low **P0B4D** Hybrid Battery Voltage Sense "D" Circuit High POB4E Hybrid Battery Voltage Sense "D" Circuit Intermittent/Erratic **P0B4F** Hybrid Battery Voltage Sense "E" Circuit **P0B50** Hybrid Battery Voltage Sense "E" Circuit Range/Performance **P0B51** Hybrid Battery Voltage Sense "E" Circuit Low **P0B52** Hybrid Battery Voltage Sense "E" Circuit High **P0B53** Hybrid Battery Voltage Sense "E" Circuit Intermittent/Erratic POB54 Hybrid Battery Voltage Sense "F" Circuit **P0B55** Hybrid Battery Voltage Sense "F" Circuit Range/Performance POB56 Hybrid Battery Voltage Sense "F" Circuit Low P0B57 Hybrid Battery Voltage Sense "F" Circuit High **P0B58** Hybrid Battery Voltage Sense "F" Circuit Intermittent/Erratic P0B59 Hybrid Battery Voltage Sense "G" Circuit **POB5A** Hybrid Battery Voltage Sense "G" Circuit Range/Performance **POB5B** Hybrid Battery Voltage Sense "G" Circuit Low **P0B5C** Hybrid Battery Voltage Sense "G" Circuit High **POB5D** Hybrid Battery Voltage Sense "G" Circuit Intermittent/Erratic **POB5E** Hybrid Battery Voltage Sense "H" Circuit **POB5F** Hybrid Battery Voltage Sense "H" Circuit Range/Performance POB60 Hybrid Battery Voltage Sense "H" Circuit Low P0B61 Hybrid Battery Voltage Sense "H" Circuit High POB62 Hybrid Battery Voltage Sense "H" Circuit Intermittent/Erratic **P0B63** Hybrid Battery Voltage Sense "I" Circuit POB64 Hybrid Battery Voltage Sense "I" Circuit Range/Performance **P0B65** Hybrid Battery Voltage Sense "I" Circuit Low **P0B66** Hybrid Battery Voltage Sense "I" Circuit High **P0B67** Hybrid Battery Voltage Sense "I" Circuit Intermittent/Erratic **P0B68** Hybrid Battery Voltage Sense "J" Circuit **P0B69** Hybrid Battery Voltage Sense "J" Circuit Range/Performance

DRDCodeX

Codes Definition **POB6A** Hybrid Battery Voltage Sense "J" Circuit Low **P0B6B** Hybrid Battery Voltage Sense "J" Circuit High **POB6C** Hybrid Battery Voltage Sense "J" Circuit Intermittent/Erratic **POB6D** Hybrid Battery Voltage Sense "K" Circuit **POB6E** Hybrid Battery Voltage Sense "K" Circuit Range/Performance **P0B6F** Hybrid Battery Voltage Sense "K" Circuit Low **P0B70** Hybrid Battery Voltage Sense "K" Circuit High **P0B71** Hybrid Battery Voltage Sense "K" Circuit Intermittent/Erratic **P0B72** Hybrid Battery Voltage Sense "L" Circuit **P0B73** Hybrid Battery Voltage Sense "L" Circuit Range/Performance **P0B74** Hybrid Battery Voltage Sense "L" Circuit Low **P0B75** Hybrid Battery Voltage Sense "L" Circuit High **P0B76** Hybrid Battery Voltage Sense "L" Circuit Intermittent/Erratic POB77 Hybrid Battery Voltage Sense "M" Circuit **P0B78** Hybrid Battery Voltage Sense "M" Circuit Range/Performance P0B79 Hybrid Battery Voltage Sense "M" Circuit Low POB7A Hybrid Battery Voltage Sense "M" Circuit High **P0B7B** Hybrid Battery Voltage Sense "M" Circuit Intermittent/Erratic **POB7C** Hybrid Battery Voltage Sense "N" Circuit **P0B7D** Hybrid Battery Voltage Sense "N" Circuit Range/Performance **POB7E** Hybrid Battery Voltage Sense "N" Circuit Low **P0B7F** Hybrid Battery Voltage Sense "N" Circuit High POB80 Hybrid Battery Voltage Sense "N" Circuit Intermittent/Erratic **POB81** Hybrid Battery Voltage Sense "O" Circuit POB82 Hybrid Battery Voltage Sense "O" Circuit Range/Performance POB83 Hybrid Battery Voltage Sense "O" Circuit Low **P0B84** Hybrid Battery Voltage Sense "O" Circuit High POB85 Hybrid Battery Voltage Sense "O" Circuit Intermittent/Erratic **P0B86** Hybrid Battery Voltage Sense "P" Circuit POB87 Hybrid Battery Voltage Sense "P" Circuit Range/Performance POB88 Hybrid Battery Voltage Sense "P" Circuit Low **P0B89** Hybrid Battery Voltage Sense "P" Circuit High **POB8A** Hybrid Battery Voltage Sense "P" Circuit Intermittent/Erratic **POB8B** Hybrid Battery Voltage Sense "Q" Circuit **POB8C** Hybrid Battery Voltage Sense "Q" Circuit Range/Performance **POB8D** Hybrid Battery Voltage Sense "Q" Circuit Low **POB8E** Hybrid Battery Voltage Sense "Q" Circuit High **POB8F** Hybrid Battery Voltage Sense "Q" Circuit Intermittent/Erratic POB90 Hybrid Battery Voltage Sense "R" Circuit **P0B91** Hybrid Battery Voltage Sense "R" Circuit Range/Performance P0B92 Hybrid Battery Voltage Sense "R" Circuit Low P0B93 Hybrid Battery Voltage Sense "R" Circuit High **P0B94** Hybrid Battery Voltage Sense "R" Circuit Intermittent/Erratic **P0B95** Hybrid Battery Voltage Sense "S" Circuit

DRDCodeX

Codes Definition **P0B96** Hybrid Battery Voltage Sense "S" Circuit Range/Performance **P0B97** Hybrid Battery Voltage Sense "S" Circuit Low **P0B98** Hybrid Battery Voltage Sense "S" Circuit High POB99 Hybrid Battery Voltage Sense "S" Circuit Intermittent/Erratic POB9A Hybrid Battery Voltage Sense "T" Circuit **POB9B** Hybrid Battery Voltage Sense "T" Circuit Range/Performance POB9C Hybrid Battery Voltage Sense "T" Circuit Low POB9D Hybrid Battery Voltage Sense "T" Circuit High **POB9E** Hybrid Battery Voltage Sense "T" Circuit Intermittent/Erratic **POB9F** Hybrid Battery Voltage Sense "U" Circuit **POBA0** Hybrid Battery Voltage Sense "U" Circuit Range/Performance **POBA1** Hybrid Battery Voltage Sense "U" Circuit Low POBA2 Hybrid Battery Voltage Sense "U" Circuit High POBA3 Hybrid Battery Voltage Sense "U" Circuit Intermittent/Erratic **POBA4** Hybrid Battery Voltage Sense "V" Circuit **POBA5** Hybrid Battery Voltage Sense "V" Circuit Range/Performance POBA6 Hybrid Battery Voltage Sense "V" Circuit Low POBA7 Hybrid Battery Voltage Sense "V" Circuit High **POBA8** Hybrid Battery Voltage Sense "V" Circuit Intermittent/Erratic POBA9 Hybrid Battery Voltage Sense "W" Circuit **POBAA** Hybrid Battery Voltage Sense "W" Circuit Range/Performance POBAB Hybrid Battery Voltage Sense "W" Circuit Low **POBAC** Hybrid Battery Voltage Sense "W" Circuit High **POBAD** Hybrid Battery Voltage Sense "W" Circuit Intermittent/Erratic POBAE Hybrid Battery Voltage Sense "X" Circuit POBAF Hybrid Battery Voltage Sense "X" Circuit Range/Performance POBBO Hybrid Battery Voltage Sense "X" Circuit Low POBB1 Hybrid Battery Voltage Sense "X" Circuit High **POBB2** Hybrid Battery Voltage Sense "X" Circuit Intermittent/Erratic POBB3 Hybrid Battery Voltage Sense "Y" Circuit POBB4 Hybrid Battery Voltage Sense "Y" Circuit Range/Performance **POBB5** Hybrid Battery Voltage Sense "Y" Circuit Low **POBB6** Hybrid Battery Voltage Sense "Y" Circuit High **POBB7** Hybrid Battery Pack Sensor Module POBB8 Hybrid Battery Voltage Sense "Z" Circuit **POBB9** Hybrid Battery Voltage Sense "Z" Circuit Range/Performance **POBBA** Hybrid Battery Voltage Sense "Z" Circuit Low **POBBB** Hybrid Battery Voltage Sense "Z" Circuit High POBBC Hybrid Battery Voltage Sense "Z" Circuit Intermittent/Erratic **POBBD** Hybrid Battery Pack Voltage Variation Exceeded Limit **POBBE** Hybrid Battery Pack Voltage Variation **POBBF** Hybrid Battery Pack Cooling Fan Supply Voltage Circuit/Open **POBCO** Hybrid Battery Pack Cooling Fan Supply Voltage Circuit Low **POBC1** Hybrid Battery Pack Cooling Fan Supply Voltage Circuit High

DBDCodeX

Codes Definition POBC2 Hybrid Battery Temperature Sensor (BTS) "E" Circuit **POBC3** Hybrid Battery Temperature Sensor (BTS) "E" Range/Performance POBC4 Hybrid Battery Temperature Sensor (BTS) "E" Circuit Low **POBC5** Hybrid Battery Temperature Sensor (BTS) "E" Circuit High POBC6 Hybrid Battery Temperature Sensor (BTS) "E" Circuit Intermittent/Erratic **POBC7** Hybrid Battery Pack Cooling Fan Sense Circuit/Open **POBC8** Hybrid Battery Pack Cooling Fan Sense Range/Performance **POBC9** Hybrid Battery Pack Cooling Fan Sense Circuit Low **POBCA** Hybrid Battery Pack Cooling Fan Sense Circuit High **POBCB** Hybrid Battery Pack Cooling Fan Sense Circuit Intermittent/Erratic **POBCC** Generator Inverter Temperature Sensor Circuit **POBCD** Generator Inverter Temperature Sensor Circuit Range/Performance **POBCE** Generator Inverter Temperature Sensor Circuit Low **POBCF** Generator Inverter Temperature Sensor Circuit High **POBDO** Generator Inverter Temperature Sensor Circuit Intermittent/Erratic POBD1 Drive Motor Inverter Temperature Sensor "C" Circuit POBD2 Drive Motor Inverter Temperature Sensor "C" Circuit Range/Performance POBD3 Drive Motor Inverter Temperature Sensor "C" Circuit Low **POBD4** Drive Motor Inverter Temperature Sensor "C" Circuit High POBD5 Drive Motor Inverter Temperature Sensor "C" Circuit Intermittent/Erratic POBD6 Drive Motor Inverter Temperature Sensor "D" Circuit **POBD7** Drive Motor Inverter Temperature Sensor "D" Circuit Range/Performance POBD8 Drive Motor Inverter Temperature Sensor "D" Circuit Low **POBD9** Drive Motor Inverter Temperature Sensor "D" Circuit High POBDA Drive Motor Inverter Temperature Sensor "D" Circuit Intermittent/Erratic **POBDB** Drive Motor Inverter Temperature Sensor "E" Circuit **POBDC** Drive Motor Inverter Temperature Sensor "E" Circuit Range/Performance POBDD Drive Motor Inverter Temperature Sensor "E" Circuit Low **POBDE** Drive Motor Inverter Temperature Sensor "E" Circuit High **POBDF** Drive Motor Inverter Temperature Sensor "E" Circuit Intermittent/Erratic **POBEO** Drive Motor Inverter Temperature Sensor "F" Circuit **POBE1** Drive Motor Inverter Temperature Sensor "F" Circuit Range/Performance POBE2 Drive Motor Inverter Temperature Sensor "F" Circuit Low **POBE3** Drive Motor Inverter Temperature Sensor "F" Circuit High POBE4 Drive Motor Inverter Temperature Sensor "F" Circuit Intermittent/Erratic POBE5 Drive Motor "A" Phase U Current Sensor Circuit POBE6 Drive Motor "A" Phase U Current Sensor Circuit Range/Performance POBE7 Drive Motor "A" Phase U Current Sensor Circuit Low POBE8 Drive Motor "A" Phase U Current Sensor Circuit High **POBE9** Drive Motor "A" Phase V Current Sensor Circuit **POBEA** Drive Motor "A" Phase V Current Sensor Circuit Range/Performance POBEB Drive Motor "A" Phase V Current Sensor Circuit Low **POBEC** Drive Motor "A" Phase V Current Sensor Circuit High POBED Drive Motor "A" Phase W Current Sensor Circuit



Codes Definition **POBEE** Drive Motor "A" Phase W Current Sensor Circuit Range/Performance **POBEF** Drive Motor "A" Phase W Current Sensor Circuit Low **POBFO** Drive Motor "A" Phase W Current Sensor Circuit High **POBF1** Drive Motor "B" Phase U Current Sensor Circuit POBF2 Drive Motor "B" Phase U Current Sensor Circuit Range/Performance POBF3 Drive Motor "B" Phase U Current Sensor Circuit Low **POBF4** Drive Motor "B" Phase U Current Sensor Circuit High **POBF5** Drive Motor "B" Phase V Current Sensor Circuit **POBF6** Drive Motor "B" Phase V Current Sensor Circuit Range/Performance POBF7 Drive Motor "B" Phase V Current Sensor Circuit Low **POBF8** Drive Motor "B" Phase V Current Sensor Circuit High POBF9 Drive Motor "B" Phase W Current Sensor Circuit **POBFA** Drive Motor "B" Phase W Current Sensor Circuit Range/Performance POBFB Drive Motor "B" Phase W Current Sensor Circuit Low **POBFC** Drive Motor "B" Phase W Current Sensor Circuit High **POBFD** Drive Motor "A" Phase U-V-W Current Sensor Correlation POBFE Drive Motor "B" Phase U-V-W Current Sensor Correlation **POBFF** Drive Motor "A" Current POC00 Drive Motor "A" Current Low POC01 Drive Motor "A" Current High POC02 Drive Motor "B" Current POC03 Drive Motor "B" Current Low **POC04** Drive Motor "B" Current High **POC05** Drive Motor "A" Phase U-V-W Circuit/Open POCO6 Drive Motor "A" Phase U-V-W Circuit Low P0C07 Drive Motor "A" Phase U-V-W Circuit High POC08 Drive Motor "B" Phase U-V-W Circuit/Open POC09 Drive Motor "B" Phase U-V-W Circuit Low POCOA Drive Motor "B" Phase U-V-W Circuit High POCOB Drive Motor "A" Inverter Power Supply Circuit/Open POCOC Drive Motor "A" Inverter Power Supply Circuit Low **POCOD** Drive Motor "A" Inverter Power Supply Circuit High POCOE Drive Motor "B" Inverter Power Supply Circuit/Open **POCOF** Drive Motor "B" Inverter Power Supply Circuit Low **POC10** Drive Motor "B" Inverter Power Supply Circuit High POC11 Drive Motor "A" Inverter Phase U Over Temperature POC12 Drive Motor "A" Inverter Phase V Over Temperature POC13 Drive Motor "A" Inverter Phase W Over Temperature POC14 Drive Motor "B" Inverter Phase U Over Temperature **POC15** Drive Motor "B" Inverter Phase V Over Temperature POC16 Drive Motor "B" Inverter Phase W Over Temperature POC17 Drive Motor "A" Position Sensor Not Learned POC18 Drive Motor "B" Position Sensor Not Learned POC19 Drive Motor "A" Torque Delivered Performance



Codes	Definition
POC1A	Drive Motor "B" Torque Delivered Performance
P0C1B	Auxiliary Transmission Fluid Pump Control Module Internal Temperature Too High
P0C1C	Auxiliary Transmission Fluid Pump Control Module Internal Temperature Sensor Circuit
P0C1D	Auxiliary Transmission Fluid Pump Control Module Internal Temperature Sensor Circuit Range/Performance
P0C1E	Auxiliary Transmission Fluid Pump Control Module Internal Temperature Sensor Circuit Low
P0C1F	Auxiliary Transmission Fluid Pump Control Module Internal Temperature Sensor Circuit High
P0C20	Auxiliary Transmission Fluid Pump Phase U-V-W Circuit/Open
P0C21	Auxiliary Transmission Fluid Pump Phase U-V-W Circuit Low
<b>P0C22</b>	Auxiliary Transmission Fluid Pump Phase U-V-W Circuit High
	Auxiliary Transmission Fluid Pump Control Module Circuit/Open
	Auxiliary Transmission Fluid Pump Control Module Circuit Low
	Auxiliary Transmission Fluid Pump Control Module Circuit High
	Auxiliary Transmission Fluid Pump Motor Current
	Auxiliary Transmission Fluid Pump Motor Current Low
	Auxiliary Transmission Fluid Pump Motor Current High
	Auxiliary Transmission Fluid Pump Driver Circuit Performance
	Auxiliary Transmission Fluid Pump Motor Stalled
	Auxiliary Transmission Fluid Pump Control Module Feedback Signal
	Auxiliary Transmission Fluid Pump Control Module Feedback Electric Transmission Fluid Pump Control Module Feedback Signal Low
	Electric Transmission Fluid Pump Control Module Feedback Signal High
	Internal Control Module Drive Motor/Generator - Engine Speed Sensor
<b>D</b> 0C20	Performance Hybrid Battery Pack State of Charge High
	Inverter "B" Cooling System Performance Hybrid Battery Cooling System Performance
	Hybrid Battery Temperature Sensor (BTS) "F" Circuit
	Hybrid Battery Temperature Sensor (BTS) "F" Circuit Range/Performance
	Hybrid Battery Temperature Sensor (BTS) "F" Circuit Low
	Hybrid Battery Temperature Sensor (BTS) "F" Circuit High
	Hybrid Battery Temperature Sensor (BTS) "F" Circuit Intermittent/Erratic
	DC/DC Converter Temperature Sensor "A" Circuit
	DC/DC Converter Temperature Sensor "A" Range/Performance
	DC/DC Converter Temperature Sensor "A" Low
P0C3B	DC/DC Converter Temperature Sensor "A" High
POC3C	DC/DC Converter Temperature Sensor "A" Intermittent/Erratic
P0C3D	DC/DC Converter Temperature Sensor "B" Circuit
P0C3E	DC/DC Converter Temperature Sensor "B" Range/Performance
P0C3F	DC/DC Converter Temperature Sensor "B" Low
P0C40	DC/DC Converter Temperature Sensor "B" High



Codes Definition POC41 DC/DC Converter Temperature Sensor "B" Intermittent/Erratic POC42 Hybrid Battery Pack Coolant Temperature Sensor (CTS) Circuit POC43 Hybrid Battery Pack Coolant Temperature Sensor (CTS) Circuit Range/Performance POC44 Hybrid Battery Pack Coolant Temperature Sensor (CTS) Circuit Low POC45 Hybrid Battery Pack Coolant Temperature Sensor (CTS) Circuit High P0C46 Hybrid Battery Pack Coolant Temperature Sensor (CTS) Circuit Intermittent/Erratic POC47 Hybrid Battery Pack Coolant Pump Control Circuit/Open POC48 Hybrid Battery Pack Coolant Pump Control Circuit Low POC49 Hybrid Battery Pack Coolant Pump Control Circuit High POC4A Hybrid Battery Pack Coolant Pump Control Performance POC4B Hybrid Battery Pack Coolant Pump Supply Voltage Circuit/Open POC4C Hybrid Battery Pack Coolant Pump Supply Voltage Circuit Low POC4D Hybrid Battery Pack Coolant Pump Supply Voltage Circuit High **POC4E** Drive Motor "A" Position Exceeded Learning Limit **POC4F** Drive Motor "B" Position Exceeded Learning Limit P0C50 Drive Motor "A" Position Sensor Circuit "A" POC51 Drive Motor "A" Position Sensor Circuit "A" Range/Performance P0C52 Drive Motor "A" Position Sensor Circuit "A" Low **POC53** Drive Motor "A" Position Sensor Circuit "A" High POC54 Drive Motor "A" Position Sensor Circuit "A" Intermittent/Erratic POC55 Drive Motor "B" Position Sensor Circuit "A" POC56 Drive Motor "B" Position Sensor Circuit "A" Range/Performance POC57 Drive Motor "B" Position Sensor Circuit "A" Low P0C58 Drive Motor "B" Position Sensor Circuit "A" High POC59 Drive Motor "B" Position Sensor Circuit "A" Intermittent/Erratic POC5A Drive Motor "A" Position Sensor Circuit "B" POC5B Drive Motor "A" Position Sensor Circuit "B" Range/Performance POC5C Drive Motor "A" Position Sensor Circuit "B" Low POC5D Drive Motor "A" Position Sensor Circuit "B" High POC5E Drive Motor "A" Position Sensor Circuit "B" Intermittent/Erratic POC5F Drive Motor "B" Position Sensor Circuit "B" POC60 Drive Motor "B" Position Sensor Circuit "B" Range/Performance P0C61 Drive Motor "B" Position Sensor Circuit "B" Low P0C62 Drive Motor "B" Position Sensor Circuit "B" High POC63 Drive Motor "B" Position Sensor Circuit "B" Intermittent/Erratic **POC64** Generator Position Sensor Circuit "A" P0C65 Generator Position Sensor Circuit "A" Range/Performance POC66 Generator Position Sensor Circuit "A" Low POC67 Generator Position Sensor Circuit "A" High POC68 Generator Position Sensor Circuit "A" Intermittent/Erratic **POC69** Generator Position Sensor Circuit "B" POC6A Generator Position Sensor Circuit "B" Range/Performance

DBDCodeX

Codes	Definition
POC6B	Generator Position Sensor Circuit "B" Low
<b>P0C6C</b>	Generator Position Sensor Circuit "B" High
P0C6D	Generator Position Sensor Circuit "B" Intermittent/Erratic
<b>P0C6E</b>	Hybrid Battery Temperature Sensor (BTS) "A"/"B" Correlation
P0C6F	Hybrid Battery Temperature Sensor (BTS) "B"/"C" Correlation
<b>P0C70</b>	Hybrid Battery Temperature Sensor (BTS) "C"/"D" Correlation
<b>P0C71</b>	Hybrid Battery Temperature Sensor (BTS) "D"/"E" Correlation
<b>P0C72</b>	Hybrid Battery Temperature Sensor (BTS) "E"/"F" Correlation
<b>P0C73</b>	Motor Electronics Coolant Pump "A" Control Performance
<b>P0C74</b>	Motor Electronics Coolant Pump "B" Control Performance
<b>P0C75</b>	Hybrid Battery System Discharge Time Too Short
<b>P0C76</b>	Hybrid Battery System Discharge Time Too Long
<b>P0C77</b>	Hybrid Battery System Precharge Time Too Short
	Hybrid Battery System Precharge Time Too Long
	Drive Motor "A" Inverter Voltage Too High
	Drive Motor "B" Inverter Voltage Too High
	Generator Inverter Voltage Too High
	Hybrid Battery Temperature Sensor (BTS) "G" Circuit
	Hybrid Battery Temperature Sensor (BTS) "G" Range/Performance
	Hybrid Battery Temperature Sensor (BTS) "G" Circuit Low
	Hybrid Battery Temperature Sensor (BTS) "G" Circuit High
	Hybrid Battery Temperature Sensor (BTS) "G" Circuit Intermittent/Erratic
	Hybrid Battery Temperature Sensor (BTS) "H" Circuit
	Hybrid Battery Temperature Sensor (BTS) "H" Range/Performance
	Hybrid Battery Temperature Sensor (BTS) "H" Circuit Low
	Hybrid Battery Temperature Sensor (BTS) "H" Circuit High
	Hybrid Battery Temperature Sensor (BTS) "H" Circuit Intermittent/Erratic
	Hybrid Battery Temperature Sensor (BTS) "F"/"G" Correlation Hybrid Battery Temperature Sensor (BTS) "G"/"H" Correlation
	ISO/SAE Reserved
P0C93	ISO/SAE Reserved
P0C94	ISO/SAE Reserved
P0C95	ISO/SAE Reserved
P0C96	ISO/SAE Reserved
<b>P0C97</b>	ISO/SAE Reserved



Codes P0C98 ISO/SAE Reserved **P0C99** ISO/SAE Reserved POC9A ISO/SAE Reserved P0C9B ISO/SAE Reserved POC9C ISO/SAE Reserved POC9D ISO/SAE Reserved **P0C9E** ISO/SAE Reserved **P0C9F** ISO/SAE Reserved POCA0 ISO/SAE Reserved **POCA1** ISO/SAE Reserved POCA2 ISO/SAE Reserved POCA3 ISO/SAE Reserved POCA4 ISO/SAE Reserved POCA5 ISO/SAE Reserved POCA6 ISO/SAE Reserved POCA7 ISO/SAE Reserved POCA8 ISO/SAE Reserved POCA9 ISO/SAE Reserved **POCAA** ISO/SAE Reserved **POCAB** ISO/SAE Reserved **POCAC** ISO/SAE Reserved **POCAD** ISO/SAE Reserved **POCAE** ISO/SAE Reserved **POCAF** ISO/SAE Reserved POCBO ISO/SAE Reserved POCB1 ISO/SAE Reserved POCB2 ISO/SAE Reserved **POCB3** ISO/SAE Reserved P0CB4 ISO/SAE Reserved **P0CB5** ISO/SAE Reserved POCB6 ISO/SAE Reserved **P0CB7** ISO/SAE Reserved POCB8 ISO/SAE Reserved POCB9 ISO/SAE Reserved **POCBA** ISO/SAE Reserved **POCBB** ISO/SAE Reserved **POCBC** ISO/SAE Reserved **POCBD** ISO/SAE Reserved **POCBE** ISO/SAE Reserved **POCBF** ISO/SAE Reserved POCCO ISO/SAE Reserved POCC1 ISO/SAE Reserved **POCC2** ISO/SAE Reserved POCC3 ISO/SAE Reserved



Codes POCC4 ISO/SAE Reserved **POCC5** ISO/SAE Reserved POCC6 ISO/SAE Reserved POCC7 ISO/SAE Reserved POCC8 ISO/SAE Reserved POCC9 ISO/SAE Reserved **POCCA** ISO/SAE Reserved **POCCB** ISO/SAE Reserved **POCCC** ISO/SAE Reserved **POCCD** ISO/SAE Reserved **POCCE** ISO/SAE Reserved **POCCF** ISO/SAE Reserved **POCD0** ISO/SAE Reserved POCD1 ISO/SAE Reserved POCD2 ISO/SAE Reserved POCD3 ISO/SAE Reserved P0CD4 ISO/SAE Reserved P0CD5 ISO/SAE Reserved POCD6 ISO/SAE Reserved **POCD7** ISO/SAE Reserved POCD8 ISO/SAE Reserved POCD9 ISO/SAE Reserved **POCDA** ISO/SAE Reserved **POCDB** ISO/SAE Reserved **POCDC** ISO/SAE Reserved **POCDD** ISO/SAE Reserved **POCDE** ISO/SAE Reserved **POCDF** ISO/SAE Reserved POCE0 ISO/SAE Reserved **POCE1** ISO/SAE Reserved POCE2 ISO/SAE Reserved **POCE3** ISO/SAE Reserved POCE4 ISO/SAE Reserved POCE5 ISO/SAE Reserved POCE6 ISO/SAE Reserved POCE7 ISO/SAE Reserved POCE8 ISO/SAE Reserved POCE9 ISO/SAE Reserved **POCEA** ISO/SAE Reserved **POCEB** ISO/SAE Reserved **POCEC** ISO/SAE Reserved **POCED** ISO/SAE Reserved **POCEE** ISO/SAE Reserved **POCEF** ISO/SAE Reserved



Codes Definition **POCFO** ISO/SAE Reserved **POCF1** ISO/SAE Reserved P0CF2 ISO/SAE Reserved **POCF3** ISO/SAE Reserved P0CF4 ISO/SAE Reserved **POCF5** ISO/SAE Reserved POCF6 ISO/SAE Reserved **POCF7** ISO/SAE Reserved POCF8 ISO/SAE Reserved **POCF9** ISO/SAE Reserved **POCFA** ISO/SAE Reserved **POCFB** ISO/SAE Reserved **POCFC** ISO/SAE Reserved **POCFD** ISO/SAE Reserved **POCFE** ISO/SAE Reserved **POCFF** ISO/SAE Reserved P0D00 ISO/SAE Reserved **POE00** ISO/SAE Reserved **P0F00** ISO/SAE Reserved P2000 NOx Trap Efficiency Below Threshold Bank 1 P2001 NOx Trap Efficiency Below Threshold Bank 2 P2002 Diesel Particulate Filter Efficiency Below Threshold Bank 1 **P2003** Diesel Particulate Filter Efficiency Below Threshold Bank 2 P2004 Intake Manifold Runner Control Stuck Open Bank 1 P2005 Intake Manifold Runner Control Stuck Open Bank 2 P2006 Intake Manifold Runner Control Stuck Closed Bank 1 P2007 Intake Manifold Runner Control Stuck Closed Bank 2 **P2008** Intake Manifold Runner Control Circuit Open Bank 1 P2009 Intake Manifold Runner Control Circuit Low Bank 1 **P200A** Intake Manifold Runner Performance Bank 1 P200B Intake Manifold Runner Performance Bank 2 **P200C** Diesel Particulate Filter Over Temperature Bank 1 **P200D** Diesel Particulate Filter Over Temperature Bank 2 **P200E** Catalyst System Over Temperature Bank 1 **P200F** Catalyst System Over Temperature Bank 2 P2010 Intake Manifold Runner Control Circuit High Bank 1 P2011 Intake Manifold Runner Control Circuit Open Bank 2 P2012 Intake Manifold Runner Control Circuit Low Bank 2 P2013 Intake Manifold Runner Control Circuit High Bank 2 P2014 Intake Manifold Runner Position Sensor / Switch Circuit Bank 1 Intake Manifold Runner Position Sensor / Switch Circuit Range/Performance P2015 Bank 1 P2016 Intake Manifold Runner Position Sensor / Switch Circuit Low Bank 1 **P2017** Intake Manifold Runner Position Sensor / Switch Circuit High Bank 1



Codes	Definition
P2018	Intake Manifold Runner Position Sensor / Switch Circuit Intermittent Bank 1
P2019	Intake Manifold Runner Position Sensor / Switch Circuit Bank 2
P201A	Reductant Injection Valve Circuit Range/Performance Bank 2 Unit 1
P201B	ISO/SAE Reserved
P201C	ISO/SAE Reserved
P201D	ISO/SAE Reserved
P201E	ISO/SAE Reserved
P201F	ISO/SAE Reserved
P2020	Intake Manifold Runner Position Sensor / Switch Circuit Range/Performance Bank 2
P2021	Intake Manifold Runner Position Sensor / Switch Circuit Low Bank 2
P2022	Intake Manifold Runner Position Sensor / Switch Circuit High Bank 2
P2023	Intake Manifold Runner Position Sensor / Switch Circuit Intermittent Bank 2
	Evaporative Emissions (EVAP) Fuel Vapor Temperature Sensor Circuit
P2025	Evaporative Emissions (EVAP) Fuel Vapor Temperature Sensor Range
P2026	Evaporative Emissions (EVAP) Fuel Vapor Temperature Sensor Circuit Low Voltage
P2027	Evaporative Emissions (EVAP) Fuel Vapor Temperature Sensor Circuit High Voltage
P2028	Evaporative Emissions (EVAP) Fuel Vapor Temperature Sensor Circuit Intermittent
P2029	Fuel Fired Heater Disabled
P202A	Reductant Tank Heater Control Circuit/Open
P202B	Reductant Tank Heater Control Circuit Low
P202C	Reductant Tank Heater Control Circuit High
P202D	Reductant Leakage
	Reductant Injection Valve Circuit Range/Performance Bank 1 Unit 1
	Reductant/Regeneration Supply Control Circuit Range/Performance
	Fuel Fired Heater Performance
	Exhaust Gas Temperature EGT Sensor Circuit Bank 1 Sensor 2
	Exhaust Gas Temperature EGT Sensor Circuit Low Bank 1 Sensor 2
	Exhaust Gas Temperature EGT Sensor Circuit High Bank 1 Sensor 2
	Exhaust Gas Temperature EGT Sensor Circuit Low Bank 2 Sensor 2
	Exhaust Gas Temperature EGT Sensor Circuit Low Bank 2 Sensor 2
	Exhaust Gas Temperature EGT Sensor Circuit High Bank 2 Sensor 2
P2037	Reductant Injection Air Pressure Sensor A Circuit

- P2038 Reductant Injection Air Pressure Sensor A Circuit Range/Performance
- P2039 Reductant Injection Air Pressure Sensor A Circuit Low
- P203A Reductant Level Sensor Circuit
- P203B Reductant Level Sensor Circuit Range/Performance
- P203C Reductant Level Sensor Circuit Low
- P203D Reductant Level Sensor Circuit High
- P203E Reductant Level Sensor Circuit Intermittent/Erratic
- P203F Reductant Level Too Low
- P2040 Reductant Injection Air Pressure Sensor A Circuit High



Codes Definition P2041 Reductant Injection Air Pressure Sensor A Circuit Intermittent P2042 Reductant Temperature Sensor Circuit P2043 Reductant Temperature Sensor Circuit Range/Performance P2044 Reductant Temperature Sensor Circuit Low **P2045** Reductant Temperature Sensor Circuit High P2046 Reductant Temperature Sensor Circuit Intermittent **P2047** Reductant Injection Valve Circuit/Open Bank 1 Unit 1 P2048 Reductant Injection Valve Circuit Low Bank 1 Unit 1 **P2049** Reductant Injection Valve Circuit High Bank 1 Unit 1 P204A Reductant Pressure Sensor Circuit P204B Reductant Pressure Sensor Circuit Range/Performance P204C Reductant Pressure Sensor Circuit Low P204D Reductant Pressure Sensor Circuit High P204E Reductant Pressure Sensor Circuit Intermittent/Erratic **P204F** Reductant System Performance Bank 1 P2050 Reductant Injection Valve Circuit/Open Bank 2 Unit 1 P2051 Reductant Injection Valve Circuit Low Bank 2 Unit 1 **P2052** Reductant Injection Valve Circuit High Bank 2 Unit 1 P2053 Reductant Injection Valve Circuit/Open Bank 1 Unit 2 P2054 Reductant Injection Valve Circuit Low Bank 1 Unit 2 P2055 Reductant Injection Valve Circuit High Bank 1 Unit 2 P2056 Reductant Injection Valve Circuit/Open Bank 2 Unit 2 P2057 Reductant Injection Valve Circuit Low Bank 2 Unit 2 **P2058** Reductant Injection Valve Circuit High Bank 2 Unit 2 P2059 Reductant Injection Air Pump Control Circuit/Open **P205A** Reductant Tank Temperature Sensor Circuit **P205B** Reductant Tank Temperature Sensor Circuit Range/Performance **P205C** Reductant Tank Temperature Sensor Circuit Low **P205D** Reductant Tank Temperature Sensor Circuit High **P205E** Reductant Tank Temperature Sensor Circuit Intermittent **P205F** Reductant System Performance Bank 2 **P2060** Reductant Injection Air Pump Control Circuit Low P2061 Reductant Injection Air Pump Control Circuit High P2062 Reductant/Regeneration Supply Control Circuit/Open P2063 Reductant/Regeneration Supply Control Circuit Low P2064 Reductant/Regeneration Supply Control Circuit High P2065 Fuel Level Sensor "B" Circuit Malfunction P2066 Fuel Level Sensor "B" Circuit Range/Performance P2067 Fuel Level Sensor "B" Circuit Low Input P2068 Fuel Level Sensor "B" Circuit High Input P2069 Fuel Level Sensor "B" Circuit Intermittent P206A Reductant Quality Sensor Circuit P206B Reductant Quality Sensor Circuit Performance P206C Reductant Quality Sensor Circuit Low Voltage



Codes	Definition
	Reductant Quality Sensor Circuit High Voltage
	Intake Manifold Tuning (IMT) Valve Stuck Open Bank 2
	Intake Manifold Tuning (IMT) Valve Stuck Closed Bank 2 Intake Manifold Tuning (IMT) Valve Stuck Open Bank 1
	Intake Manifold Tuning (IMT) Valve Stuck Open Bank 1 Intake Manifold Tuning (IMT) Valve Stuck Closed Bank 1
	Throttle Actuator Control System Ice Blockage
	Manifold Absolute Pressure/Mass Air Flow - Throttle Position Correlation at
P2073	Idle
P2074	Manifold Absolute Pressure/Mass Air Flow - Throttle Position Correlation at Higher Load
P2075	Intake Manifold Tuning (IMT) Valve Position Sensor/Switch Circuit Bank 1
P2076	Intake Manifold Tuning (IMT) Valve Position Sensor/Switch Circuit Range/Performance
P2077	Intake Manifold Tuning (IMT) Valve Position Sensor/Switch Circuit Low
P2078	Intake Manifold Tuning (IMT) Valve Position Sensor/Switch Circuit High
P2079	Intake Manifold Tuning (IMT) Valve Position Sensor/Switch Circuit Intermittent
P207A	Intake Manifold Tuning Valve Position Sensor/Switch Circuit Bank 2
P207B	Intake Manifold Tuning Valve Position Sensor/Switch Circuit Range/Performance Bank 2
P207C	Intake Manifold Tuning Valve Position Sensor/Switch Circuit Low Bank 2
P207D	Intake Manifold Tuning Valve Position Sensor/Switch Circuit High Bank 2
P207E	Intake Manifold Tuning Valve Position Sensor/Switch Circuit Intermittent Bank 2
P207F	Reductant Quality Performance
P2080	Exhaust Gas Temperature EGT Sensor Circuit Range/Performance Bank 1 Sensor 1
P2081	Exhaust Gas Temperature EGT Sensor Circuit Intermittent Bank 1 Sensor 1
P2082	Exhaust Gas Temperature EGT Sensor Circuit Range/Performance Bank 2 Sensor 1
P2083	Exhaust Gas Temperature EGT Sensor Circuit Intermittent Bank 2 Sensor 1
P2084	Exhaust Gas Temperature EGT Sensor Circuit Range/Performance Bank 1 Sensor 2
P2085	Exhaust Gas Temperature EGT Sensor Circuit Intermittent Bank 1 Sensor 2
P2086	Exhaust Gas Temperature EGT Sensor Circuit Range/Performance Bank 2 Sensor 2
P2087	Exhaust Gas Temperature EGT Sensor Circuit Intermittent Bank 2 Sensor 2
P2088	A Camshaft Position Actuator Control Circuit Low Bank 1
P2089	A Camshaft Position Actuator Control Circuit High Bank 1
P208A	Reductant Pump Control Circuit/Open
P208B	Reductant Pump Control Range/Performance
	Reductant Pump Control Circuit Low
	Reductant Pump Control Circuit High
	Reductant Injection Valve Stuck Closed Bank 1 Unit 1
DJUSE	Reductant Injection Value Stuck Closed

P208F Reductant Injection Valve Stuck Closed



Codes Definition P2090 B Camshaft Position Actuator Control Circuit Low Bank 1 **P2091** B Camshaft Position Actuator Control Circuit High Bank 1 P2092 A Camshaft Position Actuator Control Circuit Low Bank 2 P2093 A Camshaft Position Actuator Control Circuit High Bank 2 P2094 B Camshaft Position Actuator Control Circuit Low Bank 2 P2095 B Camshaft Position Actuator Control Circuit High Bank 2 P2096 Post Catalyst Fuel Trim System Too Lean Bank 1 P2097 Post Catalyst Fuel Trim System Too Rich Bank 1 **P2098** Post Catalyst Fuel Trim System Too Lean Bank 2 P2099 Post Catalyst Fuel Trim System Too Rich Bank 2 P209A Reductant Injection Air Pressure Sensor B Circuit **P209B** Reductant Injection Air Pressure Sensor B Circuit Range/Performance P209C Reductant Injection Air Pressure Sensor B Circuit Low P209D Reductant Injection Air Pressure Sensor B Circuit High P209E Reductant Injection Air Pressure Sensor A/B Correlation **P209F** Reductant Tank Heater Control Circuit Performance P20A0 Reductant Purge Control Valve Circuit /Open P20A1 Reductant Purge Control Valve Performance P20A2 Reductant Purge Control Valve Circuit Low P20A3 Reductant Purge Control Valve Circuit High P20A4 Reductant Purge Control Valve Stuck Open P20A5 Reductant Purge Control Valve Stuck Closed P20A6 Reductant Injection Air Pressure Control Valve Circuit/Open P20A7 Reductant Injection Air Pressure Control Valve Performance P20A8 Reductant Injection Air Pressure Control Valve Circuit Low **P20A9** Reductant Injection Air Pressure Control Valve Circuit High **P20AA** Reductant Injection Air Pressure Control Valve Stuck Open P20AB Reductant Injection Air Pressure Control Valve Stuck Closed **P20AC** Reductant Metering Unit Temperature Sensor Circuit **P20AD** Reductant Metering Unit Temperature Sensor Circuit Range/Performance **P20AE** Reductant Metering Unit Temperature Sensor Circuit Low **P20AF** Reductant Metering Unit Temperature Sensor Circuit High P20B0 Reductant Metering Unit Temperature Sensor Circuit Intermittent/Erratic P20B1 Reductant Heater Coolant Control Valve Circuit/Open **P20B2** Reductant Heater Coolant Control Valve Performance P20B3 Reductant Heater Coolant Control Valve Circuit Low P20B4 Reductant Heater Coolant Control Valve Circuit High P20B5 Reductant Metering Unit Heater Control Circuit/Open P20B6 Reductant Metering Unit Heater Control Circuit Performance P20B7 Reductant Metering Unit Heater Control Circuit Low P20B8 Reductant Metering Unit Heater Control Circuit High P20B9 Reductant Heater A Control Circuit/Open **P20BA** Reductant Heater A Control Circuit Performance P20BB Reductant Heater A Control Circuit Low



Codes Definition **P20BC** Reductant Heater A Control Circuit High P20BD Reductant Heater B Control Circuit/Open **P20BE** Reductant Heater B Control Circuit Performance **P20BF** Reductant Heater B Control Circuit Low **P20C0** Reductant Heater B Control Circuit High P20C1 Reductant Heater C Control Circuit/Open **P20C2** Reductant Heater C Control Circuit Performance **P20C3** Reductant Heater C Control Circuit Low **P20C4** Reductant Heater C Control Circuit High P20C5 Reductant Heater D Control Circuit/Open P20C6 Reductant Heater D Control Circuit Performance **P20C7** Reductant Heater D Control Circuit Low P20C8 Reductant Heater D Control Circuit High P20C9 Reductant Control Module Requested MIL Illumination **P20CA** Reductant Injection Air Pressure Leakage P20CB Exhaust Aftertreatment Fuel Injector A Control Circuit/Open P20CC Exhaust Aftertreatment Fuel Injector A Control Circuit Performance **P20CD** Exhaust Aftertreatment Fuel Injector A Control Circuit Low **P20CE** Exhaust Aftertreatment Fuel Injector A Control Circuit High **P20CF** Exhaust Aftertreatment Fuel Injector A Stuck Open P20D0 Exhaust Aftertreatment Fuel Injector A Stuck Closed P20D1 Exhaust Aftertreatment Fuel Injector B Control Circuit/Open P20D2 Exhaust Aftertreatment Fuel Injector B Control Circuit Performance **P20D3** Exhaust Aftertreatment Fuel Injector B Control Circuit Low **P20D4** Exhaust Aftertreatment Fuel Injector B Control Circuit High **P20D5** Exhaust Aftertreatment Fuel Injector B Stuck Open P20D6 Exhaust Aftertreatment Fuel Injector B Stuck Closed P20D7 Exhaust Aftertreatment Fuel Supply Control Circuit/Open **P20D8** Exhaust Aftertreatment Fuel Supply Control Circuit Performance **P20D9** Exhaust Aftertreatment Fuel Supply Control Circuit Low **P20DA** Exhaust Aftertreatment Fuel Supply Control Circuit High **P20DB** Exhaust Aftertreatment Fuel Supply Control Stuck Open **P20DC** Exhaust Aftertreatment Fuel Supply Control Stuck Closed P20DD Exhaust Aftertreatment Fuel Pressure Sensor Circuit **P20DE** Exhaust Aftertreatment Fuel Pressure Sensor Circuit Range/Performance **P20DF** Exhaust Aftertreatment Fuel Pressure Sensor Circuit Low **P20E0** Exhaust Aftertreatment Fuel Pressure Sensor Circuit High **P20E1** Exhaust Aftertreatment Fuel Pressure Sensor Circuit Intermittent/Erratic P20E2 Exhaust Gas Temperature Sensor 1/2 Correlation Bank 1 P20E3 Exhaust Gas Temperature Sensor 1/3 Correlation Bank 1 P20E4 Exhaust Gas Temperature Sensor 2/3 Correlation Bank 1 P20E5 Exhaust Gas Temperature Sensor 1/2 Correlation Bank 2 P20E6 Reductant Injection Air Pressure Too Low P20E7 Reductant Injection Air Pressure Too High



Codes	Definition
P20E8	Reductant Pressure Too Low
P20E9	Reductant Pressure Too High
P20EA	Early
P20EB	Reductant Control Module Power Relay De-Energized Performance - Too Late
<b>P20EC</b>	SCR NOx Catalyst - Over Temperature Bank 1
P20ED	SCR NOx Pre-Catalyst - Over Temperature Bank 1
<b>P20EE</b>	SCR NOx Catalyst Efficiency Below Threshold Bank 1
<b>P20EF</b>	SCR NOx Pre- Catalyst Efficiency Below Threshold Bank 1
P20F0	SCR NOx Catalyst - Over Temperature Bank 2
P20F1	SCR NOx Pre-Catalyst - Over Temperature Bank 2
P20F2	SCR NOx Catalyst Efficiency Below Threshold Bank 2
P20F3	SCR NOx Pre- Catalyst Efficiency Below Threshold Bank 2
P20F4	Reductant Consumption Too Low
P20F5	Reductant Consumption Too High
P20F6	Reductant Injection Valve Stuck Open Bank 1 Unit 1
P20F7	Reductant Injection Valve Stuck Open Bank 2 Unit 1
P20F8	ISO/SAE Reserved
P20F9	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
P20FC	ISO/SAE Reserved
	Throttle Actuator A Control Motor Circuit Open
	Throttle Actuator A Control Motor Circuit Range Performance
	Throttle Actuator A Control Motor Circuit Low
	Throttle Actuator A Control Motor Circuit High
	Throttle Actuator Control System - Forced Idle
	Throttle Actuator Control System - Forced Engine Shutdown
	Throttle Actuator Control System - Forced Limited Power
	Throttle Actuator Control Module Processor
	Throttle Actuator Control Module Performance
	Throttle/Pedal Position Sensor A Minimum Stop Performance
	Throttle Actuator B Control Motor Circuit Open
	Throttle Actuator B Control Motor Circuit Range Performance
	Throttle Actuator B Control Motor Circuit Low
	Throttle Actuator B Control Motor Circuit High
	Throttle/Pedal Pos Sensor/Switch C / F Voltage Correlation
	ISO/SAE Reserved
	Throttle Actuator Control System - Forced Limited RPM
P2111	Throttle Actuator Control System Stuck Open



Codes Definition P2112 Throttle Actuator Control System Stuck Closed **P2113** Throttle/Pedal Position Sensor B Minimum Stop Performance P2114 Throttle/Pedal Position Sensor C Minimum Stop Performance P2115 Throttle/Pedal Position Sensor D Minimum Stop Performance **P2116** Throttle/Pedal Position Sensor E Minimum Stop Performance P2117 Throttle/Pedal Position Sensor F Minimum Stop Performance **P2118** Throttle Actuator Control Motor Current Range/Performance P2119 Throttle Actuator Control Throttle Body Range/Performance P211A ISO/SAE Reserved P211B ISO/SAE Reserved P211C ISO/SAE Reserved P211D ISO/SAE Reserved P211E ISO/SAE Reserved P211F ISO/SAE Reserved P2120 Throttle/Pedal Position Sensor/Switch "D" Circuit Malfunction **P2121** Throttle/Pedal Position Sensor/Switch "D" Circuit Range/Performance P2122 Throttle/Pedal Position Sensor/Switch "D" Circuit Low Input P2123 Throttle/Pedal Position Sensor/Switch "D" Circuit High Input P2124 Throttle/Pedal Position Sensor/Switch "D" Circuit Intermittent P2125 Throttle/Pedal Position Sensor/Switch "E" Circuit Malfunction P2126 Throttle/Pedal Position Sensor/Switch "E" Circuit Range/Performance P2127 Throttle/Pedal Position Sensor/Switch "E" Circuit Low Input P2128 Throttle/Pedal Position Sensor/Switch "E" Circuit High Input **P2129** Throttle/Pedal Position Sensor/Switch "E" Circuit Intermittent P212A Throttle Position Sensor/Switch "G" Circuit Malfunction P212B Throttle Position Sensor/Switch "G" Circuit Range/Performance P212C Throttle/Pedal Position Sensor/Switch "G" Circuit Low Input P212D Throttle Position Sensor/Switch "G" Circuit High Input P212E Throttle Position Sensor/Switch "G" Circuit Intermittent **P212F** ISO/SAE Reserved P2130 Throttle/Pedal Position Sensor/Switch "F" Circuit Malfunction P2131 Throttle/Pedal Position Sensor/Switch "F" Circuit Range/Performance P2132 Throttle/Pedal Position Sensor/Switch "D" Circuit Low Input P2133 Throttle/Pedal Position Sensor/Switch "F" Circuit High Input P2134 Throttle/Pedal Position Sensor/Switch "F" Circuit Intermittent **P2135** Throttle/Pedal Pos Sensor/Switch A / B Voltage Correlation P2136 Throttle/Pedal Pos Sensor/Switch A / C Voltage Correlation P2137 Throttle/Pedal Pos Sensor/Switch B / C Voltage Correlation P2138 Throttle/Pedal Pos Sensor/Switch D / E Voltage Correlation P2139 Throttle/Pedal Pos Sensor/Switch D / F Voltage Correlation P213A Exhaust Gas Recirculation (EGR) Throttle Control Circuit "B" Open Exhaust Gas Recirculation Throttle Position Control Circuit "B" P213B Range/Performance P213C Exhaust Gas Recirculation Throttle Position Control Circuit "B" Low



Codes
Coucs

- P213D Exhaust Gas Recirculation Throttle Position Control Circuit "B" High
- **P213E** Fuel Injection System Fault Forced Engine Shutdown
- P213F Fuel Pump System Fault Forced Engine Shutdown
- **P2140** Throttle/Pedal Pos Sensor/Switch E / F Voltage Correlation
- P2141 Exhaust Gas Recirculation Throttle Position Control Circuit "A" Low
- P2142 Exhaust Gas Recirculation Throttle Position Control Circuit "A" High
- P2143 Exhaust Gas Recirculation Vent Control Circuit /Open
- P2144 Exhaust Gas Recirculation Vent Control Circuit Low
- P2145 Exhaust Gas Recirculation Vent Control Circuit High
- P2146 Fuel Injector Group A Circuit/Open
- P2147 Fuel Injector Group A Circuit Low
- P2148 Fuel Injector Group A Circuit High
- P2149 Fuel Injector Group B Circuit/Open
- P214A ISO/SAE Reserved
- P214B ISO/SAE Reserved
- **P214C** ISO/SAE Reserved
- P214D ISO/SAE Reserved
- P214E ISO/SAE Reserved
- P214F ISO/SAE Reserved
- **P2150** Fuel Injector Group B Circuit Low
- P2151 Fuel Injector Group B Circuit High
- P2152 Fuel Injector Group C Circuit/Open
- P2153 Fuel Injector Group C Circuit Low
- P2154 Fuel Injector Group C Circuit High
- P2155 Fuel Injector Group D Circuit/Open
- P2156 Fuel Injector Group D Circuit Low
- P2157 Fuel Injector Group D Circuit High
- P2158 Vehicle Speed Sensor "B" Malfunction
- P2159 Vehicle Speed Sensor "B" Range/Performance
- P215A Vehicle Speed Wheel Speed Correlation
- P215B Vehicle Speed Output Shaft Speed Correlation
- P215C Output Shaft Speed Wheel Speed Correlation
- P215D ISO/SAE Reserved
- P215E ISO/SAE Reserved
- P215F ISO/SAE Reserved
- P2160 Vehicle Speed Sensor "B" Low Input
- P2161 Vehicle Speed Sensor "B" Intermittent / Erratic / High
- P2162 Output Speed Sensor A/B Correlation
- P2163 Throttle/Pedal Position Sensor A Maximum Stop Performance
- P2164 Throttle/Pedal Position Sensor B Maximum Stop Performance
- P2165 Throttle/Pedal Position Sensor C Maximum Stop Performance
- P2166 Throttle/Pedal Position Sensor D Maximum Stop Performance
- P2167 Throttle/Pedal Position Sensor E Maximum Stop Performance
- P2168 Throttle/Pedal Position Sensor F Maximum Stop Performance



Codes Definition P2169 Exhaust Pressure Regulator Vent Solenoid Control Circuit/Open **P216A** Fuel Injector Group E Circuit/Open **P216B** Fuel Injector Group E Circuit Low **P216C** Fuel Injector Group E Circuit High P216D Fuel Injector Group F Circuit/Open **P216E** Fuel Injector Group F Circuit Low **P216F** Fuel Injector Group F Circuit High P2170 Exhaust Pressure Regulator Vent Solenoid Control Circuit Low **P2171** Exhaust Pressure Regulator Vent Solenoid Control Circuit High P2172 Throttle Actuator Control System - Sudden High Air Flow Detected P2173 Throttle Actuator Control System - High Air Flow Detected P2174 Throttle Actuator Control System - Sudden Low Air Flow Detected P2175 Throttle Actuator Control System - Low Air Flow Detected P2176 Throttle Actuator Control System - Idle Position Not Learned P2177 System Too Lean Off Idle Bank 1 P2178 System Too Rich Off Idle Bank 1 P2179 System Too Lean Off Idle Bank 2 P217A Fuel Injector Group G Circuit/Open P217B Fuel Injector Group G Circuit Low P217C Fuel Injector Group G Circuit High P217D Fuel Injector Group H Circuit/Open P217E Fuel Injector Group H Circuit Low **P217F** Fuel Injector Group H Circuit High **P2180** System Too Rich Off Idle Bank 2 **P2181** Cooling System Performance **P2182** Engine Coolant Temperature Sensor 2 Circuit Malfunction P2183 Engine Coolant Temperature (ECT) Sensor #2 Circuit Range/Performance **P2184** Engine Coolant Temperature (ECT) Sensor #2 Circuit Low Input **P2185** Engine Coolant Temperature Sensor #2 Circuit High Input **P2186** Engine Coolant Temperature Sensor #2 Circuit Intermittent **P2187** System Too Lean at Idle (Bank 1) P2188 System Too Rich Off Idle Bank 1 **P2189** System Too Lean at Idle (Bank 2) P218A ISO/SAE Reserved P218B ISO/SAE Reserved **P218C** ISO/SAE Reserved P218D ISO/SAE Reserved P218E ISO/SAE Reserved P218F ISO/SAE Reserved P2190 System Too Rich Off Idle Bank 2 P2191 System Too Lean At Higher Load Bank 1 **P2192** System Too Rich At Higher Load Bank 1 P2193 System Too Lean At Higher Load Bank 2 P2194 System Too Rich At Higher Load Bank 2



Codes Definition **P2195** O2 A/F Sensor Signal Biased/Stuck Lean (Bank 1 Sensor 1) **P2196** O2 A/F Sensor Signal Biased/Stuck Rich (Bank 1 Sensor 1) **P2197** O2 A/F Sensor Signal Biased/Stuck Lean (Bank 2 Sensor 1) **P2198** O2 A/F Sensor Signal Biased/Stuck Rich (Bank 2 Sensor 1) **P2199** Intake Air Temperature Sensor 1/2 Correlation P219A Bank 1 Air/Fuel Ratio Imbalance P219B Bank 2 Air/Fuel Ratio Imbalance **P219C** Cylinder #1 Imbalance Error **P219D** Cylinder #2 Imbalance Error **P219E** Cylinder #3 Imbalance Error **P219F** Cylinder #4 Imbalance Error P21A0 ISO/SAE Reserved P21A1 ISO/SAE Reserved P21A2 ISO/SAE Reserved P21A3 ISO/SAE Reserved P21A4 ISO/SAE Reserved P21A5 ISO/SAE Reserved P21A6 ISO/SAE Reserved P21A7 ISO/SAE Reserved P21A8 ISO/SAE Reserved P21A9 ISO/SAE Reserved P21AA ISO/SAE Reserved P21AB ISO/SAE Reserved **P21AC** ISO/SAE Reserved P21AD ISO/SAE Reserved **P21AE** ISO/SAE Reserved P21AF ISO/SAE Reserved P21B0 ISO/SAE Reserved P21B1 ISO/SAE Reserved P21B2 ISO/SAE Reserved P21B3 ISO/SAE Reserved P21B4 ISO/SAE Reserved P21B5 ISO/SAE Reserved P21B6 ISO/SAE Reserved P21B7 ISO/SAE Reserved **P21B8** ISO/SAE Reserved P21B9 ISO/SAE Reserved P21BA ISO/SAE Reserved P21BB ISO/SAE Reserved P21BC ISO/SAE Reserved P21BD ISO/SAE Reserved P21BE ISO/SAE Reserved **P21BF** ISO/SAE Reserved P21C0 ISO/SAE Reserved



Codes		
P21C1	ISO/SAE	Reserved
P21C2		Reserved
P21C3	ISO/SAE	Reserved
P21C4	ISO/SAE	Reserved
P21C5	ISO/SAE	Reserved
P21C6	ISO/SAE	Reserved
P21C7	ISO/SAE	Reserved
P21C8	ISO/SAE	Reserved
P21C9	ISO/SAE	Reserved
P21CA	ISO/SAE	Reserved
<b>P21CB</b>	ISO/SAE	Reserved
<b>P21CC</b>	ISO/SAE	Reserved
P21CD	ISO/SAE	Reserved
P21CE	-	Reserved
P21CF		Reserved
P21D0		Reserved
P21D1	-	Reserved
P21D2	•	Reserved
P21D3	-	Reserved
P21D4	-	Reserved
P21D5	-	Reserved
P21D6	-	Reserved
P21D7	-	Reserved
P21D8 P21D9	-	Reserved Reserved
P21D9 P21DA	•	Reserved
	-	Reserved
P21DC	•	Reserved
		Reserved
		Reserved
	-	Reserved
P21E0	-	Reserved
P21E1	-	Reserved
P21E2	ISO/SAE	Reserved
P21E3	ISO/SAE	Reserved
P21E4	ISO/SAE	Reserved
P21E5	ISO/SAE	Reserved
P21E6	ISO/SAE	Reserved
P21E7	ISO/SAE	Reserved
P21E8	ISO/SAE	Reserved
P21E9	ISO/SAE	Reserved
P21EA	ISO/SAE	Reserved
P21EB	-	Reserved
P21EC	ISO/SAE	Reserved



Codes	Definition
P21ED	ISO/SAE Reserved
P21EE	ISO/SAE Reserved
P21EF	ISO/SAE Reserved
P21F0	ISO/SAE Reserved
P21F1	ISO/SAE Reserved
P21F2	ISO/SAE Reserved
P21F3	ISO/SAE Reserved
P21F4	ISO/SAE Reserved
P21F5	ISO/SAE Reserved
P21F6	ISO/SAE Reserved
	ISO/SAE Reserved
-	ISO/SAE Reserved
	NOx Sensor Circuit Bank 1
	NOx Sensor Circuit Range/Performance Bank 1
-	NOx Sensor Circuit Low Bank 1
	NOx Sensor Circuit High Bank 1
	NOx Sensor Circuit Intermittent Bank 1
	NOx Sensor Heater Control Circuit/Open Bank 1
	NOx Sensor Heater Control Circuit Low Bank 1
	NOx Sensor Heater Control Circuit High Bank 1 NOx Sensor Heater Sense Circuit Bank 1
	NOx Sensor Heater Sense Circuit Bank 1 NOx Sensor Heater Sense Circuit Range/Performance Bank 1
	ISO/SAE Reserved
	NOx Sensor Heater Sense Circuit Low Bank 1
P2211	NOx Sensor Heater Sense Circuit High Bank 1
	NOx Sensor Heater Sense Circuit Intermittent Bank 1
P2213	NOx Sensor Circuit Bank 2
P2214	NOx Sensor Circuit Range/Performance Bank 2
	NOx Sensor Circuit Low Bank 2
P2216	NOx Sensor Circuit High Bank 2
P2217	NOx Sensor Circuit Intermittent Bank 2
P2218	NOx Sensor Heater Control Circuit/Open Bank 2



Codes	
	NOx Sensor Heater Control Circuit Low Bank 2
	ISO/SAE Reserved
	NOx Sensor Heater Control Circuit High Bank 2
	NOx Sensor Heater Sense Circuit Bank 2
	NOx Sensor Heater Sense Circuit Range/Performance Bank 2
	NOx Sensor Heater Sense Circuit Low Bank 2
	NOx Sensor Heater Sense Circuit High Bank 2
	NOx Sensor Heater Sense Circuit Intermittent Bank 2
	Barometric Pressure Sensor A
	Barometric Pressure Sensor A Range/Performance
-	Barometric Pressure Sensor A Low
	Barometric Pressure Sensor A High
	Barometric Pressure Sensor B
	Barometric Pressure Sensor B Range/Performance
-	Barometric Pressure Sensor B Low
	Barometric Pressure Sensor B High
	Barometric Pressure Sensor B Intermittent/Erratic Barometric Pressure Sensor A/B Correlation
	Barometric Pressure Sensor A Intermittent/Erratic
	O2 Sensor Signal Circuit Shorted to Heater Circuit Bank 1 Sensor
	O2 Sensor Signal Circuit Shorted to Heater Circuit Bank 1 Sensor O2 Sensor Signal Circuit Shorted to Heater Circuit Bank 1 Sensor
	O2 Sensor Signal Circuit Shorted to Heater Circuit Bank 1 Sensor O2 Sensor Signal Circuit Shorted to Heater Circuit Bank 1 Sensor
	O2 Sensor Signal Circuit Shorted to Heater Circuit Bank 2 Sensor O2 Sensor Signal Circuit Shorted to Heater Circuit Bank 2 Sensor
	O2 Sensor Signal Circuit Shorted to Heater Circuit Bank 2 Sensor O2 Sensor Signal Circuit Shorted to Heater Circuit Bank 2 Sensor
	O2 Sensor Signal Circuit Shorted to Heater Circuit Bank 2 Sensor O2 Sensor Signal Circuit Shorted to Heater Circuit Bank 2 Sensor
	O2 Sensor Positive Current Control Circuit/Open Bank 1 Sensor 1
	O2 Sensor Positive Current Control Circuit Low Bank 1 Sensor 1
	O2 Sensor Positive Current Control Circuit High Bank 1 Sensor 1
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
P223D	ISO/SAE Reserved
P223E	ISO/SAE Reserved
P223F	ISO/SAE Reserved
P2240	O2 Sensor Positive Current Control Circuit/Open Bank 2 Sensor 1
P2241	O2 Sensor Positive Current Control Circuit Low Bank 2 Sensor 1
P2242	O2 Sensor Positive Current Control Circuit High Bank 2 Sensor 1
P2243	O2 Sensor Reference Voltage Circuit/Open Bank 1 Sensor 1

**P2243** O2 Sensor Reference Voltage Performance Bank 1 Sensor 1



Codes	Definition
P2245	O2 Sensor Reference Voltage Circuit Low Bank 1 Sensor 1
	O2 Sensor Reference Voltage Circuit High Bank 1 Sensor 1
	O2 Sensor Reference Voltage Circuit/Open Bank 2 Sensor 1
P2248	O2 Sensor Reference Voltage Performance Bank 2 Sensor 1
P2249	O2 Sensor Reference Voltage Circuit Low Bank 2 Sensor 1
	ISO/SAE Reserved
P224B	ISO/SAE Reserved
P224C	ISO/SAE Reserved
P224D	ISO/SAE Reserved
P224E	ISO/SAE Reserved
P224F	ISO/SAE Reserved
P2250	O2 Sensor Reference Voltage Circuit High Bank 2 Sensor 1
P2251	O2 Sensor Negative Current Control Circuit/Open Bank 1 Sensor 1
P2252	O2 Sensor Negative Current Control Circuit Low Bank 1 Sensor 1
P2253	O2 Sensor Negative Current Control Circuit High (Bank 1 Sensor 1)
P2254	O2 Sensor Negative Current Control Circuit/Open Bank 2 Sensor 1
P2255	O2 Sensor Negative Current Control Circuit Low Bank 2 Sensor 1
P2256	O2 Sensor Negative Current Control Circuit High Bank 2 Sensor 1
P2257	Secondary Air Injection System Control A Circuit Low
P2258	Secondary Air Injection System Control 'A' Circuit High
P2259	Secondary Air Injection System Control B Circuit Low
P225A	ISO/SAE Reserved
	Secondary Air Injection System Control B Circuit High
	Turbocharger/Supercharger Bypass Valve - Mechanical
	Turbocharger/Supercharger Boost Pressure Not Detected - Mechanical
	Turbocharger/Supercharger Boost System Performance
	Water in Fuel Sensor Circuit
	Water in Fuel Sensor Circuit Range/Performance
	Water in Fuel Sensor Circuit Low
	Water in Fuel Sensor Circuit High
	Water in Fuel Sensor Circuit Intermittent
	Water in Fuel Lemp Control Circuit
	Water in Fuel Lamp Control Circuit
	Turbocharger/Supercharger Boost Pressure Too High - Mechanical
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
r220f	ISO/SAE Reserved

P2270 O2 Sensor Signal Biased/Stuck Lean Bank 1 Sensor 2



Codes	Definition
P2271	O2 Sensor Signal Biased/Stuck Rich Bank 1 Sensor 2
P2272	O2 Sensor Signal Stuck Lean Bank 2 Sensor 2
P2273	O2 Sensor Signal Biased/Stuck Rich Bank 2 Sensor 2
P2274	O2 Sensor Signal Biased/Stuck Lean Bank 1 Sensor 3
P2275	O2 Sensor Signal Biased/Stuck Rich Bank 1 Sensor 3
P2276	O2 Sensor Signal Stuck Lean Bank 2 Sensor 3
P2277	O2 Sensor Signal Biased/Stuck Rich Bank 2 Sensor 3
P2278	O2 Sensor Signals Swapped Bank 1 Sensor 3/Bank 2 Sensor 3
P2279	Intake Air System Leak
P227A	ISO/SAE Reserved
P227B	ISO/SAE Reserved
	Air Flow Restriction/Air Leak Between Air Filter and MAF
	Air Leak Between MAF and Throttle Body
	Air Leak Between Throttle Body and Intake Valves
	Injector Control Pressure Sensor Circuit
	Injector Control Pressure Sensor Circuit Range/Performance
	Injector Control Pressure Sensor Circuit Low
	Injector Control Pressure Sensor Circuit High
	Injector Control Pressure Sensor Circuit Intermittent
	Injector Control Pressure Too High Injector Control Pressure Too High - Engine Off
	Fuel Pressure Regulator 1 - Forced Engine Shutdown
	Fuel Pressure Regulator 2 - Forced Engine Shutdown
	Fuel Pressure Regulator 1 Exceeded Control Limits - Pressure Too Low
	Fuel Pressure Regulator 1 Exceeded Control Limits - Pressure Too High
	Fuel Pressure Regulator 1 Exceeded Learning Limits - Too Low
	Fuel Pressure Regulator 1 Exceeded Control Limits - Too High
	Injector Control Pressure Too Low
P2291	Injector Control Pressure Too Low - Engine Cranking
P2292	Injector Control Pressure Erratic
P2293	Fuel Pressure Regulator 2 Performance
P2294	Fuel Pressure Regulator 2 Control Circuit Open
P2295	Fuel Pressure Regulator 2 Control Circuit Low
P2296	Fuel Pressure Regulator 2 Control Circuit High
	O2 Sensor Out of Range During Deceleration Bank 1 Sensor 1
	O2 Sensor Out of Range During Deceleration Bank 2 Sensor 1
	Brake Pedal Position/Accelerator Pedal Position Incompatible
	Fuel Pressure Regulator 2 Exceeded Control Limits - Pressure Too Low
	Fuel Pressure Regulator 2 Exceeded Control Limits - Pressure Too High
P229C	Fuel Pressure Regulator 2 Exceeded Learning Limits - Too Low



Codes	Definition
P229D	Fuel Pressure Regulator 2 Exceeded Control Limits - Too High
P229E	ISO/SAE Reserved
P229F	ISO/SAE Reserved
P22A0	ISO/SAE Reserved
P22A1	ISO/SAE Reserved
P22A2	ISO/SAE Reserved
P22A3	ISO/SAE Reserved
P22A4	ISO/SAE Reserved
P22A5	ISO/SAE Reserved
P22A6	ISO/SAE Reserved
P22A7	ISO/SAE Reserved
P22A8	ISO/SAE Reserved
P22A9	ISO/SAE Reserved
P22AA	ISO/SAE Reserved
P22AB	ISO/SAE Reserved
	ISO/SAE Reserved ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved



Codes P22C9 ISO/SAE Reserved **P22CA** ISO/SAE Reserved P22CB ISO/SAE Reserved P22CC ISO/SAE Reserved P22CD ISO/SAE Reserved P22CE ISO/SAE Reserved **P22CF** ISO/SAE Reserved **P22D0** ISO/SAE Reserved P22D1 ISO/SAE Reserved **P22D2** ISO/SAE Reserved P22D3 ISO/SAE Reserved P22D4 ISO/SAE Reserved P22D5 ISO/SAE Reserved P22D6 ISO/SAE Reserved P22D7 ISO/SAE Reserved P22D8 ISO/SAE Reserved P22D9 ISO/SAE Reserved **P22DA** ISO/SAE Reserved P22DB ISO/SAE Reserved **P22DC** ISO/SAE Reserved P22DD ISO/SAE Reserved **P22DE** ISO/SAE Reserved P22DF ISO/SAE Reserved P22E0 ISO/SAE Reserved P22E1 ISO/SAE Reserved P22E2 ISO/SAE Reserved P22E3 ISO/SAE Reserved P22E4 ISO/SAE Reserved P22E5 ISO/SAE Reserved P22E6 ISO/SAE Reserved P22E7 ISO/SAE Reserved P22E8 ISO/SAE Reserved P22E9 ISO/SAE Reserved P22EA ISO/SAE Reserved P22EB ISO/SAE Reserved P22EC ISO/SAE Reserved **P22ED** ISO/SAE Reserved P22EE ISO/SAE Reserved P22EF ISO/SAE Reserved P22F0 ISO/SAE Reserved P22F1 ISO/SAE Reserved P22F2 ISO/SAE Reserved P22F3 ISO/SAE Reserved P22F4 ISO/SAE Reserved



Codes	Definition
P22F5	ISO/SAE Reserved
P22F6	ISO/SAE Reserved
P22F7	ISO/SAE Reserved
P22F8	ISO/SAE Reserved
P22F9	ISO/SAE Reserved
P22FA	ISO/SAE Reserved
P22FB	ISO/SAE Reserved
P22FC	ISO/SAE Reserved
P22FD	ISO/SAE Reserved
P22FE	ISO/SAE Reserved
P22FF	ISO/SAE Reserved
P2300	Ignition Coil A Primary Control Circuit Low
P2301	Ignition Coil A Primary Control Circuit High
P2302	Ignition Coil A Secondary Circuit
	Ignition Coil B Primary Control Circuit Low
	Ignition Coil B Primary Control Circuit High
	Ignition Coil B Secondary Circuit
	Ignition Coil C Primary Control Circuit Low
	Ignition Coil C Primary Control Circuit High
	Ignition Coil C Secondary Circuit
	Ignition Coil D Primary Control Circuit Low
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved ISO/SAE Reserved
	ISO/SAE Reserved
	Ignition Coil D Primary Control Circuit High
	Ignition Coil D Secondary Circuit
	Ignition Coil E Primary Control Circuit Low
	Ignition Coil E Primary Control Circuit High
	Ignition Coil E Secondary Circuit
	Ignition Coil F Primary Control Circuit Low
	Ignition Coil F Primary Control Circuit High
	Ignition Coil F Secondary Circuit
	Ignition Coil G Primary Control Circuit Low
	Ignition Coil G Primary Control Circuit High
P231A	ISO/SAE Reserved
P231B	ISO/SAE Reserved
P231C	ISO/SAE Reserved
P231D	ISO/SAE Reserved
P231E	ISO/SAE Reserved
	ISO/SAE Reserved
P2320	Ignition Coil G Secondary Circuit



Codes	Definition
P2321	Ignition Coil H Primary Control Circuit Low
P2322	Ignition Coil H Primary Control Circuit High
P2323	Ignition Coil H Secondary Circuit
P2324	Ignition Coil I Primary Control Circuit Low
P2325	Ignition Coil I Primary Control Circuit High
P2326	Ignition Coil I Secondary Circuit
P2327	Ignition Coil J Primary Control Circuit Low
P2328	Ignition Coil J Primary Control Circuit High
P2329	Ignition Coil J Secondary Circuit
P232A	ISO/SAE Reserved
P232B	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
-	ISO/SAE Reserved
	Ignition Coil K Primary Control Circuit Low
	Ignition Coil K Primary Control Circuit High
	Ignition Coil K Secondary Circuit
P2333	Ignition Coil L Primary Control Circuit Low
P2334	Ignition Coil L Primary Control Circuit High
P2335	5
	Cylinder 1 Above Knock Threshold
	Cylinder 2 Above Knock Threshold
P2338	5
	Cylinder 4 Above Knock Threshold ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	Cylinder 5 Above Knock Threshold
	Cylinder 6 Above Knock Threshold
	Cylinder 7 Above Knock Threshold
	Cylinder 8 Above Knock Threshold
	Cylinder 9 Above Knock Threshold
	Cylinder 10 Above Knock Threshold
	Cylinder 11 Above Knock Threshold
P2347	Cylinder 12 Above Knock Threshold
P2348	ISO/SAE Reserved
P2349	ISO/SAE Reserved
P234A	ISO/SAE Reserved
P234B	ISO/SAE Reserved
P234C	ISO/SAE Reserved



Codes P234D ISO/SAE Reserved **P234E** ISO/SAE Reserved P234F ISO/SAE Reserved P2350 ISO/SAE Reserved P2351 ISO/SAE Reserved P2352 ISO/SAE Reserved P2353 ISO/SAE Reserved **P2354** ISO/SAE Reserved P2355 ISO/SAE Reserved P2356 ISO/SAE Reserved P2357 ISO/SAE Reserved P2358 ISO/SAE Reserved P2359 ISO/SAE Reserved P235A ISO/SAE Reserved P235B ISO/SAE Reserved P235C ISO/SAE Reserved P235D ISO/SAE Reserved P235E ISO/SAE Reserved P235F ISO/SAE Reserved P2360 ISO/SAE Reserved P2361 ISO/SAE Reserved P2362 ISO/SAE Reserved P2363 ISO/SAE Reserved P2364 ISO/SAE Reserved P2365 ISO/SAE Reserved P2366 ISO/SAE Reserved P2367 ISO/SAE Reserved P2368 ISO/SAE Reserved P2369 ISO/SAE Reserved P236A ISO/SAE Reserved P236B ISO/SAE Reserved **P236C** ISO/SAE Reserved P236D ISO/SAE Reserved P236E ISO/SAE Reserved P236F ISO/SAE Reserved P2370 ISO/SAE Reserved P2371 ISO/SAE Reserved P2372 ISO/SAE Reserved P2373 ISO/SAE Reserved P2374 ISO/SAE Reserved P2375 ISO/SAE Reserved P2376 ISO/SAE Reserved P2377 ISO/SAE Reserved P2378 ISO/SAE Reserved



Codes	
P2379	ISO/SAE Reserved
P237A	ISO/SAE Reserved
P237B	ISO/SAE Reserved
P237C	ISO/SAE Reserved
P237D	ISO/SAE Reserved
P237E	ISO/SAE Reserved
P237F	ISO/SAE Reserved
P2380	ISO/SAE Reserved
P2381	ISO/SAE Reserved
P2382	ISO/SAE Reserved
P2383	ISO/SAE Reserved
P2384	ISO/SAE Reserved
P2385	ISO/SAE Reserved
P2386	ISO/SAE Reserved
P2387	ISO/SAE Reserved
P2388	ISO/SAE Reserved
P2389	ISO/SAE Reserved
P238A	ISO/SAE Reserved
P238B	ISO/SAE Reserved
P238C	ISO/SAE Reserved
P238D	ISO/SAE Reserved
P238E	ISO/SAE Reserved
P238F	ISO/SAE Reserved
P2390	ISO/SAE Reserved
P2391 P2392	ISO/SAE Reserved
P2392 P2393	ISO/SAE Reserved
	ISO/SAE Reserved ISO/SAE Reserved
P2394	
P2395 P2396	ISO/SAE Reserved ISO/SAE Reserved
P2390 P2397	ISO/SAE Reserved
P2398	ISO/SAE Reserved
P2399	ISO/SAE Reserved
P239A	ISO/SAE Reserved
P239B	ISO/SAE Reserved
P239C	ISO/SAE Reserved
P239D	ISO/SAE Reserved
P239E	ISO/SAE Reserved
P239F	ISO/SAE Reserved
P23A0	ISO/SAE Reserved
P23A1	ISO/SAE Reserved
P23A2	ISO/SAE Reserved
P23A3	ISO/SAE Reserved
P23A4	ISO/SAE Reserved

Codes	
P23A5	ISO/SAE Reserved
P23A6	ISO/SAE Reserved
P23A7	ISO/SAE Reserved
P23A8	ISO/SAE Reserved
P23A9	ISO/SAE Reserved
P23AA	ISO/SAE Reserved
P23AB	ISO/SAE Reserved
P23AC	ISO/SAE Reserved
P23AD	ISO/SAE Reserved
P23AE	ISO/SAE Reserved
P23AF	ISO/SAE Reserved
P23B0	ISO/SAE Reserved
P23B1	ISO/SAE Reserved
P23B2	ISO/SAE Reserved
P23B3	ISO/SAE Reserved
P23B4	ISO/SAE Reserved
P23B5	ISO/SAE Reserved
P23B6	ISO/SAE Reserved
P23B7	ISO/SAE Reserved
P23B8	ISO/SAE Reserved
P23B9	ISO/SAE Reserved
P23BA	ISO/SAE Reserved
P23BB	ISO/SAE Reserved
P23BC	ISO/SAE Reserved
P23BD	
P23BE P23BF	ISO/SAE Reserved ISO/SAE Reserved
P23C0	ISO/SAE Reserved
	ISO/SAE Reserved
P23C5	ISO/SAE Reserved
P23C6	ISO/SAE Reserved
P23C7	ISO/SAE Reserved
P23C8	ISO/SAE Reserved
P23C9	ISO/SAE Reserved
P23CA	ISO/SAE Reserved
<b>P23CB</b>	ISO/SAE Reserved
<b>P23CC</b>	ISO/SAE Reserved
P23CD	ISO/SAE Reserved
P23CE	ISO/SAE Reserved
P23CF	ISO/SAE Reserved
P23D0	ISO/SAE Reserved



Codes P23D1 ISO/SAE Reserved **P23D2** ISO/SAE Reserved P23D3 ISO/SAE Reserved P23D4 ISO/SAE Reserved P23D5 ISO/SAE Reserved P23D6 ISO/SAE Reserved P23D7 ISO/SAE Reserved **P23D8** ISO/SAE Reserved P23D9 ISO/SAE Reserved **P23DA** ISO/SAE Reserved P23DB ISO/SAE Reserved **P23DC** ISO/SAE Reserved **P23DD** ISO/SAE Reserved **P23DE** ISO/SAE Reserved **P23DF** ISO/SAE Reserved P23E0 ISO/SAE Reserved P23E1 ISO/SAE Reserved P23E2 ISO/SAE Reserved P23E3 ISO/SAE Reserved P23E4 ISO/SAE Reserved P23E5 ISO/SAE Reserved P23E6 ISO/SAE Reserved P23E7 ISO/SAE Reserved P23E8 ISO/SAE Reserved P23E9 ISO/SAE Reserved **P23EA** ISO/SAE Reserved P23EB ISO/SAE Reserved **P23EC** ISO/SAE Reserved **P23ED** ISO/SAE Reserved **P23EE** ISO/SAE Reserved **P23EF** ISO/SAE Reserved **P23F0** ISO/SAE Reserved P23F1 ISO/SAE Reserved P23F2 ISO/SAE Reserved P23F3 ISO/SAE Reserved P23F4 ISO/SAE Reserved P23F5 ISO/SAE Reserved P23F6 ISO/SAE Reserved P23F7 ISO/SAE Reserved P23F8 ISO/SAE Reserved P23F9 ISO/SAE Reserved **P23FA** ISO/SAE Reserved **P23FB** ISO/SAE Reserved P23FC ISO/SAE Reserved

Codes	Definition
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	Evaporative Emission System Leak Detection Pump Control Circuit/Open
	Evaporative Emission System Leak Detection Pump Control Circuit Low
	Evaporative Emission System Leak Detection Pump Control Circuit High
	Evaporative Emission System Leak Detection Pump Sense Circuit/Open
P2404	Evaporative Emission System Leak Detection Pump Sense Circuit
P2404	Range/Performance
P2405	Evaporative Emission System Leak Detection Pump Sense Circuit Low
P2406	Evaporative Emission System Leak Detection Pump Sense Circuit High
P2407	Evaporative Emission System Leak Detection Pump Sense Circuit Intermittent/Erratic
P2408	Fuel Cap Sensor/Switch Circuit
P2409	Fuel Cap Sensor/Switch Circuit Range/Performance
P240A	Evaporative Emission System Leak Detection Pump Heater Control Circuit/Open
P240B	Evaporative Emission System Leak Detection Pump Heater Control Circuit Low
P240C	Evaporative Emission System Leak Detection Pump Heater Control Circuit High
P240D	ISO/SAE Reserved
P240E	ISO/SAE Reserved
P240F	ISO/SAE Reserved
P2410	Fuel Cap Sensor/Switch Circuit Low
P2411	Fuel Cap Sensor/Switch Circuit High
	Fuel Cap Sensor/Switch Circuit Intermittent/Erratic
	Exhaust Gas Recirculation System Performance
	O2 Sensor Exhaust Sample Error Bank 1 Sensor 1
	O2 Sensor Exhaust Sample Error Bank 2 Sensor 1
	O2 Sensor Signals Swapped Bank 1 Sensor 2/Bank 1 Sensor 3
	O2 Sensor Signals Swapped Bank 2 Sensor 2/Bank 2 Sensor 3
	Evaporative Emission System Switching Valve Control Circuit/Open
	Evaporative Emission System Switching Valve Control Circuit Low
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved ISO/SAE Reserved
	ISO/SAE Reserved
	Evaporative Emission System Switching Valve Control Circuit High
	Evaporative Emission System Switching Valve Control Circuit High Evaporative Emission System Vent Valve Stuck Open
	Evaporative Emission System Vent Valve Stuck Open Evaporative Emission System Vent Valve Stuck Closed
	HC Adsorption Catalyst Efficiency Below Threshold Bank 1
1 4143	The fuser put of cuturyst Effective perow finteshold built f

**P2423** HC Adsorption Catalyst Efficiency Below Threshold Bank 1 **P2424** HC Adsorption Catalyst Efficiency Below Threshold Bank 2



Codes	Definition
P2425	Exhaust Gas Recirculation Cooling Valve Control Circuit/Open
P2426	Exhaust Gas Recirculation Cooling Valve Control Circuit Low
P2427	Exhaust Gas Recirculation Cooling Valve Control Circuit High
P2428	Exhaust Gas Temperature Too High Bank 1
	Exhaust Gas Temperature Too High Bank 2
	Exhaust Gas Temperature Sensor Circuit Bank 1 Sensor 3
P242B	Exhaust Gas Temperature Sensor Circuit Range/Performance Bank 1 Sensor
P242C	Exhaust Gas Temperature Sensor Circuit Low Bank 1 Sensor 3
	Exhaust Gas Temperature Sensor Circuit High Bank 1 Sensor 3
P242E	Exhaust Gas Temperature Sensor Circuit Intermittent/Erratic Bank 1 Sensor 3
P242F	Diesel Particulate Filter Restriction - Ash Accumulation
P2430	Secondary Air Injection System Air Flow/Pressure Sensor Circuit Bank 1
P2431	Secondary Air Injection System Air Flow/Pressure Sensor Circuit Range/Performance Bank 1
P2432	Secondary Air Injection System Air Flow/Pressure Sensor Circuit Low Bank
P2433	Secondary Air Injection System Air Flow/Pressure Sensor Circuit High Bank 1
P2434	Secondary Air Injection System Air Flow/Pressure Sensor Circuit Intermittent/Erratic Bank 1
P2435	Secondary Air Injection System Air Flow/Pressure Sensor Circuit Bank 2
P2436	Secondary Air Injection System Air Flow/Pressure Sensor Circuit Range/Performance Bank 2
P2437	Secondary Air Injection System Air Flow/Pressure Sensor Circuit Low Bank 2
P2438	Secondary Air Injection System Air Flow/Pressure Sensor Circuit High Bank 2
P2439	Secondary Air Injection System Air Flow/Pressure Sensor Circuit Intermittent/Erratic Bank 2
P243A	ISO/SAE Reserved
P243B	ISO/SAE Reserved
P243C	ISO/SAE Reserved
P243D	ISO/SAE Reserved
P243E	ISO/SAE Reserved
P243F	ISO/SAE Reserved
P2440	Secondary Air Injection System Switching Valve Stuck Open Bank 1
P2441	Secondary Air Injection System Switching Valve Stuck Closed Bank 1
	Secondary Air Injection System Switching Valve Stuck Open Bank 2
	Secondary Air Injection System Switching Valve Stuck Closed Bank 2
	Secondary Air Injection System Pump Stuck On Bank 1
	Secondary Air Injection System Pump Stuck Off Bank 1
	Secondary Air Injection System Pump Stuck On Bank 2
P2447	Secondary Air Injection System Pump Stuck Off Bank 2



Codes	Definition
P2448	Secondary Air Injection System High Air Flow Bank 1
P2449	Secondary Air Injection System High Air Flow Bank 2
P244A	Diesel Particulate Filter (DPF) Differential Pressure Too Low Bank 1
P244B	Diesel Particulate Filter (DPF) Differential Pressure Too High Bank 1
P244C	Exhaust Temperature Too Low For Particulate Filter Regeneration Bank 1
P244D	Exhaust Temperature Too High For Particulate Filter Regeneration Bank 1
P244E	Exhaust Temperature Too Low For Particulate Filter Regeneration Bank 2
P244F	Exhaust Temperature Too High For Particulate Filter Regeneration Bank 2
P2450	Evaporative Emission System Switching Valve Performance/Stuck Open
	Evaporative Emission System Switching Valve Stuck Closed
P2452	Diesel Particulate Filter Pressure Sensor A Circuit
	Diesel Particulate Filter Pressure Sensor A Circuit Range/Performance
	Diesel Particulate Filter Pressure Sensor A Circuit Low
	Diesel Particulate Filter Pressure Sensor A Circuit High
	Diesel Particulate Filter Pressure Sensor A Circuit Intermittent
	Exhaust Gas Recirculation Cooling System Performance
	Diesel Particulate Filter Regeneration Duration
	Diesel Particulate Filter Regeneration Frequency
	Exhaust Gas Recirculation Cooler Bypass Control Circuit /Open
	Exhaust Gas Recirculation Cooler Bypass Control Circuit Range/Performance Exhaust Gas Recirculation Cooler Bypass Control Circuit Low
	Exhaust Gas Recirculation Cooler Bypass Control Circuit Low
	Diesel Particulate Filter Pressure Sensor B Circuit
	Diesel Particulate Filter Pressure Sensor B Circuit Range/Performance
	Diesel Particulate Filter Pressure Sensor B Circuit Low
	Diesel Particulate Filter Pressure Sensor B Circuit High
	Diesel Particulate Filter Pressure Sensor B Circuit Intermittent
P2463	Diesel Particulate Filter Restriction - Soot Accumulation
P2464	Diesel Particulate Filter Differential Pressure Too Low Bank 2
P2465	Diesel Particulate Filter Differential Pressure Too High Bank 2
P2466	Exhaust Gas Temperature Sensor Circuit Bank 2 Sensor 3
P2467	Exhaust Gas Temperature Sensor Circuit Range/Performance Bank 2 Sensor 3
P2468	Exhaust Gas Temperature Sensor Circuit Low Bank 2 Sensor 3
	Exhaust Gas Temperature Sensor Circuit High Bank 2 Sensor 3
P246A	3
	Vehicle Conditions Incorrect for Diesel Particulate Filter Regeneration
	Diesel Particulate Filter Restriction - Forced Limited Power
	Diesel Particulate Filter Pressure Sensor "A"/"B" Correlation
P246E	Exhaust Gas Temperature Sensor Circuit Bank 1 Sensor 4
P246F	Exhaust Gas Temperature Sensor Circuit Range/Performance Bank 1 Sensor 4
P2470	Exhaust Gas Temperature Sensor Circuit Low Bank 1 Sensor 4



Codes	Definition
P2471	Exhaust Gas Temperature Sensor Circuit High Bank 1 Sensor 4
P2472	Exhaust Gas Temperature Sensor Circuit Intermittent/Erratic Bank 1 Sensor 4
P2473	Exhaust Gas Temperature Sensor Circuit Bank 2 Sensor 4
P2474	Exhaust Gas Temperature Sensor Circuit Range/Performance Bank 2 Sensor 4
P2475	Exhaust Gas Temperature Sensor Circuit Low Bank 2 Sensor 4
P2476	Exhaust Gas Temperature Sensor Circuit High Bank 2 Sensor 4
P2477	Exhaust Gas Temperature Sensor Circuit Intermittent/Erratic Bank 2 Sensor 4
P2478	Exhaust Gas Temperature Out of Range Bank 1 Sensor 1
P2479	Exhaust Gas Temperature Out of Range Bank 1 Sensor 2
	Exhaust Gas Temperature Out of Range Bank 1 Sensor 3
	Exhaust Gas Temperature Out of Range Bank 1 Sensor 4
	Exhaust Gas Temperature Out of Range Bank 2 Sensor 1
	Exhaust Gas Temperature Out of Range Bank 2 Sensor 2
	Exhaust Gas Temperature Out of Range Bank 2 Sensor 3
	Exhaust Gas Temperature Out of Range Bank 2 Sensor 4
	Exhaust Gas Temperature Sensor Circuit/Open Bank 1 Sensor 5
	Exhaust Gas Temperature Sensor Circuit Low Bank 1 Sensor 5
P2482	Exhaust Gas Temperature Sensor Circuit High Bank 1 Sensor 5
P2483	Exhaust Gas Temperature Sensor Circuit Range/Performance Bank 1 Sensor 5
P2484	Exhaust Gas Temperature Sensor Circuit Intermittent/Erratic Bank 1 Sensor 5
P2485	Exhaust Gas Temperature Sensor Circuit/Open Bank 2 Sensor 5
	Exhaust Gas Temperature Sensor Circuit Low Bank 2 Sensor 5
	Exhaust Gas Temperature Sensor Circuit High Bank 2 Sensor 5
P2488	Exhaust Gas Temperature Sensor Circuit Range/Performance Bank 2 Sensor 5
P2489	Exhaust Gas Temperature Sensor Circuit Intermittent/Erratic Bank 2 Sensor 5
	ISO/SAE Reserved
	ISO/SAE Reserved ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
	ISO/SAE Reserved
1 4490	



Codes P2497 ISO/SAE Reserved P2498 ISO/SAE Reserved P2499 ISO/SAE Reserved P249A ISO/SAE Reserved P249B ISO/SAE Reserved P249C ISO/SAE Reserved P249D ISO/SAE Reserved **P249E** ISO/SAE Reserved P249F ISO/SAE Reserved **P24A0** ISO/SAE Reserved P24A1 ISO/SAE Reserved P24A2 ISO/SAE Reserved P24A3 ISO/SAE Reserved P24A4 ISO/SAE Reserved P24A5 ISO/SAE Reserved P24A6 ISO/SAE Reserved P24A7 ISO/SAE Reserved P24A8 ISO/SAE Reserved P24A9 ISO/SAE Reserved **P24AA** ISO/SAE Reserved P24AB ISO/SAE Reserved P24AC ISO/SAE Reserved P24AD ISO/SAE Reserved **P24AE** ISO/SAE Reserved P24AF ISO/SAE Reserved P24B0 ISO/SAE Reserved P24B1 ISO/SAE Reserved P24B2 ISO/SAE Reserved P24B3 ISO/SAE Reserved P24B4 ISO/SAE Reserved P24B5 ISO/SAE Reserved P24B6 ISO/SAE Reserved P24B7 ISO/SAE Reserved P24B8 ISO/SAE Reserved P24B9 ISO/SAE Reserved P24BA ISO/SAE Reserved P24BB ISO/SAE Reserved P24BC ISO/SAE Reserved P24BD ISO/SAE Reserved P24BE ISO/SAE Reserved P24BF ISO/SAE Reserved P24C0 ISO/SAE Reserved P24C1 ISO/SAE Reserved P24C2 ISO/SAE Reserved



Codes P24C3 ISO/SAE Reserved **P24C4** ISO/SAE Reserved P24C5 ISO/SAE Reserved P24C6 ISO/SAE Reserved P24C7 ISO/SAE Reserved P24C8 ISO/SAE Reserved P24C9 ISO/SAE Reserved **P24CA** ISO/SAE Reserved P24CB ISO/SAE Reserved **P24CC** ISO/SAE Reserved P24CD ISO/SAE Reserved P24CE ISO/SAE Reserved P24CF ISO/SAE Reserved P24D0 ISO/SAE Reserved P24D1 ISO/SAE Reserved P24D2 ISO/SAE Reserved P24D3 ISO/SAE Reserved **P24D4** ISO/SAE Reserved P24D5 ISO/SAE Reserved P24D6 ISO/SAE Reserved P24D7 ISO/SAE Reserved P24D8 ISO/SAE Reserved P24D9 ISO/SAE Reserved P24DA ISO/SAE Reserved P24DB ISO/SAE Reserved P24DC ISO/SAE Reserved P24DD ISO/SAE Reserved **P24DE** ISO/SAE Reserved **P24DF** ISO/SAE Reserved **P24E0** ISO/SAE Reserved P24E1 ISO/SAE Reserved P24E2 ISO/SAE Reserved P24E3 ISO/SAE Reserved P24E4 ISO/SAE Reserved P24E5 ISO/SAE Reserved P24E6 ISO/SAE Reserved P24E7 ISO/SAE Reserved P24E8 ISO/SAE Reserved P24E9 ISO/SAE Reserved P24EA ISO/SAE Reserved P24EB ISO/SAE Reserved P24EC ISO/SAE Reserved **P24ED** ISO/SAE Reserved P24EE ISO/SAE Reserved



Codes	Definition
P24EF	ISO/SAE Reserved
P24F0	ISO/SAE Reserved
P24F1	ISO/SAE Reserved
P24F2	ISO/SAE Reserved
P24F3	ISO/SAE Reserved
P24F4	ISO/SAE Reserved
P24F5	ISO/SAE Reserved
	Generator Lamp/L Terminal Circuit Low
	Generator Lamp/L Terminal Circuit High
	Charging System Voltage
	Charging System Voltage Low
	Charging System Voltage High ECM/PCM Power Input Signal
	ECM/PCM Power Input Signal Range/Performance
	ECM/PCM Power Input Signal Low
	ECM/PCM Power Input Signal High
	ECM/PCM Power Input Signal Intermittent
	Engine Oil Level Sensor Circuit
	Engine Oil Level Sensor Circuit Range/Performance
	Engine Oil Level Sensor Circuit Low
	Engine Oil Level Sensor Circuit High
P250E	Engine Oil Level Sensor Circuit Intermittent/Erratic
P250F	Engine Oil Level Too Low
P2510	ECM/PCM Power Relay Sense Circuit Range/Performance
P2511	ECM/PCM Power Relay Sense Circuit Intermittent
P2512	Event Data Recorder Request Circuit/ Open
P2513	Event Data Recorder Request Circuit Low
P2514	Event Data Recorder Request Circuit High
P2515	A/C Refrigerant Pressure Sensor B Circuit Malfunction
P2516	A/C Refrigerant Pressure Sensor B Circuit Range/Performance
	A/C Refrigerant Pressure Sensor B Circuit Low
	A/C Refrigerant Pressure Sensor B Circuit High
	A/C Request "A" Circuit
P251A	PTO Enable Switch Circuit/Open



Codes Definition **P251B** PTO Enable Switch Circuit Low **P251C** PTO Enable Switch Circuit High P251D PTO Engine Shutdown Circuit/Open **P251E** PTO Engine Shutdown Circuit Low **P251F** PTO Engine Shutdown Circuit High P2520 A/C Request "A" Circuit Low P2521 A/C Request "A" Circuit High P2522 A/C Request "B" Circuit P2523 A/C Request "B" Circuit Low P2524 A/C Request "B" Circuit High P2525 Vacuum Reservoir Pressure Sensor Circuit P2526 Vacuum Reservoir Pressure Sensor Circuit Range/Performance P2527 Vacuum Reservoir Pressure Sensor Circuit Low P2528 Vacuum Reservoir Pressure Sensor Circuit High P2529 Vacuum Reservoir Pressure Sensor Circuit Intermittent P252A Engine Oil Quality Sensor Circuit P252B Engine Oil Quality Sensor Circuit Range/Performance P252C Engine Oil Quality Sensor Circuit Low P252D Engine Oil Quality Sensor Circuit High P252E Engine Oil Quality Circuit Intermittent/Erratic **P252F** Engine Oil Level Too High P2530 Ignition Switch Run Position Circuit P2531 Ignition Switch Run Position Circuit Low **P2532** Ignition Switch Run Position Circuit High P2533 Ignition Switch Run/Start Position Circuit **P2534** Ignition Switch Run/Start Position Circuit Low P2535 Ignition Switch Run/Start Position Circuit High P2536 Ignition Switch Accessory Position Circuit **P2537** Ignition Switch Accessory Position Circuit Low **P2538** Ignition Switch Accessory Position Circuit High P2539 Low Pressure Fuel System Sensor Circuit P253A PTO Sense Circuit /Open P253B PTO Sense Circuit Range/Performance P253C PTO Sense Circuit Low P253D PTO Sense Circuit High P253E PTO Sense Circuit Intermittent/Erratic **P253F** Engine Oil Deteriorated P2540 Low Pressure Fuel System Sensor Circuit Range/Performance P2541 Low Pressure Fuel System Sensor Circuit Low **P2542** Low Pressure Fuel System Sensor Circuit High P2543 Low Pressure Fuel System Sensor Circuit Intermittent P2544 Torque Management Request Input Signal "A" P2545 Torque Management Request Input Signal "A" Range/Performance P2546 Torque Management Request Input Signal "A" Low



Codes	Definition		
P2547	Torque Management Request Input Signal "A" High		
P2548	Torque Management Request Input Signal "B"		
P2549	P2549 Torque Management Request Input Signal "B" Range/Performance		
P254A	P254A PTO Speed Selector Sensor/Switch 1 Circuit /Open		
P254B PTO Speed Selector Sensor/Switch 1 Range/Performance			
P254C	PTO Speed Selector Sensor/Switch 1 Low		
P254D	PTO Speed Selector Sensor/Switch 1 High		
P254E	PTO Speed Selector Sensor/Switch 1 Intermittent/Erratic		
P254F	Engine Hood Switch Circuit		
P2550	Torque Management Request Input Signal "B" Low		
	Torque Management Request Input Signal "B" High		
	Throttle/Fuel Inhibit Circuit		
	Throttle/Fuel Inhibit Circuit Range/Performance		
	Throttle/Fuel Inhibit Circuit Low		
	Throttle/Fuel Inhibit Circuit High		
	Engine Coolant Level Sensor/Switch Circuit		
	Engine Coolant Level Sensor/Switch Circuit Range/Performance		
	Engine Coolant Level Sensor/Switch Circuit Low		
	Engine Coolant Level Sensor/Switch Circuit High		
	PTO Speed Selector Sensor/Switch 2 Circuit /Open		
	PTO Speed Selector Sensor/Switch 2 Range/Performance		
	PTO Speed Selector Sensor/Switch 2 Low		
	PTO Speed Selector Sensor/Switch 2 High		
	PTO Speed Selector Sensor/Switch 2 Intermittent/Erratic		
	Engine Coolant Level Low A/C Control Module Requested MIL Illumination		
	Turbo Boost Control Position Sensor Circuit		
	Turbo Boost Control Position Sensor Circuit Range/Performance		
	Turbo Boost Control Position Sensor Circuit Low		
	Turbo Boost Control Position Sensor Circuit High		
	Turbo Boost Control Position Sensor Circuit Intermittent		
	Direct Ozone Reduction Catalyst Temperature Sensor Circuit		
	Direct Ozone Reduction Catalyst Temperature Sensor Circuit		
P2568	Range/Performance		
P2569	Direct Ozone Reduction Catalyst Temperature Sensor Circuit Low		
P256A	Engine Idle Speed Selector Sensor/Switch Circuit/Open		
P256B	Engine Idle Speed Selector Sensor/Switch Range/Performance		
P256C	Engine Idle Speed Selector Sensor/Switch Circuit Low		
	Engine Idle Speed Selector Sensor/Switch Circuit High		
	Engine Idle Speed Selector Sensor/Switch Circuit Intermittent/Erratic		
	A/C Request "B" Circuit Range/Performance		
P2570	Direct Ozone Reduction Catalyst Temperature Sensor Circuit High		
P2571	Direct Ozone Reduction Catalyst Temperature Sensor Circuit		
	Intermittent/Erratic		

<u>DBDCodeX</u>

Codes	Definition		
P2572	Direct Ozone Reduction Catalyst Deterioration Sensor Circuit		
P2573	<b>3</b> Direct Ozone Reduction Catalyst Deterioration Sensor Circuit Range/Performance		
P2574	Direct Ozone Reduction Catalyst Deterioration Sensor Circuit Low		
	Direct Ozone Reduction Catalyst Deterioration Sensor Circuit High		
P2576 Direct Ozone Reduction Catalyst Deterioration Sensor Circuit Intermittent/Erratic			
P2577 Direct Ozone Reduction Catalyst Efficiency Below Threshold			
P2578 Turbocharger Speed Sensor Circuit			
P2579	Turbocharger Speed Sensor Circuit Range/Performance		
	Vacuum Reservoir Control Circuit/Open		
	Vacuum Reservoir Control Circuit Low		
	Vacuum Reservoir Control Circuit High		
	Engine Hood Switch Circuit Range/Performance		
	Engine Hood Switch Circuit Low		
	Engine Hood Switch Circuit High		
	Turbocharger Speed Sensor Circuit Low		
	Turbocharger Speed Sensor Circuit High		
	Turbocharger Speed Sensor Circuit Intermittent		
	Cruise Control Front Distance Range Sensor		
	Fuel Additive Control Module Requested MIL Illumination		
	Fuel Additive Control Module Warning Lamp Request		
	Turbo Boost Control Position Sensor "B" Circuit		
	Turbo Boost Control Position Sensor Circuit "B" Range/Performance		
	Turbo Boost Control Position Sensor "B" Circuit Low		
	Turbo Boost Control Position Sensor "B" Circuit High		
	Vacuum Pump Control Circuit/Open		
	Vacuum Pump Control Range/Performance Vacuum Pump Control Circuit Low		
	Vacuum Pump Control Circuit High		
	PTO Enable Switch Performance		
	Torque Management Request Output Signal		
	Turbo Boost Control Position Sensor "B" Circuit Intermittent		
	Cruise Control Front Distance Range Sensor		
	Cruise Control Front Distance Range Sensor		
	ISO/SAE Reserved		
P2598	ISO/SAE Reserved		
P2599	ISO/SAE Reserved		
P259A	ISO/SAE Reserved		
P259B	ISO/SAE Reserved		



Codes P259C ISO/SAE Reserved **P259D** ISO/SAE Reserved P259E ISO/SAE Reserved P259F ISO/SAE Reserved P25A0 ISO/SAE Reserved P25A1 ISO/SAE Reserved P25A2 ISO/SAE Reserved **P25A3** ISO/SAE Reserved P25A4 ISO/SAE Reserved P25A5 ISO/SAE Reserved P25A6 ISO/SAE Reserved P25A7 ISO/SAE Reserved P25A8 ISO/SAE Reserved P25A9 ISO/SAE Reserved P25AA ISO/SAE Reserved P25AB ISO/SAE Reserved P25AC ISO/SAE Reserved **P25AD** ISO/SAE Reserved **P25AE** ISO/SAE Reserved **P25AF** ISO/SAE Reserved P25B0 ISO/SAE Reserved P25B1 ISO/SAE Reserved P25B2 ISO/SAE Reserved P25B3 ISO/SAE Reserved P25B4 ISO/SAE Reserved P25B5 ISO/SAE Reserved P25B6 ISO/SAE Reserved P25B7 ISO/SAE Reserved P25B8 ISO/SAE Reserved P25B9 ISO/SAE Reserved P25BA ISO/SAE Reserved **P25BB** ISO/SAE Reserved P25BC ISO/SAE Reserved P25BD ISO/SAE Reserved **P25BE** ISO/SAE Reserved P25BF ISO/SAE Reserved P25C0 ISO/SAE Reserved P25C1 ISO/SAE Reserved P25C2 ISO/SAE Reserved P25C3 ISO/SAE Reserved P25C4 ISO/SAE Reserved P25C5 ISO/SAE Reserved P25C6 ISO/SAE Reserved P25C7 ISO/SAE Reserved

Codes	
P25C8	ISO/SAE Reserved
P25C9	ISO/SAE Reserved
P25CA	ISO/SAE Reserved
P25CB	ISO/SAE Reserved
P25CC	ISO/SAE Reserved
P25CD	ISO/SAE Reserved
P25CD P25CE	
P25CF	ISO/SAE Reserved
P25D0	ISO/SAE Reserved
P25D1	ISO/SAE Reserved
P25D2	ISO/SAE Reserved
P25D3	ISO/SAE Reserved
P25D4	ISO/SAE Reserved
P25D5	ISO/SAE Reserved
P25D6	ISO/SAE Reserved
P25D7	ISO/SAE Reserved
P25D8	ISO/SAE Reserved
P25D9	ISO/SAE Reserved
P25DA	ISO/SAE Reserved
P25DB	ISO/SAE Reserved
P25DC	ISO/SAE Reserved
P25DD	ISO/SAE Reserved
P25DE	ISO/SAE Reserved
P25DF	ISO/SAE Reserved
P25E0	ISO/SAE Reserved
P25E1	ISO/SAE Reserved
P25E2	ISO/SAE Reserved
P25E3	ISO/SAE Reserved
P25E4	ISO/SAE Reserved
P25E5	ISO/SAE Reserved
P25E6	ISO/SAE Reserved
P25E7	ISO/SAE Reserved
P25E8	ISO/SAE Reserved
P25E9	ISO/SAE Reserved
P25EA	ISO/SAE Reserved
P25EB	ISO/SAE Reserved
P25EC	ISO/SAE Reserved
P25ED	ISO/SAE Reserved
<b>P25EE</b>	ISO/SAE Reserved
P25EF	ISO/SAE Reserved
P25F0	ISO/SAE Reserved
P25F1	ISO/SAE Reserved
P25F2	ISO/SAE Reserved
P25F3	ISO/SAE Reserved
	0, 0. <u></u> 100001100

# Definition

DBDCodeX

Codes Definition P25F4 ISO/SAE Reserved **P25F5** ISO/SAE Reserved P25F6 ISO/SAE Reserved P25F7 ISO/SAE Reserved P25F8 ISO/SAE Reserved **P25F9** ISO/SAE Reserved P25FA ISO/SAE Reserved **P25FB** ISO/SAE Reserved **P25FC** ISO/SAE Reserved **P25FD** ISO/SAE Reserved **P25FE** ISO/SAE Reserved **P25FF** ISO/SAE Reserved P2600 Coolant Pump "A" Control Circuit Open P2601 Coolant Pump "A" Control Circuit Range Performance P2602 Coolant Pump "A" Control Circuit Low P2603 Coolant Pump "A" Control Circuit High P2604 Intake Air Heater "A" Circuit Range/Performance P2605 Intake Air Heater "B" Circuit Open P2606 Intake Air Heater "B" Circuit Range/Performance P2607 Intake Air Heater "B" Circuit Low P2608 Intake Air Heater "B" Circuit High P2609 Intake Air Heater System Performance **P260A** PTO Control Circuit /Open P260B PTO Control Circuit Low **P260C** PTO Control Circuit High **P260D** PTO Engaged Lamp Control Circuit P260E Diesel Particulate Filter Regeneration Lamp Control Circuit **P260F** Evaporative System Monitoring Processor Performance **P2610** ECM/PCM Internal Engine Off Timer Performance P2611 A/C Refrigerant Distribution Valve Control Circuit/Open **P2612** A/C Refrigerant Distribution Valve Control Circuit Low P2613 A/C Refrigerant Distribution Valve Control Circuit High P2614 Camshaft Position Signal Output Circuit/Open P2615 Camshaft Position Signal Output Circuit Low P2616 Camshaft Position Signal Output Circuit High P2617 Crankshaft Position Signal Output Circuit/Open P2618 Crankshaft Position Signal Output Circuit Low P2619 Crankshaft Position Signal Output Circuit High P261A Coolant Pump B Control Circuit Open P261B Coolant Pump "B" Control Circuit Range/Performance P261C Coolant Pump "B" Control Circuit Low P261D Coolant Pump "B" Control Circuit High **P261E** ISO/SAE Reserved P261F ISO/SAE Reserved



(	Codes	Definition			
Р	2620	Throttle Position Output Circuit/Open			
Р	2621	Throttle Position Output Circuit Low			
Р	2622	Throttle Position Output Circuit High			
Р	2623	Injector Control Pressure Regulator Circuit/Open			
Р	2624	Injector Control Pressure Regulator Circuit Low			
Р	2625	Injector Control Pressure Regulator Circuit High			
Р	2626	O2 Sensor Pumping Current Trim Circuit/Open Bank 1 Sensor 1			
Р	2627	O2 Sensor Pumping Current Trim Circuit Low Bank 1 Sensor 1			
Р	2628	O2 Sensor Pumping Current Trim Circuit High Bank 1 Sensor 1			
Р	2629	O2 Sensor Pumping Current Trim Circuit/Open Bank 2 Sensor 1			
Р	262A	ISO/SAE Reserved			
Р	262B	ISO/SAE Reserved			
Р	262C	ISO/SAE Reserved			
		ISO/SAE Reserved			
		ISO/SAE Reserved			
		ISO/SAE Reserved			
		O2 Sensor Pumping Current Trim Circuit Low Bank 2 Sensor 1			
		O2 Sensor Pumping Current Trim Circuit High Bank 2 Sensor 1			
		Fuel Pump B Control Circuit /Open			
		Fuel Pump B Control Circuit Low			
		Fuel Pump B Control Circuit High			
		Fuel Pump "A" Low Flow/Performance			
		Fuel Pump "B" Low Flow/Performance			
		Torque Management Feedback Signal "A"			
		Torque Management Feedback Signal "A" Range/Performance			
		Torque Management Feedback Signal "A" Low			
		ISO/SAE Reserved			
_		ISO/SAE Reserved			
		ISO/SAE Reserved ISO/SAE Reserved			
		ISO/SAE Reserved			
		ISO/SAE Reserved			
		Torque Management Feedback Signal "A" High			
		Torque Management Feedback Signal "B"			
		Torque Management Feedback Signal "B" Range/Performance			
		Torque Management Feedback Signal "B" Low			
		Torque Management Feedback Signal "B" High			
		"A" Rocker Arm Actuator Control Circuit/Open Bank 1			
		"A" Rocker Arm Actuator System Performance/Stuck Off Bank 1			
Р	2647	"A" Rocker Arm Actuator System Stuck On Bank 1			
Р	2648	"A" Rocker Arm Actuator Control Circuit Low Bank 1			
Р	2649	"A" Rocker Arm Actuator Control Circuit High Bank 1			
Р	264A	"A" Rocker Arm Actuator Position Sensor Circuit Bank 1			
Р	264B	"A" Rocker Arm Actuator Position Sensor Circuit Range/Performance Bank 1			



Codes Definition P264C "A" Rocker Arm Actuator Position Sensor Circuit Low Bank 1 P264D "A" Rocker Arm Actuator Position Sensor Circuit High Bank 1 P264E "A" Rocker Arm Actuator Position Sensor Circuit Intermittent/Erratic Bank 1 P264F ISO/SAE Reserved P2650 "B" Rocker Arm Actuator Control Circuit/Open Bank 1 P2651 "B" Rocker Arm Actuator System Performance/Stuck Off Bank 1 P2652 "B" Rocker Arm Actuator System Stuck On Bank 1 P2653 "B" Rocker Arm Actuator Control Circuit Low Bank 1 P2654 "B" Rocker Arm Actuator Control Circuit High Bank 1 P2655 "A" Rocker Arm Actuator Control Circuit/Open Bank 2 P2656 "A" Rocker Arm Actuator System Performance/Stuck Off Bank 2 P2657 "A" Rocker Arm Actuator System Stuck On Bank 2 P2658 "A" Rocker Arm Actuator Control Circuit Low Bank 2 P2659 "A" Rocker Arm Actuator Control Circuit High P265A "B" Rocker Arm Actuator Position Sensor Circuit Bank 1 P265B "B" Rocker Arm Actuator Position Sensor Circuit Range/Performance Bank 1 P265C "B" Rocker Arm Actuator Position Sensor Circuit Low Bank 1 P265D "B" Rocker Arm Actuator Position Sensor Circuit High Bank 1 P265E "B" Rocker Arm Actuator Position Sensor Circuit Intermittent/Erratic Bank 1 P265F ISO/SAE Reserved P2660 "B" Rocker Arm Actuator Control Circuit/Open Bank 2 P2661 "B" Rocker Arm Actuator System Performance/Stuck Off Bank 2 P2662 "B" Rocker Arm Actuator System Stuck On Bank 2 P2663 "B" Rocker Arm Actuator Control Circuit Low Bank 2 P2664 "B" Rocker Arm Actuator Control Circuit High Bank 2 P2665 Fuel Shutoff Valve "B" Control Circuit/Open P2666 Fuel Shutoff Valve "B" Control Circuit Low P2667 Fuel Shutoff Valve "B" Control Circuit High P2668 Fuel Mode Indicator Lamp Control Circuit P2669 Actuator Supply Voltage B Circuit/Open P266A 'A' Rocker Arm Actuator Position Sensor Circuit Bank 2 P266B 'A' Rocker Arm Actuator Position Sensor Circuit Range/Performance Bank 2 P266C 'A' Rocker Arm Actuator Position Sensor Circuit Low Bank 2 P266D 'A' Rocker Arm Actuator Position Sensor Circuit High Bank 2 P266E 'A' Rocker Arm Actuator Position Sensor Circuit Intermittent/Erratic Bank 2 P266F ISO/SAE Reserved P2670 Actuator Supply Voltage B Circuit Low **P2671** Actuator Supply Voltage B Circuit High P2672 Injection Pump Timing Offset P2673 Injection Pump Timing Calibration Not Learned P2674 Injection Pump Fuel Calibration Not Learned P2675 Air Cleaner Inlet Control Circuit/Open P2676 Air Cleaner Inlet Control Circuit Low P2677 Air Cleaner Inlet Control Circuit High



Codes Definition P2678 Coolant Degassing Valve Control Circuit/Open **P2679** Coolant Degassing Valve Control Circuit Low P267A "B" Rocker Arm Actuator Position Sensor Circuit Bank 2 h P267B "B" Rocker Arm Actuator Position Sensor Circuit Range/Performance Bank 2 P267C "B" Rocker Arm Actuator Position Sensor Circuit Low Bank 2 P267D "B" Rocker Arm Actuator Position Sensor Circuit High Bank 2 P267E "B" Rocker Arm Actuator Position Sensor Circuit Intermittent/Erratic Bank 2 P267F ISO/SAE Reserved P2680 Coolant Degassing Valve Control Circuit High P2681 Engine Coolant Bypass Valve Control Circuit/Open P2682 Engine Coolant Bypass Valve Control Circuit Low P2683 Engine Coolant Bypass Valve Control Circuit High P2684 Actuator Supply Voltage C Circuit/Open P2685 Actuator Supply Voltage C Circuit Low P2686 Actuator Supply Voltage C Circuit High P2687 Fuel Supply Heater Control Circuit/Open P2688 Fuel Supply Heater Control Circuit Low P2689 Fuel Supply Heater Control Circuit High P268A Fuel Injector Calibration Not Learned/Programmed **P268B** High Pressure Fuel Pump Calibration Not Learned/Programmed P268C Cylinder 1 Injector Data Incompatible P268D Cylinder 2 Injector Data Incompatible P268E Cylinder 3 Injector Data Incompatible **P268F** Cylinder 4 Injector Data Incompatible **P2690** Cylinder 5 Injector Data Incompatible P2691 Cylinder 6 Injector Data Incompatible P2692 Cylinder 7 Injector Data Incompatible **P2693** Cylinder 8 Injector Data Incompatible P2694 Cylinder 9 Injector Data Incompatible P2695 Cylinder 10 Injector Data Incompatible **P2696** Injector Data Incompatible P2697 Exhaust Aftertreatment Fuel Injector "A" Circuit/Open P2698 Exhaust Aftertreatment Fuel Injector "A" Performance P2699 Exhaust Aftertreatment Fuel Injector "A" Circuit Low P269A Exhaust Aftertreatment Fuel Injector "A" Circuit High P269B Exhaust Aftertreatment Glow Plug Control Circuit/Open **P269C** Exhaust Aftertreatment Glow Plug Control Performance **P269D** Exhaust Aftertreatment Glow Plug Control Circuit Low P269E Exhaust Aftertreatment Glow Plug Control Circuit High P269F Exhaust Aftertreatment Glow Plug Circuit/Open P26A0 Exhaust Aftertreatment Glow Plug Performance **P26A1** Exhaust Aftertreatment Glow Plug Circuit Low P26A2 Exhaust Aftertreatment Glow Plug Circuit High P26A3 ISO/SAE Reserved



Codes P26A4 ISO/SAE Reserved P26A5 ISO/SAE Reserved P26A6 ISO/SAE Reserved P26A7 ISO/SAE Reserved P26A8 ISO/SAE Reserved P26A9 ISO/SAE Reserved P26AA ISO/SAE Reserved **P26AB** ISO/SAE Reserved P26AC ISO/SAE Reserved **P26AD** ISO/SAE Reserved P26AE ISO/SAE Reserved P26AF ISO/SAE Reserved P26B0 ISO/SAE Reserved P26B1 ISO/SAE Reserved P26B2 ISO/SAE Reserved P26B3 ISO/SAE Reserved P26B4 ISO/SAE Reserved P26B5 ISO/SAE Reserved P26B6 ISO/SAE Reserved P26B7 ISO/SAE Reserved P26B8 ISO/SAE Reserved P26B9 ISO/SAE Reserved P26BA ISO/SAE Reserved P26BB ISO/SAE Reserved P26BC ISO/SAE Reserved P26BD ISO/SAE Reserved P26BE ISO/SAE Reserved **P26BF** ISO/SAE Reserved P26C0 ISO/SAE Reserved P26C1 ISO/SAE Reserved P26C2 ISO/SAE Reserved P26C3 ISO/SAE Reserved P26C4 ISO/SAE Reserved P26C5 ISO/SAE Reserved P26C6 ISO/SAE Reserved P26C7 ISO/SAE Reserved P26C8 ISO/SAE Reserved P26C9 ISO/SAE Reserved P26CA ISO/SAE Reserved P26CB ISO/SAE Reserved P26CC ISO/SAE Reserved P26CD ISO/SAE Reserved **P26CE** ISO/SAE Reserved P26CF ISO/SAE Reserved



Codes P26D0 ISO/SAE Reserved P26D1 ISO/SAE Reserved P26D2 ISO/SAE Reserved P26D3 ISO/SAE Reserved P26D4 ISO/SAE Reserved P26D5 ISO/SAE Reserved P26D6 ISO/SAE Reserved P26D7 ISO/SAE Reserved P26D8 ISO/SAE Reserved **P26D9** ISO/SAE Reserved P26DA ISO/SAE Reserved P26DB ISO/SAE Reserved P26DC ISO/SAE Reserved P26DD ISO/SAE Reserved **P26DE** ISO/SAE Reserved P26DF ISO/SAE Reserved P26E0 ISO/SAE Reserved P26E1 ISO/SAE Reserved P26E2 ISO/SAE Reserved P26E3 ISO/SAE Reserved P26E4 ISO/SAE Reserved P26E5 ISO/SAE Reserved P26E6 ISO/SAE Reserved P26E7 ISO/SAE Reserved P26E8 ISO/SAE Reserved P26E9 ISO/SAE Reserved P26EA ISO/SAE Reserved P26EB ISO/SAE Reserved **P26EC** ISO/SAE Reserved **P26ED** ISO/SAE Reserved P26EE ISO/SAE Reserved **P26EF** ISO/SAE Reserved P26F0 ISO/SAE Reserved P26F1 ISO/SAE Reserved P26F2 ISO/SAE Reserved P26F3 ISO/SAE Reserved P26F4 ISO/SAE Reserved P26F5 ISO/SAE Reserved P26F6 ISO/SAE Reserved P26F7 ISO/SAE Reserved P26F8 ISO/SAE Reserved P26F9 ISO/SAE Reserved **P26FA** ISO/SAE Reserved P26FB ISO/SAE Reserved

#### Definition

**P26FC** ISO/SAE Reserved

Codes

- **P26FD** ISO/SAE Reserved
- **P26FE** ISO/SAE Reserved
- **P26FF** ISO/SAE Reserved
- **P2700** Transmission Friction Element A Apply Time Range/Performance
- **P2701** Transmission Friction Element B Apply Time Range/Performance
- **P2702** Transmission Friction Element C Apply Time Range/Performance
- **P2703** Transmission Friction Element D Apply Time Range/Performance
- **P2704** Transmission Friction Element E Apply Time Range/Performance
- **P2705** Transmission Friction Element F Apply Time Range/Performance
- P2706 Shift Solenoid F Malfunction
- **P2707** Shift Solenoid F Performance / Stuck Off
- P2708 Shift Solenoid F Stuck On
- **P2709** Shift Solenoid F Electrical
- P270A ISO/SAE Reserved
- P270B ISO/SAE Reserved
- P270C ISO/SAE Reserved
- P270D ISO/SAE Reserved
- P270E ISO/SAE Reserved
- **P270F** ISO/SAE Reserved
- **P2710** Shift Solenoid F Intermittent
- **P2711** Unexpected Mechanical Gear Disengagement
- **P2712** Hydraulic Power Unit Leakage
- **P2713** Pressure Control Solenoid D Malfunction
- **P2714** Pressure Control Solenoid D Performance Or Stuck Off
- P2715 Pressure Control Solenoid D Stuck On
- P2716 Pressure Control Solenoid D Electrical
- P2717 Pressure Control Solenoid D Intermittent
- P2718 Pressure Control Solenoid D Control Circuit/Open
- P2719 Pressure Control Solenoid D Control Circuit Range/Performance
- P271A ISO/SAE Reserved
- P271B ISO/SAE Reserved
- P271C ISO/SAE Reserved
- P271D ISO/SAE Reserved
- P271E ISO/SAE Reserved
- **P271F** ISO/SAE Reserved
- P2720 Pressure Control Solenoid D Control Circuit Low
- **P2721** Pressure Control Solenoid D Control Circuit High
- **P2722** Pressure Control Solenoid E Malfunction
- **P2723** Pressure Control Solenoid E Performance Or Stuck Off
- **P2724** Pressure Control Solenoid E Stuck On
- **P2725** Pressure Control Solenoid E Electrical
- P2726 Pressure Control Solenoid E Intermittent
- P2727 Pressure Control Solenoid E Control Circuit/Open



## Codes

- P2728 Pressure Control Solenoid E Control Circuit Range/Performance
- **P2729** Pressure Control Solenoid E Control Circuit Low
- P272A ISO/SAE Reserved
- P272B ISO/SAE Reserved
- P272C ISO/SAE Reserved
- **P272D** ISO/SAE Reserved
- P272E ISO/SAE Reserved
- **P272F** ISO/SAE Reserved
- **P2730** Pressure Control Solenoid E Control Circuit High
- **P2731** Pressure Control Solenoid F Malfunction
- P2732 Pressure Control Solenoid F Performance Or Stuck Off
- **P2733** Pressure Control Solenoid F Stuck On
- P2734 Pressure Control Solenoid F Electrical
- P2735 Pressure Control Solenoid F Intermittent
- P2736 Pressure Control Solenoid F Control Circuit/Open
- P2737 Pressure Control Solenoid F Control Circuit Range/Performance
- P2738 Pressure Control Solenoid F Control Circuit Low
- P2739 Pressure Control Solenoid F Control Circuit High
- P273A Transmission Friction Element 'G' Apply Time Range/Performance
- P273B Transmission Friction Element 'H' Apply Time Range/Performance
- P273C ISO/SAE Reserved
- P273D ISO/SAE Reserved
- P273E ISO/SAE Reserved
- P273F ISO/SAE Reserved
- P2740 Transmission Fluid Temperature Sensor B Circuit Malfunction
- **P2741** Transmission Fluid Temperature Sensor B Circuit Range/Performance
- P2742 Transmission Fluid Temperature Sensor B Circuit Low Input
- P2743 Transmission Fluid Temperature Sensor B Circuit High Input
- P2744 Transmission Fluid Temperature Sensor B Circuit Intermittent
- P2745 Intermediate Shaft Speed Sensor B Circuit
- P2746 Intermediate Shaft Speed Sensor B Circuit Range/Performance
- P2747 Intermediate Shaft Speed Sensor B Circuit No Signal
- P2748 Intermediate Shaft Speed Sensor B Circuit Intermittent
- P2749 Intermediate Shaft Speed Sensor C Circuit
- P274A ISO/SAE Reserved
- P274B ISO/SAE Reserved
- P274C ISO/SAE Reserved
- P274D ISO/SAE Reserved
- P274E ISO/SAE Reserved
- P274F ISO/SAE Reserved
- **P2750** Intermediate Shaft Speed Sensor C Circuit Range/Performance
- P2751 Intermediate Shaft Speed Sensor C Circuit No Signal
- P2752 Intermediate Shaft Speed Sensor C Circuit Intermittent
- P2753 Transmission Fluid Cooler Control Circuit/Open




Codes	Definition		
P2754	Transmission Fluid Cooler Control Circuit Low		
P2755	Transmission Fluid Cooler Control Circuit High		
P2756	Torque Converter Clutch Pressure Control Solenoid		
P2757	Torque Converter Clutch Pressure Control Solenoid Control Circuit Performance/Stuck Off		
P2758	Torque Converter Clutch Pressure Control Solenoid Control Circuit Stuck On		
P2759	Torque Converter Clutch Pressure Control Solenoid Control Circuit Electrical		
P275A	ISO/SAE Reserved		
P275B	ISO/SAE Reserved		
P275C	ISO/SAE Reserved		
P275D	ISO/SAE Reserved		
P275E	ISO/SAE Reserved		

- P275F ISO/SAE Reserved
- Torque Converter Clutch Pressure Control Solenoid Control Circuit P2760 Intermittent
- P2761 Torque Converter Clutch Pressure Control Solenoid Control Circuit/Open Torque Converter Clutch Pressure Control Solenoid Control Circuit
- P2762 Range/Performance
- P2763 Torque Converter Clutch Pressure Control Solenoid Control Circuit High
- P2764 Torque Converter Clutch Pressure Control Solenoid Control Circuit Low
- P2765 Input/Turbine Speed Sensor "A" Circuit
- P2766 Input/Turbine Speed Sensor "B" Circuit Range/Performance
- P2767 Input/Turbine Speed Sensor "B" Circuit No Signal
- P2768 Input/Turbine Speed Sensor "B" Circuit Intermittent
- P2769 Torque Converter Clutch Circuit Low
- P276A ISO/SAE Reserved
- **P276B** ISO/SAE Reserved
- P276C ISO/SAE Reserved
- P276D ISO/SAE Reserved
- **P276E** ISO/SAE Reserved
- P276F ISO/SAE Reserved
- **P2770** Torque Converter Clutch Circuit High
- **P2771** Four Wheel Drive (4WD) Low Switch Circuit
- **P2772** Four Wheel Drive (4WD) Low Switch Circuit Range/Performance
- P2773 Four Wheel Drive (4WD) Low Switch Circuit Low
- **P2774** Four Wheel Drive (4WD) Low Switch Circuit High
- **P2775** Upshift Switch Circuit Range/Performance
- P2776 Upshift Switch Circuit Low
- P2777 Upshift Switch Circuit High
- P2778 Upshift Switch Circuit Intermittent/Erratic
- P2779 Downshift Switch Circuit Range/Performance
- P277A ISO/SAE Reserved
- P277B ISO/SAE Reserved
- **P277C** ISO/SAE Reserved



Definition Codes P277D ISO/SAE Reserved **P277E** ISO/SAE Reserved P277F ISO/SAE Reserved P2780 Downshift Switch Circuit Low P2781 Downshift Switch Circuit High P2782 Downshift Switch Circuit Intermittent/Erratic **P2783** Torque Converter Temperature Too High P2784 Input/Turbine Speed Sensor "A"/"B" Correlation P2785 Clutch Actuator Temperature Too High **P2786** Gear Shift Actuator Temperature Too High P2787 Clutch Temperature Too High P2788 Auto Shift Manual Adaptive Learning at Limit P2789 Clutch "A" Adaptive Learning at Limit P278A Kick Down Switch Circuit **P278B** Kick Down Switch Circuit Range/Performance **P278C** Kick Down Switch Circuit Low P278D Kick Down Switch Circuit High **P278E** Kick Down Switch Circuit Intermittent/Erratic P278F Clutch "B" Adaptive Learning at Limit **P2790** Gate Select Direction Circuit P2791 Gate Select Direction Circuit Low P2792 Gate Select Direction Circuit High P2793 Gear Shift Direction Circuit P2794 Gear Shift Direction Circuit Low **P2795** Gear Shift Direction Circuit High P2796 Auxiliary Transmission Fluid Pump Control Circuit/Open P2797 Auxiliary Transmission Fluid Pump Performance P2798 Auxiliary Transmission Fluid Pump Control Circuit Low P2799 Auxiliary Transmission Fluid Pump Control Circuit High P279A Transfer Case Gear High Incorrect Ratio P279B Transfer Case Gear Low Incorrect Ratio **P279C** Transfer Case Gear Neutral Incorrect Ratio **P279D** Four Wheel Drive (4WD) Range Signal Circuit **P279E** Four Wheel Drive (4WD) Range Signal Circuit Range/Performance **P279F** Four Wheel Drive (4WD) Range Signal Circuit Low **P27A0** Four Wheel Drive (4WD) Range Signal Circuit High P27A1 ISO/SAE Reserved P27A2 ISO/SAE Reserved P27A3 ISO/SAE Reserved P27A4 ISO/SAE Reserved P27A5 ISO/SAE Reserved P27A6 ISO/SAE Reserved P27A7 ISO/SAE Reserved

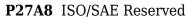



Codes P27A9 ISO/SAE Reserved **P27AA** ISO/SAE Reserved P27AB ISO/SAE Reserved P27AC ISO/SAE Reserved P27AD ISO/SAE Reserved P27AE ISO/SAE Reserved **P27AF** ISO/SAE Reserved **P27B0** ISO/SAE Reserved P27B1 ISO/SAE Reserved P27B2 ISO/SAE Reserved P27B3 ISO/SAE Reserved P27B4 ISO/SAE Reserved P27B5 ISO/SAE Reserved P27B6 ISO/SAE Reserved P27B7 ISO/SAE Reserved P27B8 ISO/SAE Reserved P27B9 ISO/SAE Reserved **P27BA** ISO/SAE Reserved P27BB ISO/SAE Reserved **P27BC** ISO/SAE Reserved P27BD ISO/SAE Reserved P27BE ISO/SAE Reserved P27BF ISO/SAE Reserved P27C0 ISO/SAE Reserved P27C1 ISO/SAE Reserved P27C2 ISO/SAE Reserved P27C3 ISO/SAE Reserved P27C4 ISO/SAE Reserved P27C5 ISO/SAE Reserved P27C6 ISO/SAE Reserved P27C7 ISO/SAE Reserved P27C8 ISO/SAE Reserved P27C9 ISO/SAE Reserved P27CA ISO/SAE Reserved P27CB ISO/SAE Reserved P27CC ISO/SAE Reserved P27CD ISO/SAE Reserved P27CE ISO/SAE Reserved P27CF ISO/SAE Reserved P27D0 ISO/SAE Reserved P27D1 ISO/SAE Reserved P27D2 ISO/SAE Reserved P27D3 ISO/SAE Reserved P27D4 ISO/SAE Reserved





Codes P27D5 ISO/SAE Reserved P27D6 ISO/SAE Reserved P27D7 ISO/SAE Reserved P27D8 ISO/SAE Reserved P27D9 ISO/SAE Reserved P27DA ISO/SAE Reserved P27DB ISO/SAE Reserved **P27DC** ISO/SAE Reserved P27DD ISO/SAE Reserved **P27DE** ISO/SAE Reserved P27DF ISO/SAE Reserved P27E0 ISO/SAE Reserved P27E1 ISO/SAE Reserved P27E2 ISO/SAE Reserved P27E3 ISO/SAE Reserved P27E4 ISO/SAE Reserved P27E5 ISO/SAE Reserved P27E6 ISO/SAE Reserved P27E7 ISO/SAE Reserved P27E8 ISO/SAE Reserved P27E9 ISO/SAE Reserved **P27EA** ISO/SAE Reserved P27EB ISO/SAE Reserved **P27EC** ISO/SAE Reserved P27ED ISO/SAE Reserved **P27EE** ISO/SAE Reserved P27EF ISO/SAE Reserved P27F0 ISO/SAE Reserved P27F1 ISO/SAE Reserved P27F2 ISO/SAE Reserved P27F3 ISO/SAE Reserved P27F4 ISO/SAE Reserved P27F5 ISO/SAE Reserved P27F6 ISO/SAE Reserved P27F7 ISO/SAE Reserved P27F8 ISO/SAE Reserved P27F9 ISO/SAE Reserved P27FA ISO/SAE Reserved P27FB ISO/SAE Reserved P27FC ISO/SAE Reserved P27FD ISO/SAE Reserved **P27FE** ISO/SAE Reserved P27FF ISO/SAE Reserved P2800 Transmission Range Sensor "B" Circuit Malfunction (PRNDL input)

Definition

DBDCodeX

Codes Definition P2801 Transmission Range Sensor "B" Circuit Range/Performance P2802 Transmission Range Sensor "B" Circuit Low P2803 Transmission Range Sensor "B" Circuit High P2804 Transmission Range Sensor "B" Circuit High P2805 Transmission Range Sensor "A"/"B" Correlation P2806 Transmission Range Sensor Alignment **P2807** Pressure Control Solenoid G Malfunction **P2808** Pressure Control Solenoid G Performance Or Stuck Off P2809 Pressure Control Solenoid G Stuck On P280A Transmission Range Sensor "A" Circuit Not Learned P280B Transmission Range Sensor "B" Circuit Not Learned **P280C** ISO/SAE Reserved P280D ISO/SAE Reserved P280E ISO/SAE Reserved P280F ISO/SAE Reserved **P2810** Pressure Control Solenoid G Electrical P2811 Pressure Control Solenoid G Intermittent P2812 Pressure Control Solenoid G Control Circuit/Open P2813 Pressure Control Solenoid G Control Circuit Range/Performance P2814 Pressure Control Solenoid G Control Circuit Low P2815 Pressure Control Solenoid G Control Circuit High P2816 Pressure Control Solenoid H Malfunction **P2817** Pressure Control Solenoid H Performance Or Stuck Off P2818 Pressure Control Solenoid H Stuck On **P2819** Pressure Control Solenoid H Electrical **P281A** Pressure Control Solenoid H Intermittent P281B Pressure Control Solenoid H Control Circuit/Open **P281C** Pressure Control Solenoid H Control Circuit Range/Performance **P281D** Pressure Control Solenoid H Control Circuit Low **P281E** Pressure Control Solenoid H Control Circuit High **P281F** Pressure Control Solenoid J Malfunction P2820 Pressure Control Solenoid J Performance Or Stuck Off P2821 Pressure Control Solenoid J Stuck On P2822 Pressure Control Solenoid J Electrical P2823 Pressure Control Solenoid J Intermittent P2824 Pressure Control Solenoid J Control Circuit/Open P2825 Pressure Control Solenoid J Control Circuit Range/Performance P2826 Pressure Control Solenoid J Control Circuit Low P2827 Pressure Control Solenoid J Control Circuit High P2828 Pressure Control Solenoid K Malfunction **P2829** Pressure Control Solenoid K Performance Or Stuck Off P282A Pressure Control Solenoid K Stuck On **P282B** Pressure Control Solenoid K Electrical **P282C** Pressure Control Solenoid K Intermittent



Codes Definition P282D Pressure Control Solenoid K Control Circuit/Open **P282E** Pressure Control Solenoid K Control Circuit Range/Performance P282F Pressure Control Solenoid K Control Circuit Low P2830 Pressure Control Solenoid K Control Circuit High P2831 Shift Fork "A" Position Circuit P2832 Shift Fork "A" Position Circuit Range/Performance P2833 Shift Fork "A" Position Circuit Low **P2834** Shift Fork "A" Position Circuit High P2835 Shift Fork "A" Position Circuit Intermittent P2836 Shift Fork "B" Position Circuit P2837 Shift Fork "B" Position Circuit Range/Performance P2838 Shift Fork "B" Position Circuit Low P2839 Shift Fork "B" Position Circuit High P283A Shift Fork "B" Position Circuit Intermittent P283B Shift Fork "C" Position Circuit P283C Shift Fork "C" Position Circuit Range/Performance P283D Shift Fork "C" Position Circuit Low **P283E** Shift Fork "C" Position Circuit High P283F Shift Fork "C" Position Circuit Intermittent P2840 Shift Fork "D" Position Circuit **P2841** Shift Fork "D" Position Circuit Range/Performance P2842 Shift Fork "D" Position Circuit Low P2843 Shift Fork "D" Position Circuit High **P2844** Shift Fork "D" Position Circuit Intermittent P2845 Shift Fork "A" Position Sensor Incorrect Neutral Position Indicated P2846 Shift Fork "B" Position Sensor Incorrect Neutral Position Indicated P2847 Shift Fork "C" Position Sensor Incorrect Neutral Position Indicated P2848 Shift Fork "D" Position Sensor Incorrect Neutral Position Indicated P2849 Shift Fork "A" Stuck P284A Shift Fork "B" Stucke P284B Shift Fork "C" Stuck **P284C** Shift Fork "D" Stuck P284D Shift Fork "A" Unrequested Movement P284E Shift Fork "B" Unrequested Movement P284F Shift Fork "C" Unrequested Movement P2850 Shift Fork "D" Unrequested Movement P2851 Shift Fork Position Sensor "A"/"B" Correlation P2852 Shift Fork Position Sensor "C"/"D" Correlation P2853 Clutch "A" Pressure Discharge Performance **P2854** Clutch "B" Pressure Discharge Performance P2855 Clutch "A" Pressure Charge Performance P2856 Clutch "B" Pressure Charge Performance **P2857** Clutch "A" Pressure Engagement Performance **P2858** Clutch "B" Pressure Engagement Performance



Codes Definition P2859 Clutch "A" Pressure Disengagement Performance **P285A** Clutch "B" Pressure Disengagement Performance P285B ISO/SAE Reserved P285C ISO/SAE Reserved P285D ISO/SAE Reserved P285E ISO/SAE Reserved P285F ISO/SAE Reserved P2860 ISO/SAE Reserved P2861 ISO/SAE Reserved P2862 ISO/SAE Reserved P2863 ISO/SAE Reserved P2864 ISO/SAE Reserved P2865 ISO/SAE Reserved P2866 ISO/SAE Reserved P2867 ISO/SAE Reserved P2868 ISO/SAE Reserved P2869 ISO/SAE Reserved P286A ISO/SAE Reserved P286B ISO/SAE Reserved P286C ISO/SAE Reserved P286D ISO/SAE Reserved P286E ISO/SAE Reserved P286F ISO/SAE Reserved P2870 ISO/SAE Reserved P2871 ISO/SAE Reserved P2872 ISO/SAE Reserved P2873 ISO/SAE Reserved P2874 ISO/SAE Reserved P2875 ISO/SAE Reserved P2876 ISO/SAE Reserved P2877 ISO/SAE Reserved P2878 ISO/SAE Reserved P2879 ISO/SAE Reserved P287A ISO/SAE Reserved P287B ISO/SAE Reserved P287C ISO/SAE Reserved P287D ISO/SAE Reserved P287E ISO/SAE Reserved P287F ISO/SAE Reserved P2880 ISO/SAE Reserved P2881 ISO/SAE Reserved P2882 ISO/SAE Reserved P2883 ISO/SAE Reserved P2884 ISO/SAE Reserved



Codes P2885 ISO/SAE Reserved P2886 ISO/SAE Reserved P2887 ISO/SAE Reserved P2888 ISO/SAE Reserved P2889 ISO/SAE Reserved P288A ISO/SAE Reserved P288B ISO/SAE Reserved **P288C** ISO/SAE Reserved P288D ISO/SAE Reserved **P288E** ISO/SAE Reserved P288F ISO/SAE Reserved P2890 ISO/SAE Reserved P2891 ISO/SAE Reserved P2892 ISO/SAE Reserved P2893 ISO/SAE Reserved P2894 ISO/SAE Reserved P2895 ISO/SAE Reserved P2896 ISO/SAE Reserved P2897 ISO/SAE Reserved P2898 ISO/SAE Reserved P2899 ISO/SAE Reserved P289A ISO/SAE Reserved P289B ISO/SAE Reserved P289C ISO/SAE Reserved P289D ISO/SAE Reserved P289E ISO/SAE Reserved P289F ISO/SAE Reserved P28A0 ISO/SAE Reserved P28A1 ISO/SAE Reserved P28A2 ISO/SAE Reserved P28A3 ISO/SAE Reserved P28A4 ISO/SAE Reserved P28A5 ISO/SAE Reserved P28A6 ISO/SAE Reserved P28A7 ISO/SAE Reserved P28A8 ISO/SAE Reserved P28A9 ISO/SAE Reserved P28AA ISO/SAE Reserved P28AB ISO/SAE Reserved P28AC ISO/SAE Reserved P28AD ISO/SAE Reserved **P28AE** ISO/SAE Reserved **P28AF** ISO/SAE Reserved P28B0 ISO/SAE Reserved

Codes P28B1 ISO/SAE Reserved **P28B2** ISO/SAE Reserved P28B3 ISO/SAE Reserved P28B4 ISO/SAE Reserved P28B5 ISO/SAE Reserved P28B6 ISO/SAE Reserved P28B7 ISO/SAE Reserved P28B8 ISO/SAE Reserved P28B9 ISO/SAE Reserved **P28BA** ISO/SAE Reserved P28BB ISO/SAE Reserved P28BC ISO/SAE Reserved P28BD ISO/SAE Reserved P28BE ISO/SAE Reserved P28BF ISO/SAE Reserved P28C0 ISO/SAE Reserved P28C1 ISO/SAE Reserved P28C2 ISO/SAE Reserved P28C3 ISO/SAE Reserved **P28C4** ISO/SAE Reserved P28C5 ISO/SAE Reserved P28C6 ISO/SAE Reserved P28C7 ISO/SAE Reserved P28C8 ISO/SAE Reserved P28C9 ISO/SAE Reserved P28CA ISO/SAE Reserved P28CB ISO/SAE Reserved **P28CC** ISO/SAE Reserved P28CD ISO/SAE Reserved **P28CE** ISO/SAE Reserved **P28CF** ISO/SAE Reserved P28D0 ISO/SAE Reserved P28D1 ISO/SAE Reserved P28D2 ISO/SAE Reserved P28D3 ISO/SAE Reserved P28D4 ISO/SAE Reserved P28D5 ISO/SAE Reserved P28D6 ISO/SAE Reserved P28D7 ISO/SAE Reserved P28D8 ISO/SAE Reserved P28D9 ISO/SAE Reserved P28DA ISO/SAE Reserved **P28DB** ISO/SAE Reserved P28DC ISO/SAE Reserved

Codes **P28DD** ISO/SAE Reserved **P28DE** ISO/SAE Reserved P28DF ISO/SAE Reserved **P28E0** ISO/SAE Reserved P28E1 ISO/SAE Reserved **P28E2** ISO/SAE Reserved P28E3 ISO/SAE Reserved **P28E4** ISO/SAE Reserved P28E5 ISO/SAE Reserved **P28E6** ISO/SAE Reserved P28E7 ISO/SAE Reserved P28E8 ISO/SAE Reserved P28E9 ISO/SAE Reserved P28EA ISO/SAE Reserved P28EB ISO/SAE Reserved **P28EC** ISO/SAE Reserved P28ED ISO/SAE Reserved **P28EE** ISO/SAE Reserved P28EF ISO/SAE Reserved **P28F0** ISO/SAE Reserved P28F1 ISO/SAE Reserved P28F2 ISO/SAE Reserved P28F3 ISO/SAE Reserved P28F4 ISO/SAE Reserved P28F5 ISO/SAE Reserved P28F6 ISO/SAE Reserved P28F7 ISO/SAE Reserved P28F8 ISO/SAE Reserved P28F9 ISO/SAE Reserved **P28FA** ISO/SAE Reserved P28FB ISO/SAE Reserved **P28FC** ISO/SAE Reserved P28FD ISO/SAE Reserved P28FE ISO/SAE Reserved P28FF ISO/SAE Reserved P2900 ISO/SAE Reserved P2A00 O2 Sensor Circuit Range/Performance Bank 1 Sensor 1 P2A01 O2 Sensor Circuit Range/Performance Bank 1 Sensor 2 P2A02 O2 Sensor Circuit Range/Performance Bank 1 Sensor 3 P2A03 O2 Sensor Circuit Range/Performance Bank 2 Sensor 1

P2A04 O2 Sensor Circuit Range/Performance Bank 2 Sensor 2 P2A05 O2 Sensor Circuit Range/Performance Bank 2 Sensor 3

P2A06 O2 Sensor Negative Voltage Bank 1 Sensor 1 P2A07 O2 Sensor Negative Voltage Bank 1 Sensor 2



Codes Definition P2A08 O2 Sensor Negative Voltage Bank 1 Sensor 3 **P2A09** O2 Sensor Negative Voltage Bank 2 Sensor 1 P2A0A ISO/SAE Reserved P2A0B ISO/SAE Reserved P2A0C ISO/SAE Reserved P2A0D ISO/SAE Reserved **P2A0E** ISO/SAE Reserved P2A0F ISO/SAE Reserved **P2A10** O2 Sensor Negative Voltage Bank 2 Sensor 2 P2A11 O2 Sensor Negative Voltage Bank 2 Sensor 3 P2A12 ISO/SAE Reserved P2A13 ISO/SAE Reserved P2A14 ISO/SAE Reserved P2A15 ISO/SAE Reserved P2A16 ISO/SAE Reserved P2A17 ISO/SAE Reserved P2A18 ISO/SAE Reserved P2A19 ISO/SAE Reserved P2A1A ISO/SAE Reserved P2A1B ISO/SAE Reserved P2A1C ISO/SAE Reserved P2A1D ISO/SAE Reserved P2A1E ISO/SAE Reserved **P2A1F** ISO/SAE Reserved P2A20 ISO/SAE Reserved P2A21 ISO/SAE Reserved P2A22 ISO/SAE Reserved P2A23 ISO/SAE Reserved P2A24 ISO/SAE Reserved P2A25 ISO/SAE Reserved P2A26 ISO/SAE Reserved P2A27 ISO/SAE Reserved P2A28 ISO/SAE Reserved P2A29 ISO/SAE Reserved P2A2A ISO/SAE Reserved P2A2B ISO/SAE Reserved P2A2C ISO/SAE Reserved P2A2D ISO/SAE Reserved P2A2E ISO/SAE Reserved P2A2F ISO/SAE Reserved P2A30 ISO/SAE Reserved P2A31 ISO/SAE Reserved P2A32 ISO/SAE Reserved P2A33 ISO/SAE Reserved



Codes P2A34 ISO/SAE Reserved P2A35 ISO/SAE Reserved P2A36 ISO/SAE Reserved P2A37 ISO/SAE Reserved P2A38 ISO/SAE Reserved P2A39 ISO/SAE Reserved P2A3A ISO/SAE Reserved **P2A3B** ISO/SAE Reserved P2A3C ISO/SAE Reserved **P2A3D** ISO/SAE Reserved P2A3E ISO/SAE Reserved P2A3F ISO/SAE Reserved P2A40 ISO/SAE Reserved P2A41 ISO/SAE Reserved P2A42 ISO/SAE Reserved P2A43 ISO/SAE Reserved P2A44 ISO/SAE Reserved P2A45 ISO/SAE Reserved P2A46 ISO/SAE Reserved P2A47 ISO/SAE Reserved P2A48 ISO/SAE Reserved P2A49 ISO/SAE Reserved P2A4A ISO/SAE Reserved P2A4B ISO/SAE Reserved P2A4C ISO/SAE Reserved P2A4D ISO/SAE Reserved P2A4E ISO/SAE Reserved **P2A4F** ISO/SAE Reserved P2A50 ISO/SAE Reserved P2A51 ISO/SAE Reserved P2A52 ISO/SAE Reserved P2A53 ISO/SAE Reserved P2A54 ISO/SAE Reserved P2A55 ISO/SAE Reserved P2A56 ISO/SAE Reserved P2A57 ISO/SAE Reserved P2A58 ISO/SAE Reserved P2A59 ISO/SAE Reserved P2A5A ISO/SAE Reserved P2A5B ISO/SAE Reserved P2A5C ISO/SAE Reserved P2A5D ISO/SAE Reserved **P2A5E** ISO/SAE Reserved P2A5F ISO/SAE Reserved

### Definition

DBDCodeX

Codes P2A60 ISO/SAE Reserved P2A61 ISO/SAE Reserved P2A62 ISO/SAE Reserved P2A63 ISO/SAE Reserved P2A64 ISO/SAE Reserved P2A65 ISO/SAE Reserved P2A66 ISO/SAE Reserved P2A67 ISO/SAE Reserved P2A68 ISO/SAE Reserved P2A69 ISO/SAE Reserved P2A6A ISO/SAE Reserved P2A6B ISO/SAE Reserved P2A6C ISO/SAE Reserved P2A6D ISO/SAE Reserved P2A6E ISO/SAE Reserved P2A6F ISO/SAE Reserved P2A70 ISO/SAE Reserved P2A71 ISO/SAE Reserved P2A72 ISO/SAE Reserved P2A73 ISO/SAE Reserved P2A74 ISO/SAE Reserved P2A75 ISO/SAE Reserved P2A76 ISO/SAE Reserved P2A77 ISO/SAE Reserved P2A78 ISO/SAE Reserved P2A79 ISO/SAE Reserved P2A7A ISO/SAE Reserved P2A7B ISO/SAE Reserved P2A7C ISO/SAE Reserved P2A7D ISO/SAE Reserved P2A7E ISO/SAE Reserved **P2A7F** ISO/SAE Reserved P2A80 ISO/SAE Reserved P2A81 ISO/SAE Reserved P2A82 ISO/SAE Reserved P2A83 ISO/SAE Reserved P2A84 ISO/SAE Reserved P2A85 ISO/SAE Reserved P2A86 ISO/SAE Reserved P2A87 ISO/SAE Reserved P2A88 ISO/SAE Reserved P2A89 ISO/SAE Reserved P2A8A ISO/SAE Reserved P2A8B ISO/SAE Reserved

Codes P2A8C ISO/SAE Reserved **P2A8D** ISO/SAE Reserved P2A8E ISO/SAE Reserved P2A8F ISO/SAE Reserved P2A90 ISO/SAE Reserved P2A91 ISO/SAE Reserved P2A92 ISO/SAE Reserved P2A93 ISO/SAE Reserved P2A94 ISO/SAE Reserved P2A95 ISO/SAE Reserved P2A96 ISO/SAE Reserved P2A97 ISO/SAE Reserved P2A98 ISO/SAE Reserved P2A99 ISO/SAE Reserved P2A9A ISO/SAE Reserved P2A9B ISO/SAE Reserved P2A9C ISO/SAE Reserved **P2A9D** ISO/SAE Reserved P2A9E ISO/SAE Reserved **P2A9F** ISO/SAE Reserved P2AA0 ISO/SAE Reserved P2AA1 ISO/SAE Reserved P2AA2 ISO/SAE Reserved P2AA3 ISO/SAE Reserved P2AA4 ISO/SAE Reserved P2AA5 ISO/SAE Reserved P2AA6 ISO/SAE Reserved P2AA7 ISO/SAE Reserved P2AA8 ISO/SAE Reserved P2AA9 ISO/SAE Reserved P2AAA ISO/SAE Reserved **P2AAB** ISO/SAE Reserved P2AAC ISO/SAE Reserved P2AAD ISO/SAE Reserved **P2AAE** ISO/SAE Reserved **P2AAF** ISO/SAE Reserved P2AB0 ISO/SAE Reserved P2AB1 ISO/SAE Reserved P2AB2 ISO/SAE Reserved P2AB3 ISO/SAE Reserved P2AB4 ISO/SAE Reserved P2AB5 ISO/SAE Reserved P2AB6 ISO/SAE Reserved P2AB7 ISO/SAE Reserved





Codes P2AB8 ISO/SAE Reserved **P2AB9** ISO/SAE Reserved P2ABA ISO/SAE Reserved P2ABB ISO/SAE Reserved **P2ABC** ISO/SAE Reserved P2ABD ISO/SAE Reserved **P2ABE** ISO/SAE Reserved **P2ABF** ISO/SAE Reserved P2ACA ISO/SAE Reserved **P2ACB** ISO/SAE Reserved P2ACC ISO/SAE Reserved **P2ACD** ISO/SAE Reserved **P2ACE** ISO/SAE Reserved **P2ACF** ISO/SAE Reserved **P2ADA** ISO/SAE Reserved **P2ADB** ISO/SAE Reserved **P2ADC ISO/SAE Reserved P2ADD** ISO/SAE Reserved **P2ADE** ISO/SAE Reserved **P2ADF** ISO/SAE Reserved **P2AEA** ISO/SAE Reserved **P2AEB** ISO/SAE Reserved **P2AEC** ISO/SAE Reserved **P2AED** ISO/SAE Reserved **P2AEE** ISO/SAE Reserved **P2AEF** ISO/SAE Reserved P2AFA ISO/SAE Reserved **P2AFB** ISO/SAE Reserved **P2AFC** ISO/SAE Reserved **P2AFD** ISO/SAE Reserved **P2AFE** ISO/SAE Reserved **P2AFF** ISO/SAE Reserved P2B00 ISO/SAE Reserved P2B01 ISO/SAE Reserved P2B02 ISO/SAE Reserved P2B03 ISO/SAE Reserved P2B04 ISO/SAE Reserved P2B05 ISO/SAE Reserved P2B06 ISO/SAE Reserved P2B07 ISO/SAE Reserved P2B08 ISO/SAE Reserved P2B09 ISO/SAE Reserved **P2B0A** ISO/SAE Reserved P2B0B ISO/SAE Reserved



Codes P2B0C ISO/SAE Reserved **P2B0D** ISO/SAE Reserved P2B0E ISO/SAE Reserved **P2B0F** ISO/SAE Reserved P2B10 ISO/SAE Reserved P2B11 ISO/SAE Reserved P2B12 ISO/SAE Reserved P2B13 ISO/SAE Reserved P2B14 ISO/SAE Reserved **P2B15** ISO/SAE Reserved P2B16 ISO/SAE Reserved P2B17 ISO/SAE Reserved P2B18 ISO/SAE Reserved P2B19 ISO/SAE Reserved P2B1A ISO/SAE Reserved P2B1B ISO/SAE Reserved P2B1C ISO/SAE Reserved **P2B1D** ISO/SAE Reserved P2B1E ISO/SAE Reserved **P2B1F** ISO/SAE Reserved P2B20 ISO/SAE Reserved P2B21 ISO/SAE Reserved P2B22 ISO/SAE Reserved P2B23 ISO/SAE Reserved P2B24 ISO/SAE Reserved P2B25 ISO/SAE Reserved P2B26 ISO/SAE Reserved P2B27 ISO/SAE Reserved P2B28 ISO/SAE Reserved P2B29 ISO/SAE Reserved P2B2A ISO/SAE Reserved P2B2B ISO/SAE Reserved P2B2C ISO/SAE Reserved P2B2D ISO/SAE Reserved P2B2E ISO/SAE Reserved P2B2F ISO/SAE Reserved P2B30 ISO/SAE Reserved P2B31 ISO/SAE Reserved P2B32 ISO/SAE Reserved P2B33 ISO/SAE Reserved P2B34 ISO/SAE Reserved P2B35 ISO/SAE Reserved P2B36 ISO/SAE Reserved P2B37 ISO/SAE Reserved



Codes P2B38 ISO/SAE Reserved P2B39 ISO/SAE Reserved P2B3A ISO/SAE Reserved P2B3B ISO/SAE Reserved P2B3C ISO/SAE Reserved P2B3D ISO/SAE Reserved P2B3E ISO/SAE Reserved **P2B3F** ISO/SAE Reserved P2B40 ISO/SAE Reserved P2B41 ISO/SAE Reserved P2B42 ISO/SAE Reserved P2B43 ISO/SAE Reserved P2B44 ISO/SAE Reserved P2B45 ISO/SAE Reserved P2B46 ISO/SAE Reserved P2B47 ISO/SAE Reserved P2B48 ISO/SAE Reserved P2B49 ISO/SAE Reserved P2B4A ISO/SAE Reserved **P2B4B** ISO/SAE Reserved P2B4C ISO/SAE Reserved P2B4D ISO/SAE Reserved P2B4E ISO/SAE Reserved **P2B4F** ISO/SAE Reserved P2B50 ISO/SAE Reserved P2B51 ISO/SAE Reserved P2B52 ISO/SAE Reserved P2B53 ISO/SAE Reserved P2B54 ISO/SAE Reserved P2B55 ISO/SAE Reserved P2B56 ISO/SAE Reserved P2B57 ISO/SAE Reserved P2B58 ISO/SAE Reserved P2B59 ISO/SAE Reserved P2B5A ISO/SAE Reserved P2B5B ISO/SAE Reserved P2B5C ISO/SAE Reserved P2B5D ISO/SAE Reserved P2B5E ISO/SAE Reserved P2B5F ISO/SAE Reserved P2B60 ISO/SAE Reserved P2B61 ISO/SAE Reserved P2B62 ISO/SAE Reserved P2B63 ISO/SAE Reserved

Codes P2B64 ISO/SAE Reserved P2B65 ISO/SAE Reserved P2B66 ISO/SAE Reserved P2B67 ISO/SAE Reserved P2B68 ISO/SAE Reserved P2B69 ISO/SAE Reserved P2B6A ISO/SAE Reserved **P2B6B** ISO/SAE Reserved P2B6C ISO/SAE Reserved **P2B6D** ISO/SAE Reserved P2B6E ISO/SAE Reserved P2B6F ISO/SAE Reserved P2B70 ISO/SAE Reserved P2B71 ISO/SAE Reserved P2B72 ISO/SAE Reserved P2B73 ISO/SAE Reserved P2B74 ISO/SAE Reserved P2B75 ISO/SAE Reserved P2B76 ISO/SAE Reserved P2B77 ISO/SAE Reserved P2B78 ISO/SAE Reserved P2B79 ISO/SAE Reserved P2B7A ISO/SAE Reserved P2B7B ISO/SAE Reserved P2B7C ISO/SAE Reserved P2B7D ISO/SAE Reserved P2B7E ISO/SAE Reserved **P2B7F** ISO/SAE Reserved P2B80 ISO/SAE Reserved P2B81 ISO/SAE Reserved P2B82 ISO/SAE Reserved P2B83 ISO/SAE Reserved P2B84 ISO/SAE Reserved P2B85 ISO/SAE Reserved P2B86 ISO/SAE Reserved P2B87 ISO/SAE Reserved P2B88 ISO/SAE Reserved P2B89 ISO/SAE Reserved P2B8A ISO/SAE Reserved P2B8B ISO/SAE Reserved P2B8C ISO/SAE Reserved P2B8D ISO/SAE Reserved **P2B8E** ISO/SAE Reserved P2B8F ISO/SAE Reserved



Codes	Definition
P2B90 ISO/SAE Reserved	l
P2B91 ISO/SAE Reserved	l
P2B92 ISO/SAE Reserved	l
P2B93 ISO/SAE Reserved	l
P2B94 ISO/SAE Reserved	l
P2B95 ISO/SAE Reserved	l
P2B96 ISO/SAE Reserved	l
P2B97 ISO/SAE Reserved	l
P2B98 ISO/SAE Reserved	l
P2B99 ISO/SAE Reserved	
P2B9A ISO/SAE Reserved	
<b>P2B9B</b> ISO/SAE Reserved	
P2B9C ISO/SAE Reserved	
P2B9D ISO/SAE Reserved	
P2B9E ISO/SAE Reserved	
P2B9F ISO/SAE Reserved	
P2BA0 ISO/SAE Reserved	
P2BA1 ISO/SAE Reserved	
P2BA2 ISO/SAE Reserved	
P2BA3 ISO/SAE Reserved	
P2BA4 ISO/SAE Reserved	
P2BA5 ISO/SAE Reserved P2BA6 ISO/SAE Reserved	
P2BA0 130/3AE Reserved P2BA7 NOx Exceedence -	
	Interruption of Reagent Dosing Activity
	Insufficient Reagent Quality
	Low Reagent Consumption
P2BAB NOx Exceedance -	
P2BAC NOx Exceedance -	
P2BAD NOx Exceedence -	Root Cause Unknown
P2BAE NOx Exceedence -	NOx control monitoring system
<b>P2BAF</b> ISO/SAE Reserved	l
P2BB0 ISO/SAE Reserved	l
P2BB1 ISO/SAE Reserved	l
P2BB2 ISO/SAE Reserved	l
P2BB3 ISO/SAE Reserved	
P2BB4 ISO/SAE Reserved	
P2BB5 ISO/SAE Reserved	
P2BB6 ISO/SAE Reserved	
P2BB7 ISO/SAE Reserved	
P2BB8 ISO/SAE Reserved	
P2BB9 ISO/SAE Reserved	
P2BBA ISO/SAE Reserved	
<b>P2BBB</b> ISO/SAE Reserved	l



Codes **P2BBC** ISO/SAE Reserved **P2BBD** ISO/SAE Reserved **P2BBE** ISO/SAE Reserved **P2BBF** ISO/SAE Reserved P2BC0 ISO/SAE Reserved P2BC1 ISO/SAE Reserved P2BC2 ISO/SAE Reserved **P2BC3** ISO/SAE Reserved P2BC4 ISO/SAE Reserved P2BC5 ISO/SAE Reserved P2BC6 ISO/SAE Reserved P2BC7 ISO/SAE Reserved P2BC8 ISO/SAE Reserved P2BC9 ISO/SAE Reserved **P2BCA** ISO/SAE Reserved **P2BCB** ISO/SAE Reserved P2BCC ISO/SAE Reserved **P2BCD** ISO/SAE Reserved **P2BCE** ISO/SAE Reserved **P2BCF** ISO/SAE Reserved P2BD0 ISO/SAE Reserved P2BD1 ISO/SAE Reserved P2BD2 ISO/SAE Reserved P2BD3 ISO/SAE Reserved P2BD4 ISO/SAE Reserved P2BD5 ISO/SAE Reserved P2BD6 ISO/SAE Reserved P2BD7 ISO/SAE Reserved P2BD8 ISO/SAE Reserved **P2BD9** ISO/SAE Reserved **P2BDA** ISO/SAE Reserved **P2BDB** ISO/SAE Reserved P2BDC ISO/SAE Reserved **P2BDD** ISO/SAE Reserved **P2BDE** ISO/SAE Reserved **P2BDF** ISO/SAE Reserved P2BE0 ISO/SAE Reserved P2BE1 ISO/SAE Reserved P2BE2 ISO/SAE Reserved P2BE3 ISO/SAE Reserved P2BE4 ISO/SAE Reserved P2BE5 ISO/SAE Reserved **P2BE6** ISO/SAE Reserved P2BE7 ISO/SAE Reserved



Codes Definition P2BE8 ISO/SAE Reserved **P2BE9** ISO/SAE Reserved **P2BEA** ISO/SAE Reserved **P2BEB** ISO/SAE Reserved **P2BEC** ISO/SAE Reserved **P2BED** ISO/SAE Reserved **P2BEE** ISO/SAE Reserved **P2BEF** ISO/SAE Reserved P2BF0 ISO/SAE Reserved **P2BF1** ISO/SAE Reserved P2BF2 ISO/SAE Reserved P2BF3 ISO/SAE Reserved P2BF4 ISO/SAE Reserved P2BF5 ISO/SAE Reserved P2BF6 ISO/SAE Reserved P2BF7 ISO/SAE Reserved P2BF8 ISO/SAE Reserved P2BF9 ISO/SAE Reserved **P2BFA** ISO/SAE Reserved **P2BFB** ISO/SAE Reserved **P2BFC** ISO/SAE Reserved **P2BFD** ISO/SAE Reserved **P2BFE** ISO/SAE Reserved **P2BFF** ISO/SAE Reserved P2C00 ISO/SAE Reserved P2D00 ISO/SAE Reserved P2E00 ISO/SAE Reserved **P2F00** ISO/SAE Reserved **P3400** Cylinder Deactivation System Bank 1 P3401 Cylinder 1 Deactivation/Intake Valve Control Circuit/Open P3402 Cylinder 1 Deactivation/Intake Valve Control Circuit Performance P3403 Cylinder 1 Deactivation/Intake Valve Control Circuit Low P3404 Cylinder 1 Deactivation/Intake Valve Control Circuit High P3405 Cylinder 1 Exhaust Valve Control Circuit/Open P3406 Cylinder 1 Exhaust Valve Control Circuit Performance P3407 Cylinder 1 Exhaust Valve Control Circuit Low P3408 Cylinder 1 Exhaust Valve Control Circuit High P3409 Cylinder 2 Deactivation/Intake Valve Control Circuit/Open P340A ISO/SAE Reserved P340B ISO/SAE Reserved P340C ISO/SAE Reserved P340D ISO/SAE Reserved **P340E** ISO/SAE Reserved

P340F ISO/SAE Reserved



Codes Definition P3410 Cylinder 2 Deactivation/Intake Valve Control Circuit Performance P3411 Cylinder 2 Deactivation/Intake Valve Control Circuit Low P3412 Cylinder 2 Deactivation/Intake Valve Control Circuit High P3413 Cylinder 2 Exhaust Valve Control Circuit/Open P3414 Cylinder 2 Exhaust Valve Control Circuit Performance P3415 Cylinder 2 Exhaust Valve Control Circuit Low **P3416** Cylinder 2 Exhaust Valve Control Circuit High P3417 Cylinder 3 Deactivation/Intake Valve Control Circuit/Open P3418 Cylinder 3 Deactivation/Intake Valve Control Circuit Performance P3419 Cylinder 3 Deactivation/Intake Valve Control Circuit Low P341A ISO/SAE Reserved P341B ISO/SAE Reserved P341C ISO/SAE Reserved P341D ISO/SAE Reserved P341E ISO/SAE Reserved **P341F** ISO/SAE Reserved P3420 Cylinder 3 Deactivation/Intake Valve Control Circuit High P3421 Cylinder 3 Exhaust Valve Control Circuit/Open P3422 Cylinder 3 Exhaust Valve Control Circuit Performance P3423 Cylinder 3 Exhaust Valve Control Circuit Low P3424 Cylinder 3 Exhaust Valve Control Circuit High P3425 Cylinder 4 Deactivation/Intake Valve Control Circuit/Open P3426 Cylinder 4 Deactivation/Intake Valve Control Circuit Performance P3427 Cylinder 4 Deactivation/Intake Valve Control Circuit Low P3428 Cylinder 4 Deactivation/Intake Valve Control Circuit High P3429 Cylinder 4 Exhaust Valve Control Circuit/Open P342A ISO/SAE Reserved P342B ISO/SAE Reserved P342C ISO/SAE Reserved P342D ISO/SAE Reserved **P342E** ISO/SAE Reserved P342F ISO/SAE Reserved P3430 Cylinder 4 Exhaust Valve Control Circuit Performance P3431 Cylinder 4 Exhaust Valve Control Circuit Low P3432 Cylinder 4 Exhaust Valve Control Circuit High P3433 Cylinder 5 Deactivation/Intake Valve Control Circuit/Open P3434 Cylinder 5 Deactivation/Intake Valve Control Circuit Performance P3435 Cylinder 5 Deactivation/Intake Valve Control Circuit Low P3436 Cylinder 5 Deactivation/Intake Valve Control Circuit High P3437 Cylinder 5 Exhaust Valve Control Circuit/Open P3438 Cylinder 5 Exhaust Valve Control Circuit Performance P3439 Cylinder 5 Exhaust Valve Control Circuit Low P343A ISO/SAE Reserved





Codes Definition P343C ISO/SAE Reserved P343D ISO/SAE Reserved P343E ISO/SAE Reserved P343F ISO/SAE Reserved P3440 Cylinder 5 Exhaust Valve Control Circuit High P3441 Cylinder 6 Deactivation/Intake Valve Control Circuit/Open P3442 Cylinder 6 Deactivation/Intake Valve Control Circuit Performance P3443 Cylinder 6 Deactivation/Intake Valve Control Circuit Low P3444 Cylinder 6 Deactivation/Intake Valve Control Circuit High P3445 Cylinder 6 Exhaust Valve Control Circuit/Open P3446 Cylinder 6 Exhaust Valve Control Circuit Performance P3447 Cylinder 6 Exhaust Valve Control Circuit Low P3448 Cylinder 6 Exhaust Valve Control Circuit High P3449 Cylinder 7 Deactivation/Intake Valve Control Circuit/Open P344A ISO/SAE Reserved P344B ISO/SAE Reserved P344C ISO/SAE Reserved P344D ISO/SAE Reserved P344E ISO/SAE Reserved **P344F** ISO/SAE Reserved P3450 Cylinder 7 Deactivation/Intake Valve Control Circuit Performance P3451 Cylinder 7 Deactivation/Intake Valve Control Circuit Low P3452 Cylinder 7 Deactivation/Intake Valve Control Circuit High P3453 Cylinder 7 Exhaust Valve Control Circuit/Open P3454 Cylinder 7 Exhaust Valve Control Circuit Performance P3455 Cylinder 7 Exhaust Valve Control Circuit Low P3456 Cylinder 7 Exhaust Valve Control Circuit High P3457 Cylinder 8 Deactivation/Intake Valve Control Circuit/Open P3458 Cylinder 8 Deactivation/Intake Valve Control Circuit Performance P3459 Cylinder 8 Deactivation/Intake Valve Control Circuit Low P345A ISO/SAE Reserved P345B ISO/SAE Reserved P345C ISO/SAE Reserved P345D ISO/SAE Reserved P345E ISO/SAE Reserved **P345F** ISO/SAE Reserved P3460 Cylinder 8 Deactivation/Intake Valve Control Circuit High P3461 Cylinder 8 Exhaust Valve Control Circuit/Open P3462 Cylinder 8 Exhaust Valve Control Circuit Performance P3463 Cylinder 8 Exhaust Valve Control Circuit Low P3464 Cylinder 8 Exhaust Valve Control Circuit High P3465 Cylinder 9 Deactivation/Intake Valve Control Circuit/Open

- P3466 Cylinder 9 Deactivation/Intake Valve Control Circuit Performance
- P3467 Cylinder 9 Deactivation/Intake Valve Control Circuit Low



Codes Definition P3468 Cylinder 9 Deactivation/Intake Valve Control Circuit High P3469 Cylinder 9 Exhaust Valve Control Circuit/Open P346A ISO/SAE Reserved P346B ISO/SAE Reserved P346C ISO/SAE Reserved P346D ISO/SAE Reserved **P346E** ISO/SAE Reserved P346F ISO/SAE Reserved P3470 Cylinder 9 Exhaust Valve Control Circuit Performance P3471 Cylinder 9 Exhaust Valve Control Circuit Low P3472 Cylinder 9 Exhaust Valve Control Circuit High P3473 Cylinder 10 Deactivation/Intake Valve Control Circuit/Open P3474 Cylinder 10 Deactivation/Intake Valve Control Circuit Performance P3475 Cylinder 10 Deactivation/Intake Valve Control Circuit Low P3476 Cylinder 10 Deactivation/Intake Valve Control Circuit High P3477 Cylinder 10 Exhaust Valve Control Circuit/Open P3478 Cylinder 10 Exhaust Valve Control Circuit Performance P3479 Cylinder 10 Exhaust Valve Control Circuit Low P347A ISO/SAE Reserved P347B ISO/SAE Reserved P347C ISO/SAE Reserved P347D ISO/SAE Reserved P347E ISO/SAE Reserved P347F ISO/SAE Reserved P3480 Cylinder 10 Exhaust Valve Control Circuit High P3481 Cylinder 11 Deactivation/Intake Valve Control Circuit/Open P3482 Cylinder 11 Deactivation/Intake Valve Control Circuit Performance P3483 Cylinder 11 Deactivation/Intake Valve Control Circuit Low P3484 Cylinder 11 Deactivation/Intake Valve Control Circuit High P3485 Cylinder 11 Exhaust Valve Control Circuit/Open P3486 Cylinder 11 Exhaust Valve Control Circuit Performance P3487 Cylinder 11 Exhaust Valve Control Circuit Low P3488 Cylinder 11 Exhaust Valve Control Circuit High P3489 Cylinder 12 Deactivation/Intake Valve Control Circuit/Open P348A ISO/SAE Reserved P348B ISO/SAE Reserved P348C ISO/SAE Reserved P348D ISO/SAE Reserved P348E ISO/SAE Reserved P348F ISO/SAE Reserved P3490 Cylinder 12 Deactivation/Intake Valve Control Circuit Performance P3491 Cylinder 12 Deactivation/Intake Valve Control Circuit Low P3492 Cylinder 12 Deactivation/Intake Valve Control Circuit High P3493 Cylinder 12 Exhaust Valve Control Circuit/Open



Codes Definition P3494 Cylinder 12 Exhaust Valve Control Circuit Performance P3495 Cylinder 12 Exhaust Valve Control Circuit Low P3496 Cylinder 12 Exhaust Valve Control Circuit High P3497 Cylinder Deactivation System Bank 2 P3498 ISO/SAE Reserved P3499 ISO/SAE Reserved P349A ISO/SAE Reserved P349B ISO/SAE Reserved P349C ISO/SAE Reserved P349D ISO/SAE Reserved P349E ISO/SAE Reserved P349F ISO/SAE Reserved P34A0 ISO/SAE Reserved P34A1 ISO/SAE Reserved P34A2 ISO/SAE Reserved P34A3 ISO/SAE Reserved P34A4 ISO/SAE Reserved P34A5 ISO/SAE Reserved P34A6 ISO/SAE Reserved P34A7 ISO/SAE Reserved P34A8 ISO/SAE Reserved P34A9 ISO/SAE Reserved P34AA ISO/SAE Reserved P34AB ISO/SAE Reserved P34AC ISO/SAE Reserved P34AD ISO/SAE Reserved P34AE ISO/SAE Reserved **P34AF** ISO/SAE Reserved P34B0 ISO/SAE Reserved P34B1 ISO/SAE Reserved P34B2 ISO/SAE Reserved P34B3 ISO/SAE Reserved P34B4 ISO/SAE Reserved P34B5 ISO/SAE Reserved P34B6 ISO/SAE Reserved P34B7 ISO/SAE Reserved P34B8 ISO/SAE Reserved P34B9 ISO/SAE Reserved P34BA ISO/SAE Reserved P34BB ISO/SAE Reserved P34BC ISO/SAE Reserved P34BD ISO/SAE Reserved **P34BE** ISO/SAE Reserved P34BF ISO/SAE Reserved



Codes P34C0 ISO/SAE Reserved **P34C1** ISO/SAE Reserved P34C2 ISO/SAE Reserved P34C3 ISO/SAE Reserved P34C4 ISO/SAE Reserved P34C5 ISO/SAE Reserved P34C6 ISO/SAE Reserved P34C7 ISO/SAE Reserved P34C8 ISO/SAE Reserved **P34C9** ISO/SAE Reserved P34CA ISO/SAE Reserved P34CB ISO/SAE Reserved P34CC ISO/SAE Reserved P34CD ISO/SAE Reserved P34CE ISO/SAE Reserved P34CF ISO/SAE Reserved P34D0 ISO/SAE Reserved P34D1 ISO/SAE Reserved P34D2 ISO/SAE Reserved P34D3 ISO/SAE Reserved P34D4 ISO/SAE Reserved P34D5 ISO/SAE Reserved P34D6 ISO/SAE Reserved P34D7 ISO/SAE Reserved P34D8 ISO/SAE Reserved P34D9 ISO/SAE Reserved P34DA ISO/SAE Reserved P34DB ISO/SAE Reserved **P34DC** ISO/SAE Reserved P34DD ISO/SAE Reserved **P34DE** ISO/SAE Reserved **P34DF** ISO/SAE Reserved P34E0 ISO/SAE Reserved P34E1 ISO/SAE Reserved P34E2 ISO/SAE Reserved P34E3 ISO/SAE Reserved P34E4 ISO/SAE Reserved P34E5 ISO/SAE Reserved P34E6 ISO/SAE Reserved P34E7 ISO/SAE Reserved P34E8 ISO/SAE Reserved P34E9 ISO/SAE Reserved P34EA ISO/SAE Reserved P34EB ISO/SAE Reserved



Codes	
<b>P34EC</b>	ISO/SAE Reserved
P34ED	ISO/SAE Reserved
P34EE	ISO/SAE Reserved
P34EF	ISO/SAE Reserved
P34F0	ISO/SAE Reserved
P34F1	ISO/SAE Reserved
P34F2	ISO/SAE Reserved
P34F3	ISO/SAE Reserved
P34F4	ISO/SAE Reserved
P34F5	ISO/SAE Reserved
P34F6	ISO/SAE Reserved
P34F7	ISO/SAE Reserved
P34F8	ISO/SAE Reserved
P34F9	ISO/SAE Reserved
P34FA	ISO/SAE Reserved
P34FB	ISO/SAE Reserved
P34FC	ISO/SAE Reserved
P34FD	ISO/SAE Reserved
P34FE	ISO/SAE Reserved
P34FF	ISO/SAE Reserved
P3500	ISO/SAE Reserved
P3600	ISO/SAE Reserved
P3700	ISO/SAE Reserved
P3800	ISO/SAE Reserved
P3900	ISO/SAE Reserved
P3A00	ISO/SAE Reserved
P3B00	ISO/SAE Reserved
P3C00	ISO/SAE Reserved
P3D00	ISO/SAE Reserved
P3E00	ISO/SAE Reserved
<b>U0000</b>	ISO/SAE Reserved

# Definition

DBDCodeX